

21. Front Side Marker Light Bulb

A: REMOVAL

1) Disconnect the ground cable from battery. <Ref. to NT-5, BATTERY, NOTE, Note.>

NOTE:

For models other than STI model, disconnect the ground terminal from battery sensor.

2) Remove the battery. (When removing the side marker light bulb LH)

• Except for STI model: <Ref. to SC(w/o STI)-50, REMOVAL, Battery.>

• STI model: <Ref. to SC(STI)-21, REMOVAL, Battery.>

3) Remove the air cleaner case (front). (When removing the side marker light bulb RH)

• Except for STI model: <Ref. to IN(w/o STI)-9, REMOVAL, Air Cleaner Case.>

• STI model: <Ref. to IN(STI)-9, REMOVAL, Air Cleaner Case.>

4) Disconnect the connector and remove the front side marker light bulb. <Ref. to LI-26, SIDE MARKER LIGHT BULB, DISASSEMBLY, Headlight Assembly.>

B: INSTALLATION

1) Install the front side marker light bulb. <Ref. to LI-26, SIDE MARKER LIGHT BULB, ASSEMBLY, Headlight Assembly.>

2) Install the air cleaner case (front). (When the side marker light bulb RH is removed)

• Except for STI model: <Ref. to IN(w/o STI)-12, INSTALLATION, Air Cleaner Case.>

• STI model: <Ref. to IN(STI)-9, INSTALLATION, Air Cleaner Case.>

3) Remove the battery. (When the side marker light bulb LH is removed)

• Except for STI model: <Ref. to SC(w/o STI)-50, INSTALLATION, Battery.>

• STI model: <Ref. to SC(STI)-21, INSTALLATION, Battery.>

4) Connect the battery ground terminal. <Ref. to NT-5, BATTERY, NOTE, Note.>

NOTE:

For models other than STI model, connect the ground terminal to battery sensor.