

## 23. Front Fog Light Bulb


### A: REMOVAL

1) Disconnect the ground cable from battery. <Ref. to NT-5, BATTERY, NOTE, Note.>

NOTE:

For models other than STI model, disconnect the ground terminal from battery sensor.

2) Remove the clips, and turn over the mud guard - front.

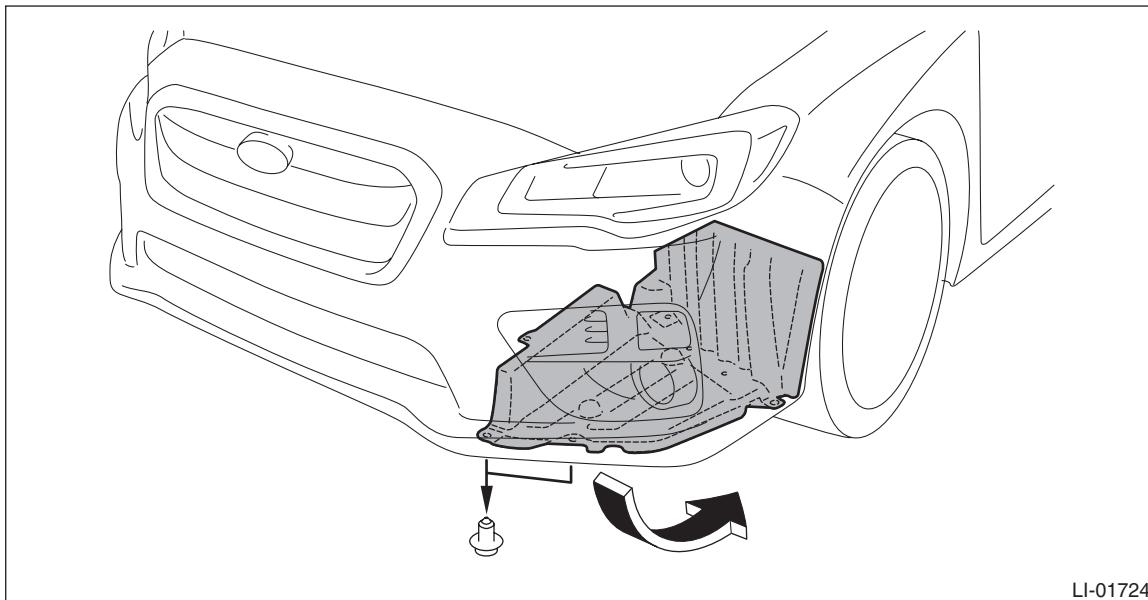


3) Disconnect the connector and remove the front fog light bulb. <Ref. to LI-42, DISASSEMBLY, Front Fog Light Assembly.>

## B: INSTALLATION

### CAUTION:

Install the mud guard - front so that the front end of the mud guard (b) comes outside the bumper face - front (a).

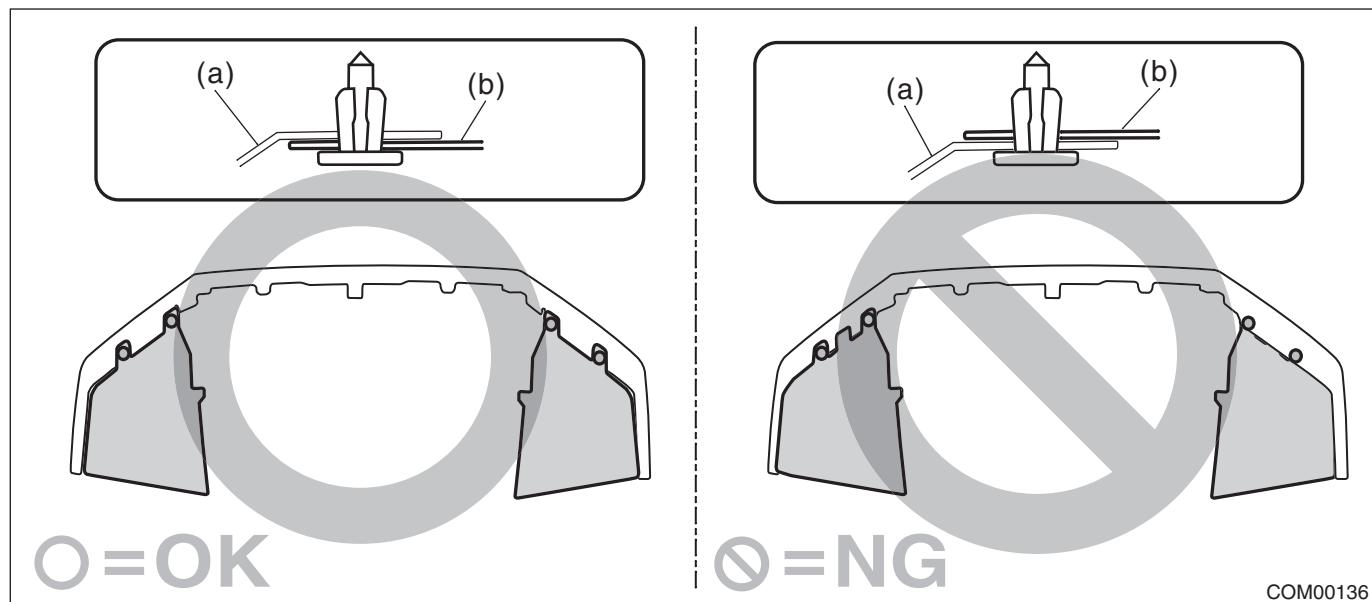

### CAUTION:

After connecting the connector, make sure that the bulb is locked securely.

- 1) Install the front fog light bulb. <Ref. to LI-42, ASSEMBLY, Front Fog Light Assembly.>
- 2) Install the mud guard - front.
- 3) Connect the battery ground terminal. <Ref. to NT-5, BATTERY, NOTE, Note.>

### NOTE:

For models other than STI model, connect the ground terminal to battery sensor.