

## 24. Side Turn Signal Light Assembly

### A: REMOVAL

- 1) Disconnect the ground cable from battery. <Ref. to NT-5, BATTERY, NOTE, Note.>

NOTE:

For models other than STI model, disconnect the ground terminal from battery sensor.

- 2) Remove the outer mirror assembly. <Ref. to GW-26, REMOVAL, Outer Mirror Assembly.>

- 3) Remove the side turn signal light assembly. <Ref. to GW-27, DISASSEMBLY, Outer Mirror Assembly.>

### B: INSTALLATION

- 1) Install the side turn signal light assembly.

- 2) Install the outer mirror assembly.

***Tightening torque:***

***7.5 N·m (0.8 kgf·m, 5.5 ft-lb)***

- 3) Connect the battery ground terminal. <Ref. to NT-5, BATTERY, NOTE, Note.>

NOTE:

For models other than STI model, connect the ground terminal to battery sensor.