

28. Rear Side Marker Light Bulb

A: REMOVAL

- 1) Disconnect the ground cable from battery. <Ref. to NT-5, BATTERY, NOTE, Note.>

NOTE:

For models other than STI model, disconnect the ground terminal from battery sensor.

- 2) Remove the trunk room trim. <Ref. to EI-95, REMOVAL, Trunk Room Trim.>

- 3) Remove the rear side marker light bulb. <Ref. to LI-50, SIDE MARKER LIGHT BULB, DISASSEMBLY, Rear Combination Light Assembly.>

B: INSTALLATION

- 1) Install the rear side marker light bulb. <Ref. to LI-51, SIDE MARKER LIGHT BULB, ASSEMBLY, Rear Combination Light Assembly.>

- 2) Install the trunk room trim.

- 3) Connect the battery ground terminal. <Ref. to NT-5, BATTERY, NOTE, Note.>

NOTE:

For models other than STI model, connect the ground terminal to battery sensor.