

30. License Plate Light

A: REMOVAL

- 1) Disconnect the ground cable from battery. <Ref. to NT-5, BATTERY, NOTE, Note.>

NOTE:

For models other than STI model, disconnect the ground terminal from battery sensor.


- 2) Remove the trim panel - trunk lid. <Ref. to EI-95, REMOVAL, Trunk Room Trim.>

- 3) Remove the garnish - trunk. <Ref. to EI-51, REMOVAL, Trunk Lid Garnish.>

- 4) Remove the license plate light.

(1) Release the claws and pull out the license plate light.


(2) Disconnect the connector, and remove the license plate light.

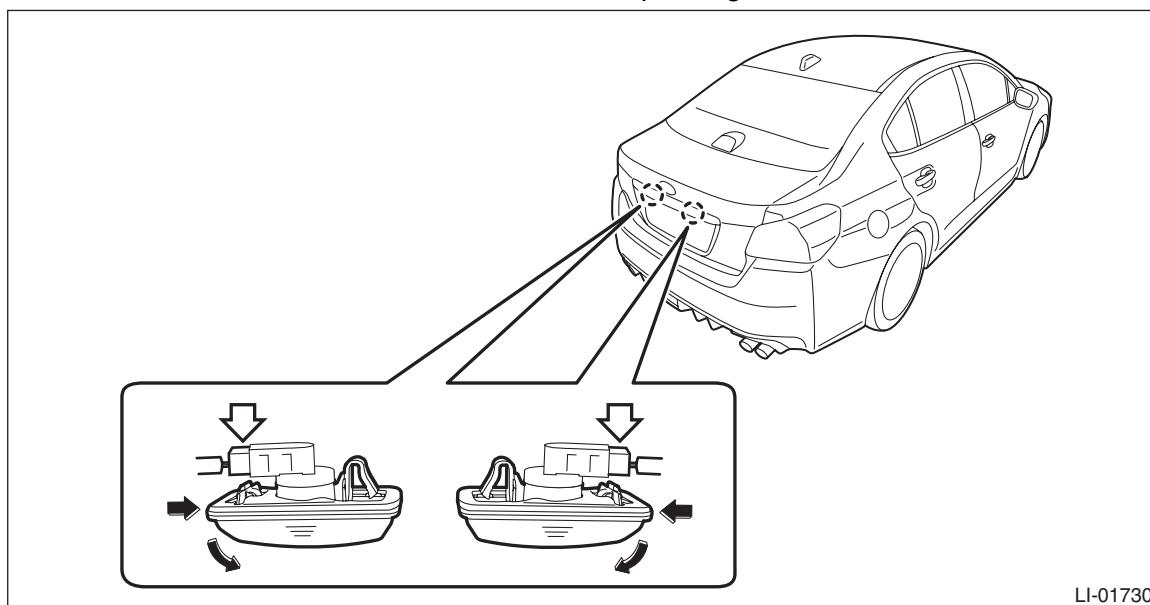

- 5) Rotate the bulb socket in the direction of arrow shown in the figure to remove the license plate light bulb.


CAUTION:

Use a dry clean cloth so that no grease or water adheres to the glass portion of the bulb.

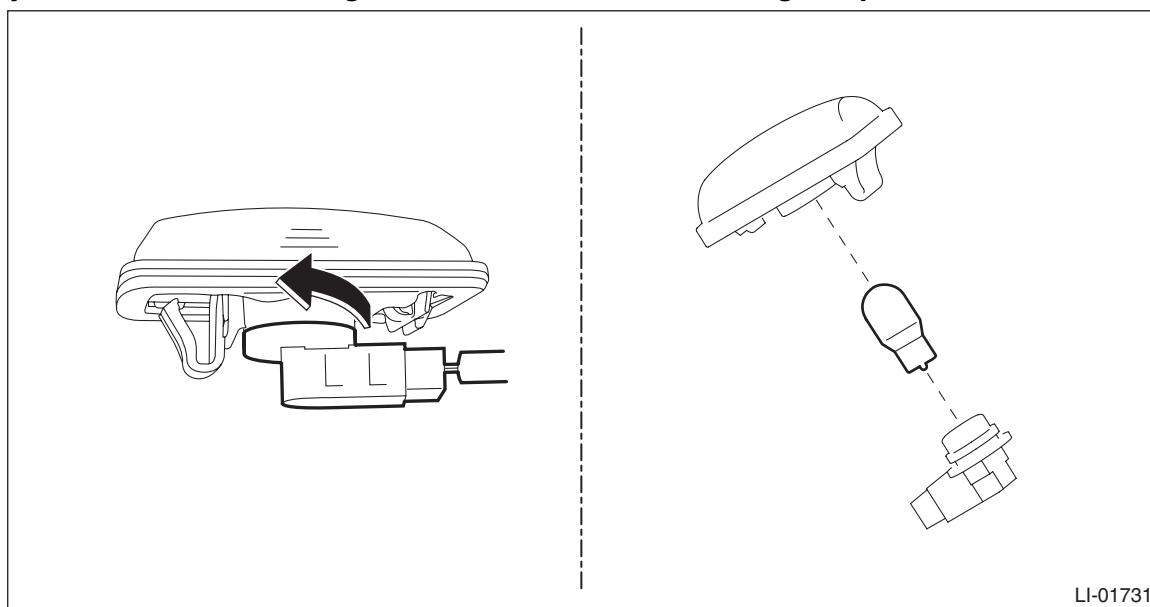

NOTE:

When removing the bulb only, remove the trim panel - trunk lid halfway, then remove the bulb socket and the bulb.

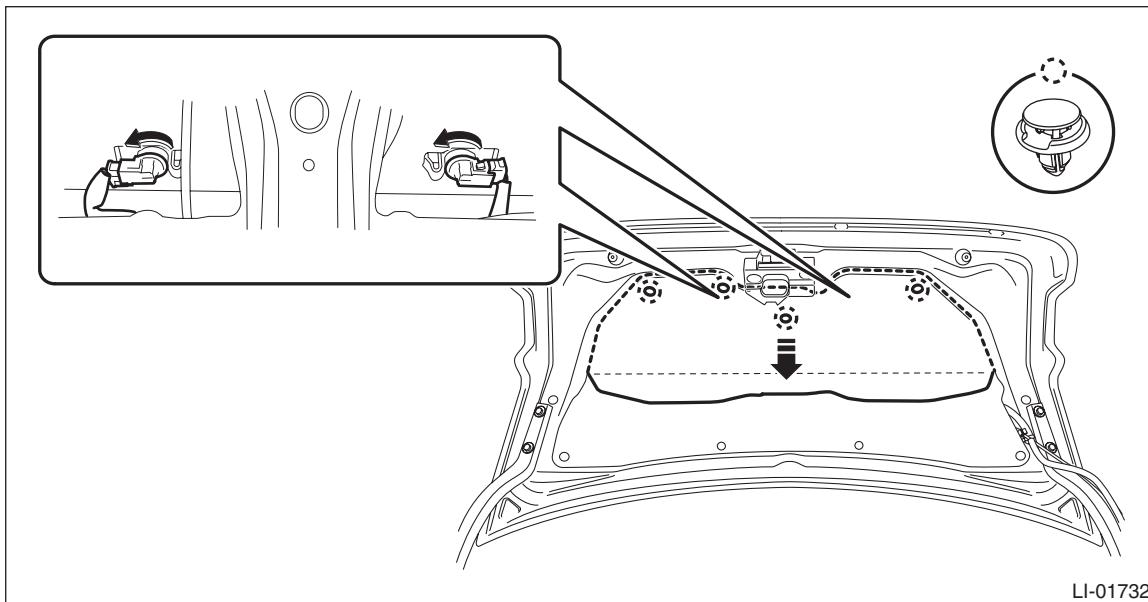

B: INSTALLATION

- 1) Install the license plate light bulb.

CAUTION:

Use a dry clean cloth so that no grease or water adheres to the glass portion of the bulb.

- 2) Install the license plate light.
- 3) Install the garnish - trunk. <Ref. to EI-51, INSTALLATION, Trunk Lid Garnish.>

Tightening torque:

4.5 N·m (0.5 kgf·m, 3.3 ft-lb)

- 4) Install the trim panel - trunk lid.
- 5) Connect the battery ground terminal. <Ref. to NT-5, BATTERY, NOTE, Note.>

NOTE:

For models other than STI model, connect the ground terminal to battery sensor.