

## 31. High-mounted Stop Light

### A: REMOVAL


- 1) Disconnect the ground cable from battery. <Ref. to NT-5, BATTERY, NOTE, Note.>

NOTE:


For models other than STI model, disconnect the ground terminal from battery sensor.

- 2) Remove the light assembly - high-mounted.

- (1) Disconnect the connector.

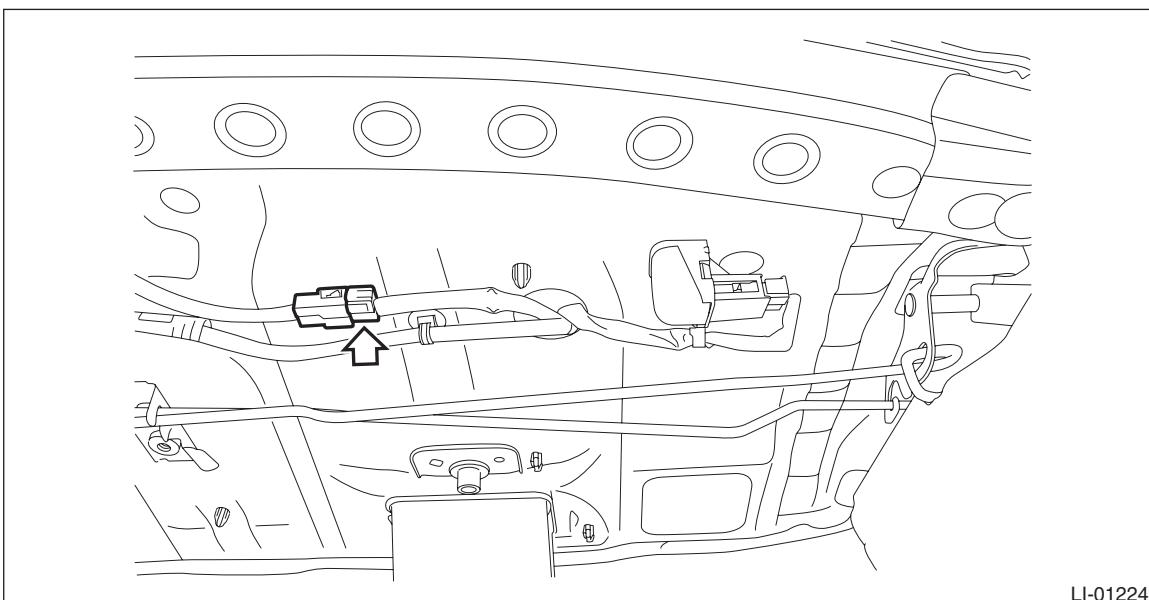

- (2) Release the claws and hooks, and remove the light assembly - high-mounted.

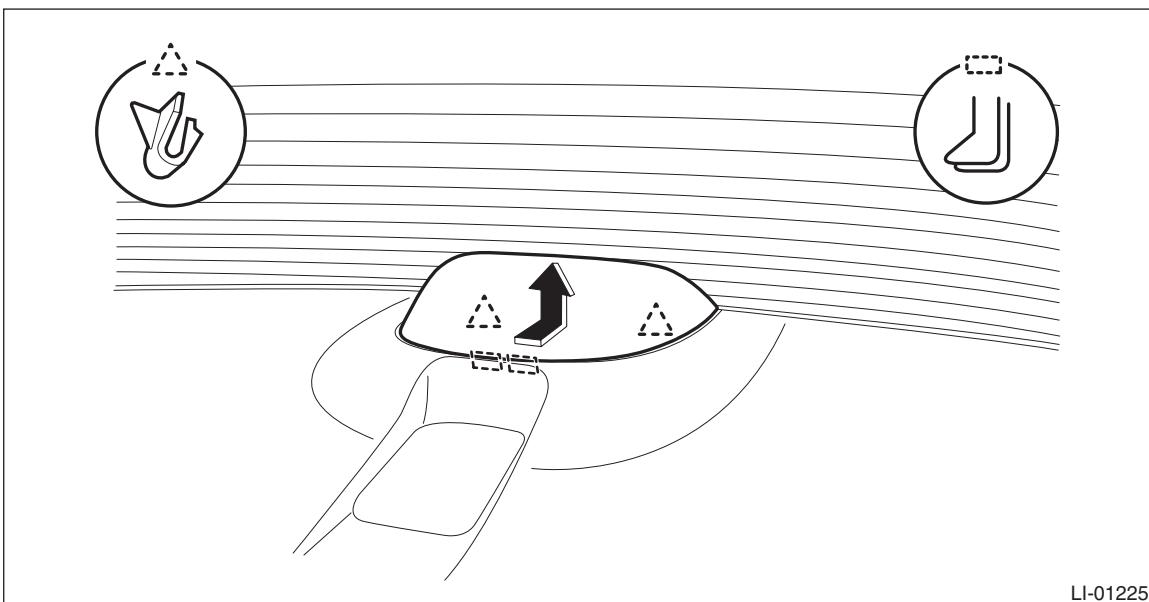

### B: INSTALLATION


- 1) Install the light assembly - high-mounted.
- 2) Connect the battery ground terminal. <Ref. to NT-5, BATTERY, NOTE, Note.>

NOTE:

For models other than STI model, connect the ground terminal to battery sensor.

### C: INSPECTION

- 1) Apply battery voltage between the connector terminals to check the lighting condition of the light.

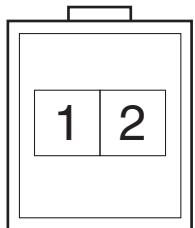

LI-01728

Terminal No.	Inspection conditions	Specification
1 (+) — 2 (-)	Apply battery voltage.	Light ON

- 2) Replace the light assembly - high-mounted if faulty is found in the inspection.