

## General Description

AUTO HEADLIGHT BEAM LEVELER SYSTEM (DIAGNOSTICS)

### 3. General Description

#### A: CAUTION

##### 1. AIRBAG SYSTEM

###### CAUTION:

- Do not use the electrical test equipment on the airbag system wiring harnesses and connector circuits.
- Be careful not to damage the airbag system wiring harness.

#### B: INSPECTION

##### 1. BASIC INSPECTION

Before performing the diagnosis, check the following items which may cause problems relating the wiper or light.

- 1) Check the battery.
- 2) Check the relay and fuse condition. <Ref. to LI-4, Relay and Fuse.>
- 3) Check the connecting condition of harness and harness connector.

##### 2. FUNCTION CHECK

###### • AUTO HEADLIGHT BEAM LEVELER SYSTEM

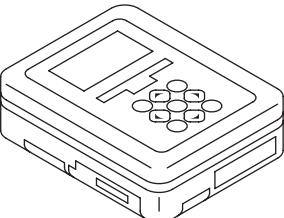
With the ignition switch ON and the lighting switch set at 2 (HEAD), change the vehicle posture while the vehicle is stopped. Check that the beam moves, when the vehicle condition is kept for three seconds or more.

###### • LED headlight system

1. Set the ignition switch to ON and the lighting switch to 2 (HEAD).
2. Check that the headlight (Lo) beam illuminates.
3. Check that the LED headlight indicator on the combination meter does not illuminate.

#### C: PREPARATION TOOL

##### 1. SPECIAL TOOL

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 ST1B022XU0	1B022XU0	SUBARU SELECT MONITOR III KIT	Used for troubleshooting the electrical system.

##### 2. GENERAL TOOL

TOOL NAME	REMARKS
Circuit tester	Used for measuring resistance, voltage and current.