

## **Inspection Mode**

AUTO HEADLIGHT BEAM LEVELER SYSTEM (DIAGNOSTICS)

---

### **9. Inspection Mode**

#### **A: PROCEDURE**

- 1) Turn the ignition switch to ON and wait for 10 seconds or more with the lighting switch in 2 (HEAD).
- 2) Read the DTC and check that the DTC is not displayed.

NOTE:

If the DTC is displayed on the screen, the trouble is still present. Perform the diagnosis according to DTC.