

3. Wiper and Washer System

A: WIRING DIAGRAM

1. WIPER AND WASHER (FRONT)

Refer to "Front Wiper and Washer System" in the wiring diagram. <Ref. to WI-242, WIRING DIAGRAM, Front Wiper and Washer System.>

B: INSPECTION

Symptoms	Repair order
Wiper and washers do not operate.	1. Wiper fuse 2. Combination switch 3. Motor assembly - wiper 4. Wiring harness
Wipers do not operate in LO or HI.	1. Combination switch 2. Motor assembly - wiper 3. Wiring harness
Wipers do not operate in INT.	1. Combination switch 2. Motor assembly - wiper 3. Wiring harness
Washer motor does not operate.	1. Combination switch 2. Motor pump assembly - washer 3. Wiring harness
Wipers do not operate when washer switch is ON.	1. Motor assembly - wiper 2. Wiring harness
Washer fluid spray does not operate properly.	1. Motor pump assembly - washer 2. Hose assembly - washer 3. Nozzle - washer

C: NOTE

For procedure of each component of the wiper and washer system, refer to the respective sections.

- Combination switch (wiper): <Ref. to WW-8, Combination Switch (Wiper).>
- Wiper blade: <Ref. to WW-12, Wiper Blade.>
- Front wiper arm: <Ref. to WW-19, Front Wiper Arm.>
- Front wiper motor and link: <Ref. to WW-21, Front Wiper Motor and Link.>
- Washer tank and motor: <Ref. to WW-14, Washer Tank and Motor.>
- Front washer nozzle: <Ref. to WW-25, Front Washer Nozzle.>