


5. Wiper Blade

A: REMOVAL

While pushing the locking clip (A) up, pull out the blade assembly - windshield wiper in the direction of the arrow, and remove it from the arm assembly - windshield wiper.

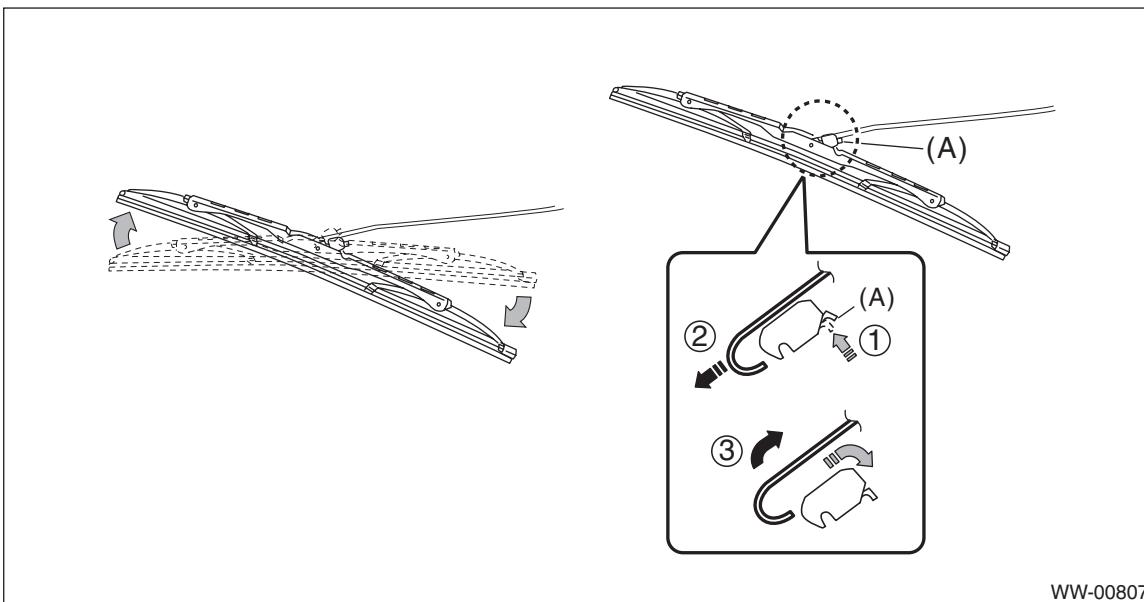

WW-00807

B: INSTALLATION


Install each part in the reverse order of removal.

CAUTION:

Make sure the locking clip is secured.

C: DISASSEMBLY


Pull side (A) of the wiper rubber stopper and remove the rubber assembly - windshield wiper.

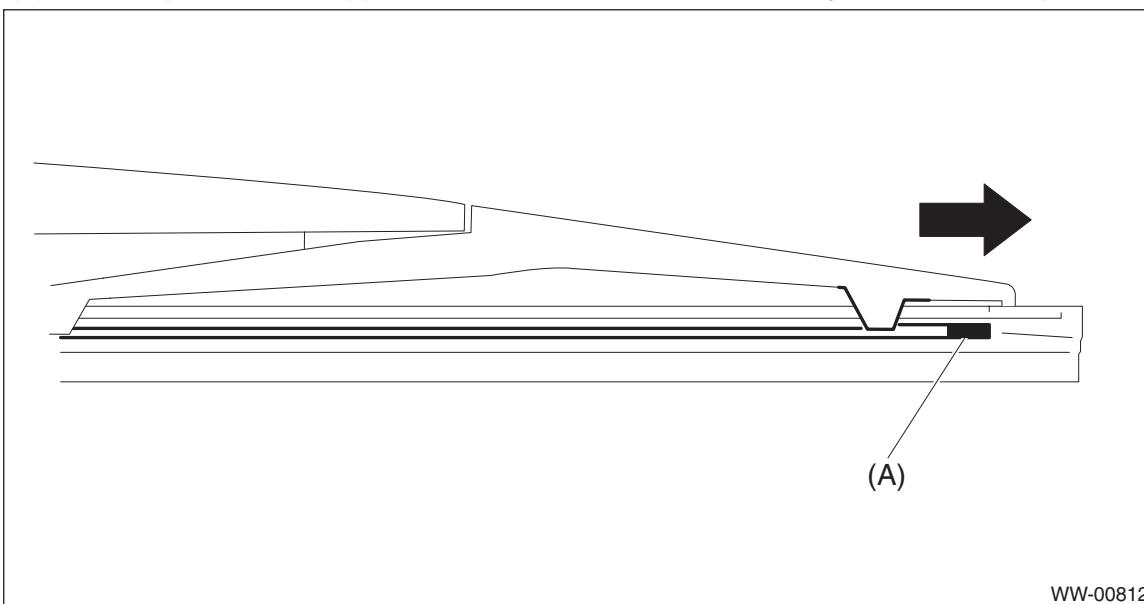


WW-00812

D: ASSEMBLY

- 1) Insert the rubber assembly - windshield wiper onto the blade - windshield wiper so that the stopper is in the position shown in the figure.

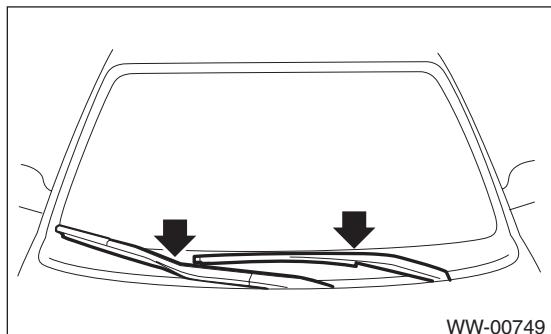

- 2) Make sure the rubber assembly - windshield wiper is securely fastened to the pull stopper (A).

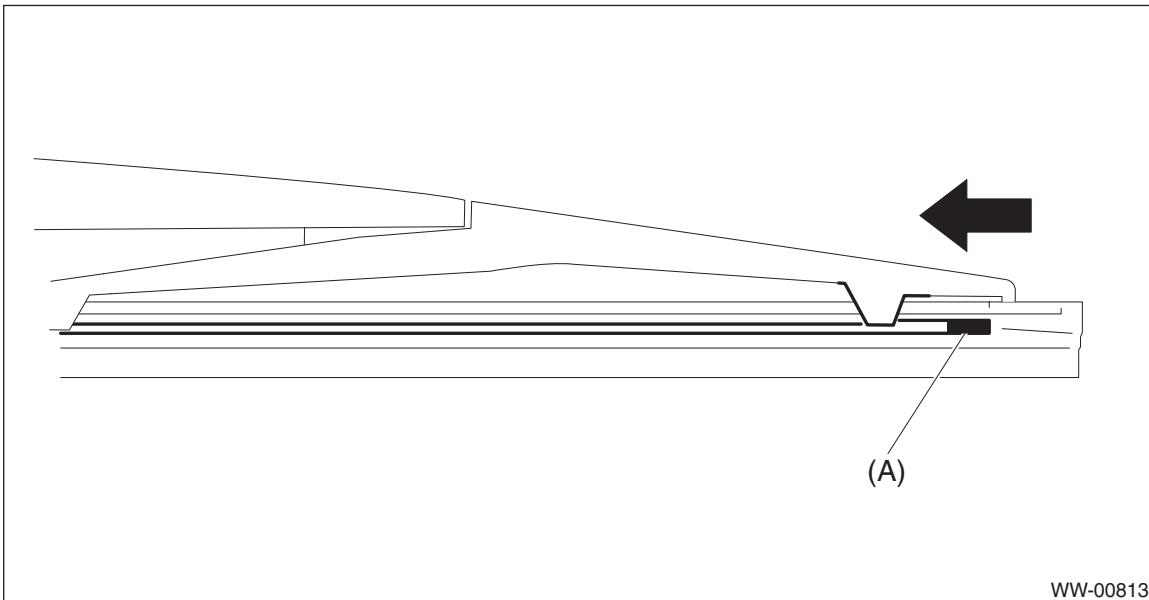

E: INSPECTION

- 1) When the wiper does not operate properly, inspect the following item.
 - Check that the movable part of the blade - windshield wiper moves smoothly.
 - Check that the rubber assembly - windshield wiper is not deformed or damaged.
- 2) Replace with a new part if damage is found.