

9. Front Washer Nozzle

A: REMOVAL

- 1) Disconnect the ground cable from battery. <Ref. to NT-5, BATTERY, NOTE, Note.>

NOTE:

For models other than STI model, disconnect the ground terminal from battery sensor.


- 2) Remove the arm assembly - windshield wiper. <Ref. to WW-19, REMOVAL, Front Wiper Arm.>

- 3) Remove the cowl panel - side and the cowl panel assembly. <Ref. to EI-45, REMOVAL, Cowl Panel.>

CAUTION:

Before removing the cowl panel, use an air blower and nylon brush to sweep gravel from the lower area of the front side of the glass.

- 4) Disconnect the hose - windshield washer.

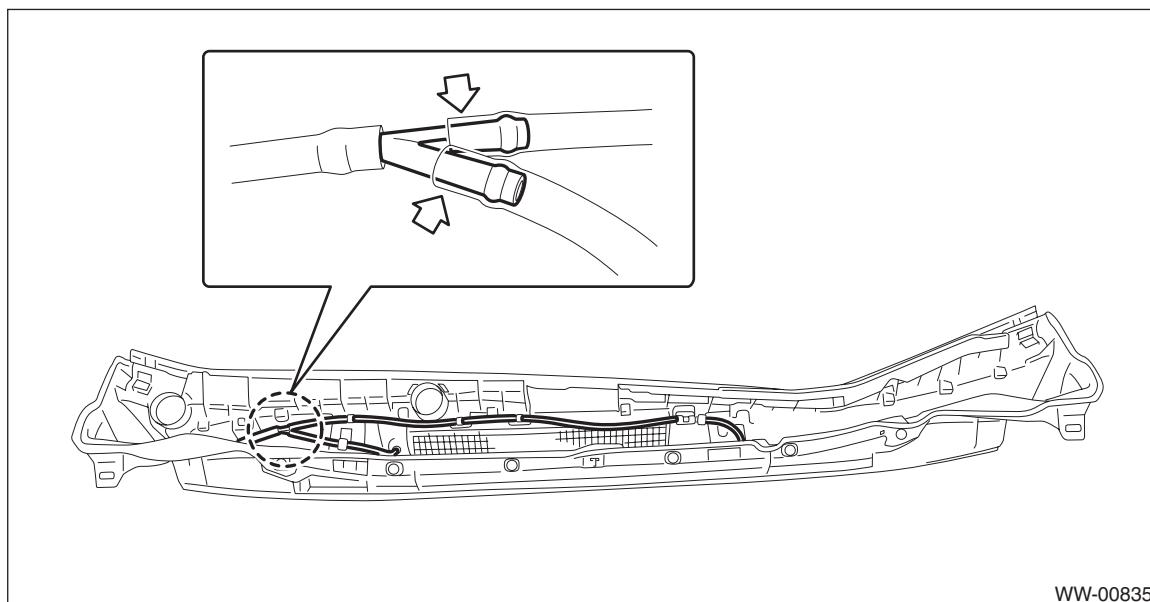


- 5) Remove the nozzle - windshield washer.

(1) Push the claw using a flat tip screwdriver, etc.

(2) When the nozzle - windshield washer lifts up, pull out the nozzle - windshield washer using a clip remover, etc.

(3) Disconnect the hose - windshield washer, and remove the nozzle - windshield washer.

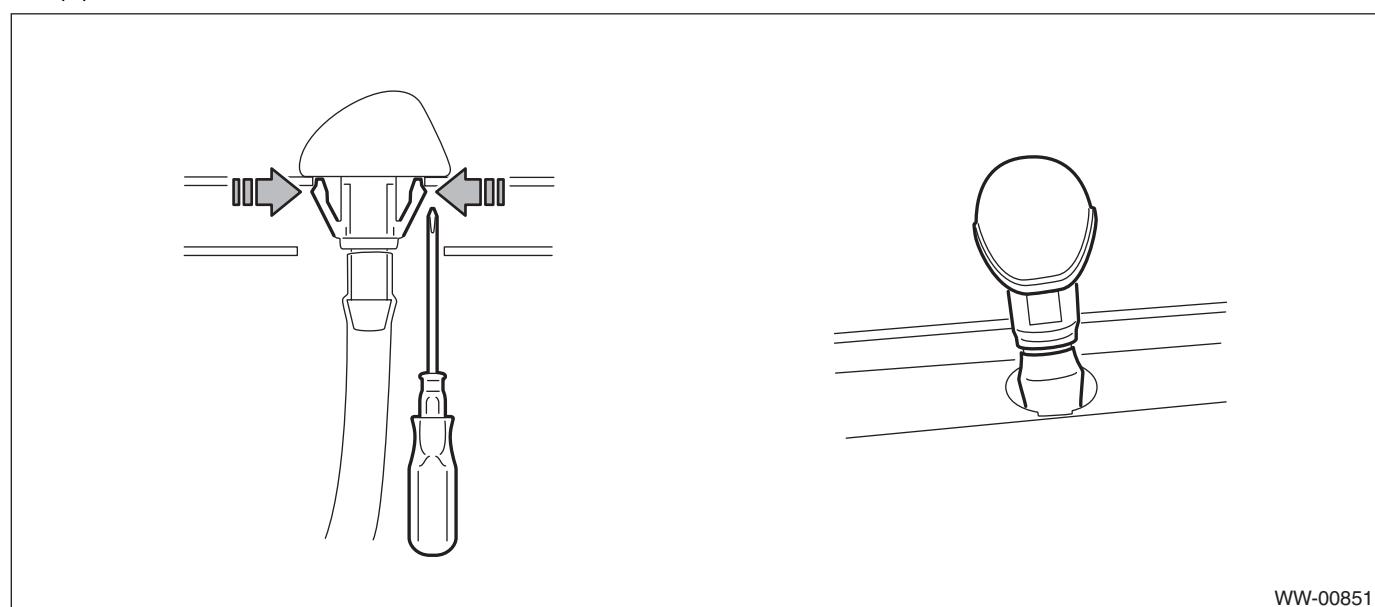

B: INSTALLATION

CAUTION:

Before installing the windshield glass and the cowl panel, make sure there is no gravel in the installing area.

- 1) Install the nozzle - windshield washer.
 - (1) Install the nozzle - windshield washer.
 - (2) Install the hose - windshield washer.
- 2) Install the cowl panel - side and the cowl panel assembly. <Ref. to EI-46, INSTALLATION, Cowl Panel.>
- 3) Install the arm assembly - windshield wiper. <Ref. to WW-19, INSTALLATION, Front Wiper Arm.>
- 4) Connect the battery ground terminal. <Ref. to NT-5, BATTERY, NOTE, Note.>

NOTE:

For models other than STI model, connect the ground terminal to battery sensor.


- 5) Adjust the position of the nozzle - windshield washer. <Ref. to WW-27, ADJUSTMENT, Front Washer Nozzle.>

C: INSPECTION

- Make sure the nozzle - windshield washer and the hose - windshield washer are not clogged.
- Make sure the hose - windshield washer is not bent.
- Check the position of the nozzle - windshield washer. <Ref. to WW-27, ADJUSTMENT, Front Washer Nozzle.>


D: ADJUSTMENT

- 1) Turn the wiper switch to OFF position.
- 2) While the vehicle is at a standstill, insert a precision screwdriver (A) or equivalent into the clearance on the upper/lower side or the right/left side of the nozzle - windshield washer to perform necessary adjustment.

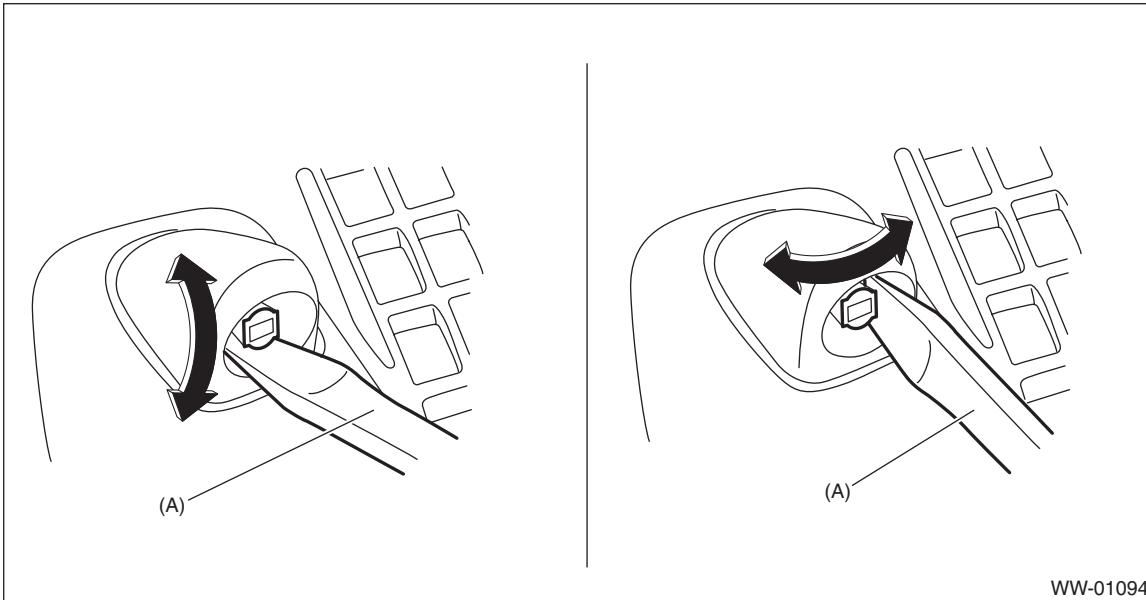

CAUTION:


The nozzle - windshield washer is made of resin. If precision screwdriver (A) or equivalent is inserted into discharge port for adjustment, the discharge port can be deformed, and washer fluid cannot be sprayed.

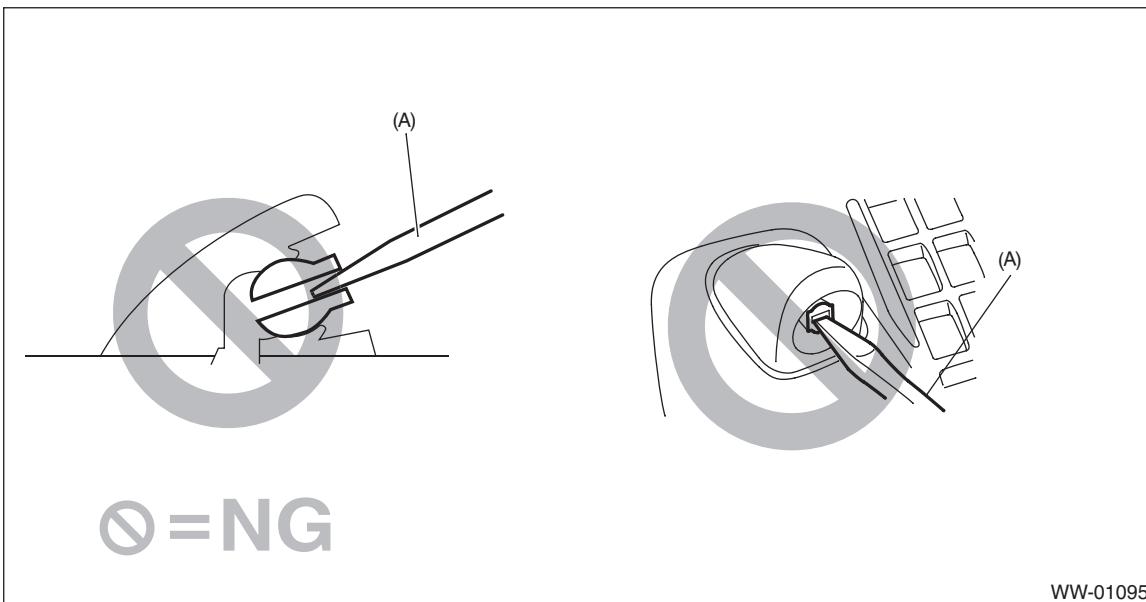

Front Washer Nozzle

WIPER AND WASHER SYSTEMS

3) Adjust the washer injection position as shown in the figure.

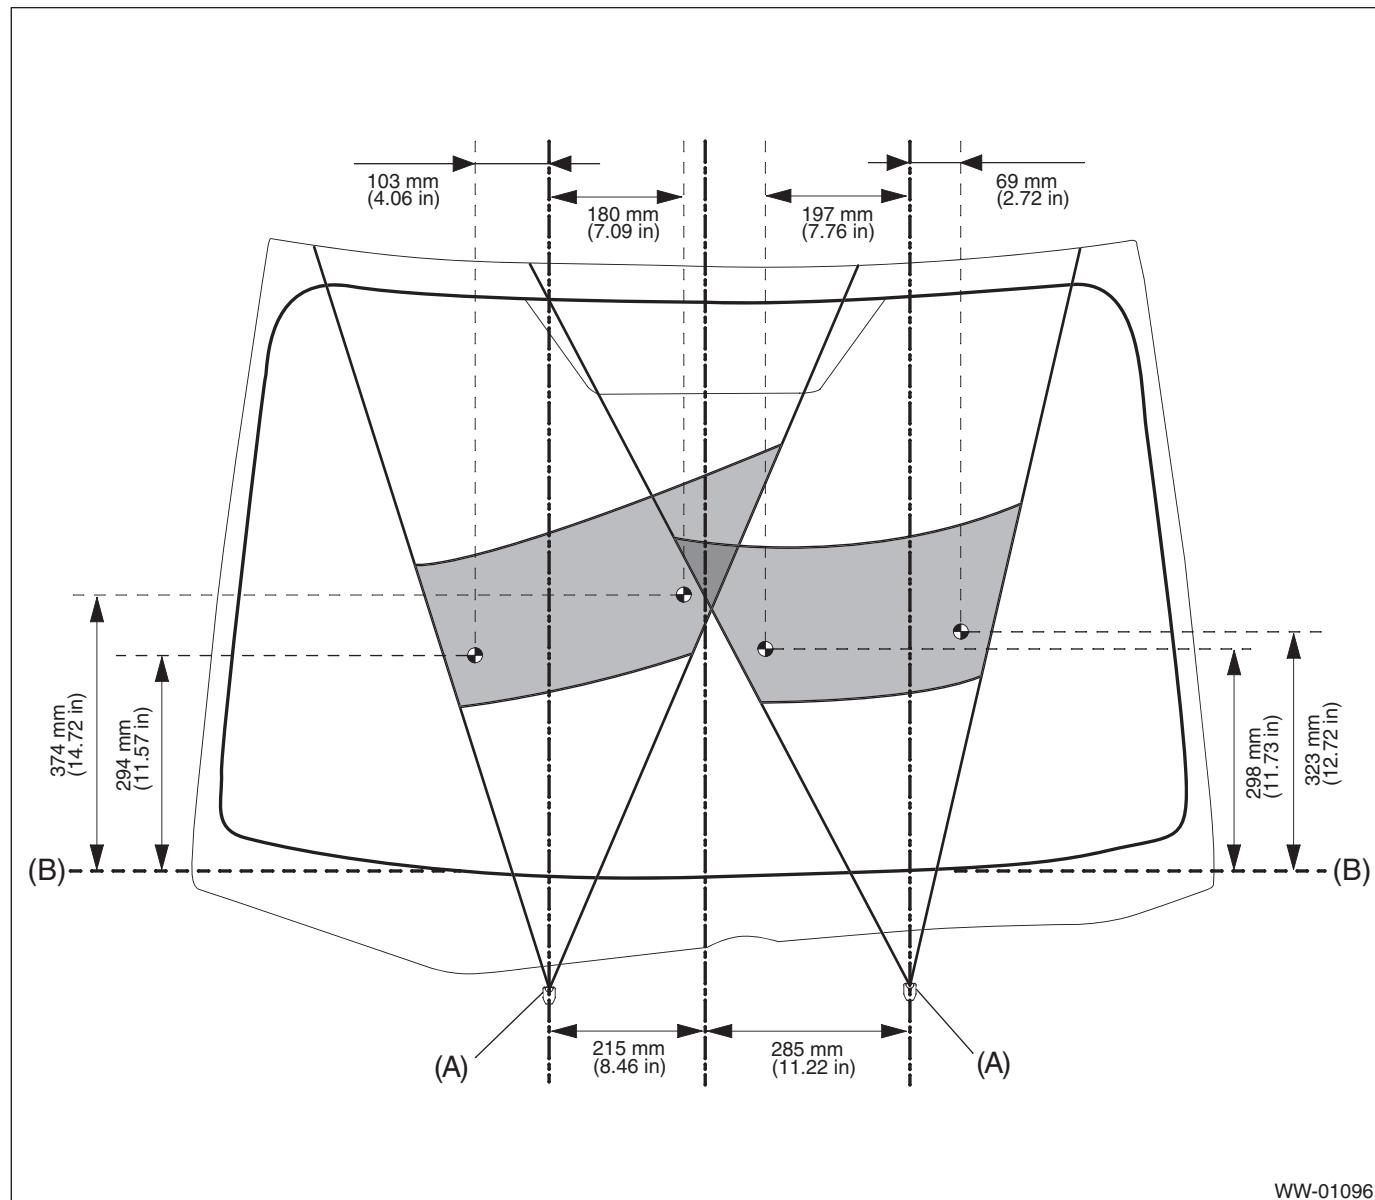

(A) Nozzle - windshield washer

(B) Ceramic line

WW-01096

ENTERTAINMENT

ET

	Page
1. General Description	2
2. Relay and Fuse	3
3. Audio System	4
4. Navigation System	5
5. Audio	8
6. Front Speaker	9
7. Rear Speaker	11
8. Woofer	12
9. Power Amplifier	13
10. Antenna	14
11. Steering Satellite Switch	16
12. Microphone	18
13. Navigation Body	19
14. GPS Antenna	20
15. Rearview Camera System	21
16. Front Accessory Power Supply Socket	23
17. Rear Accessory Power Supply Socket	25
18. AUX Input Terminal	26