


2. Relay and Fuse

A: LOCATION

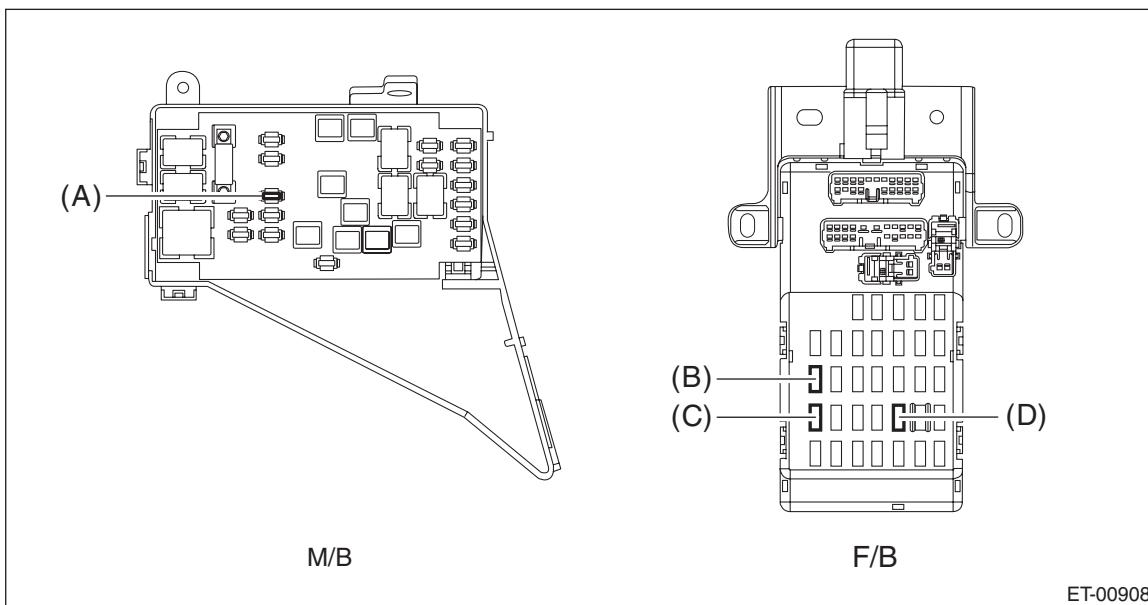

Main fuse box	Fuse 25A (audio amplifier)	(A)
Relay & fuse box	Fuse 20A (rear accessory power supply socket)	(B)
	Fuse 10A (front accessory power supply socket)	(C)
	Fuse 10A (audio, navigation unit)	(D)

NOTE:

For other related fuses, refer to the wiring diagram. <Ref. to WI-28, Power Supply Circuit.>

B: INSPECTION

1. CHECK FUSE

- 1) Remove the fuse and inspect visually.
- 2) If the fuse is blown out, replace the fuse.

NOTE:

If the fuse is blown again, check the system wiring harness.