

3. Audio System

A: WIRING DIAGRAM

1. AUDIO

Refer to "Audio System" in the wiring diagram.

- STANDARD MODEL (ENGINE TYPE FA): <Ref. to WI-84, STANDARD MODEL (ENGINE TYPE FA), WIRING DIAGRAM, Audio System.>
- STANDARD MODEL (ENGINE TYPE EJ): <Ref. to WI-88, STANDARD MODEL (ENGINE TYPE EJ), WIRING DIAGRAM, Audio System.>
- PREMIUM MODEL (ENGINE TYPE FA): <Ref. to WI-92, PREMIUM MODEL (ENGINE TYPE FA), WIRING DIAGRAM, Audio System.>
- PREMIUM MODEL (ENGINE TYPE EJ): <Ref. to WI-98, PREMIUM MODEL (ENGINE TYPE EJ), WIRING DIAGRAM, Audio System.>

B: INSPECTION

| Symptoms | Inspection steps |
|---|---|
| No power coming in. (No display and no sound from speakers.) | <ol style="list-style-type: none">1. Check the fuse and power supply for audio.2. Check the audio ground.3. Remove the audio and repair them. |
| A specific speaker does not operate. | <ol style="list-style-type: none">1. Check the speaker.2. Check the output circuit between audio and speaker.3. Check the power amplifier. (Model with power amplifier) |
| Audio generates noise with engine running. | <ol style="list-style-type: none">1. Check the audio ground.2. Check the generator.3. Check the ignition coil.4. Remove the audio and repair them. |
| Volume is low in AM and FM modes or interference noise occurs. | <ol style="list-style-type: none">1. Check the antenna.2. Check the rear window defogger.3. Check the audio ground.4. Remove the audio and repair them. |
| Rear window defogger generates noise when it operate. | <ol style="list-style-type: none">1. Check the rear window defogger. |
| Interruption screen of "Audio abnormality" is displayed on the MFD. | <ol style="list-style-type: none">1. Refer to "Diagnostics with Phenomenon" of "INSTRUMENTATION/DRIVER INFO (DIAGNOSTICS)" section. <Ref. to IDI(diag)-35, INTERRUPTION SCREEN OF "AUDIO ABNORMALITY" WAS DISPLAYED ON THE MFD, INSPECTION, Diagnostics with Phenomenon.> |

C: NOTE

For procedure of each component in the audio system, refer to the respective sections.

- Audio unit: <Ref. to ET-8, Audio.>
- Front speaker
 - Tweeter (instrument panel): <Ref. to ET-9, TWEETER, REMOVAL, Front Speaker.>
 - Door speaker: <Ref. to ET-10, DOOR SPEAKER, REMOVAL, Front Speaker.>
- Rear speaker: <Ref. to ET-11, Rear Speaker.>
- Antenna: <Ref. to ET-14, Antenna.>
- Steering satellite switch: <Ref. to ET-16, Steering Satellite Switch.>
- AUX input terminal: <Ref. to ET-26, AUX Input Terminal.>