

## 5. Audio

### A: REMOVAL

- 1) Disconnect the ground cable from battery. <Ref. to NT-5, BATTERY, NOTE, Note.>

NOTE:


For models other than STI model, disconnect the ground terminal from battery sensor.

- 2) Remove the panel center assembly. <Ref. to EI-66, REMOVAL, Center Console.>

- 3) Remove the audio assembly.

(1) Remove the screws, and partially pull out the audio assembly.

(2) Disconnect the connectors, and remove the audio assembly.

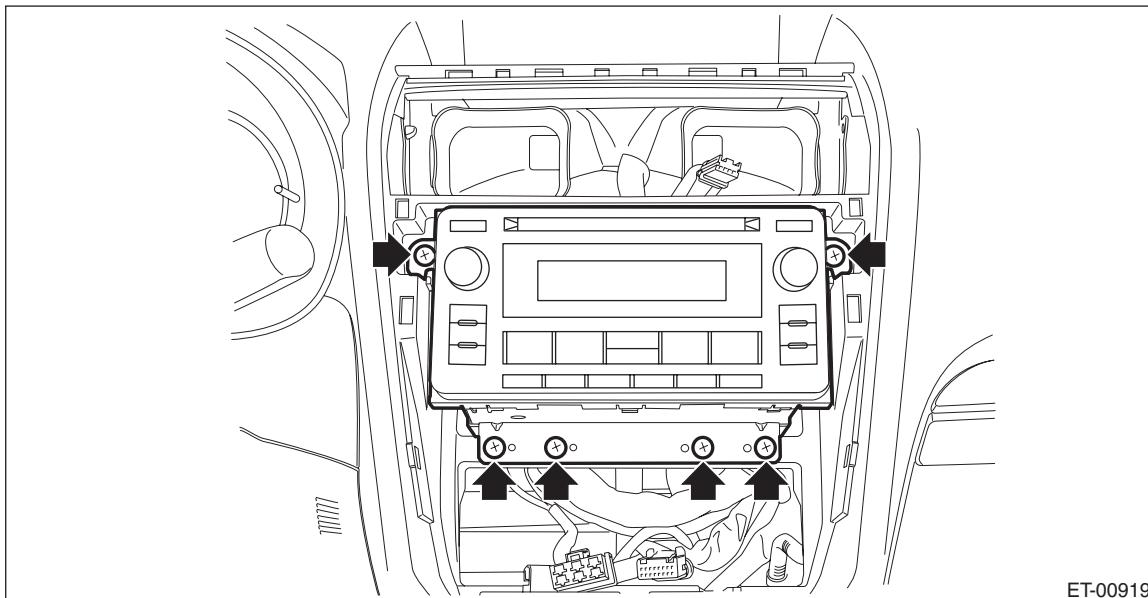

### B: INSTALLATION

**CAUTION:**

After installing the panel center assembly, check that the air vent grille of the panel center assembly is inserted correctly into the air vent duct.

- 1) Install the audio assembly.
- 2) Install the panel center assembly.
- 3) Connect the battery ground terminal. <Ref. to NT-5, BATTERY, NOTE, Note.>

NOTE:

For models other than STI model, connect the ground terminal to battery sensor.