

## 7. Rear Speaker

### A: REMOVAL

- 1) Disconnect the ground cable from battery. <Ref. to NT-5, BATTERY, NOTE, Note.>

NOTE:


For models other than STI model, disconnect the ground terminal from battery sensor.

- 2) Remove the trim panel - rear door. <Ref. to EI-57, REAR DOOR, REMOVAL, Door Trim.>

- 3) Remove the rear speaker assembly.

(1) Remove the screws.

(2) Disconnect the connector behind the speaker and remove the rear speaker assembly.

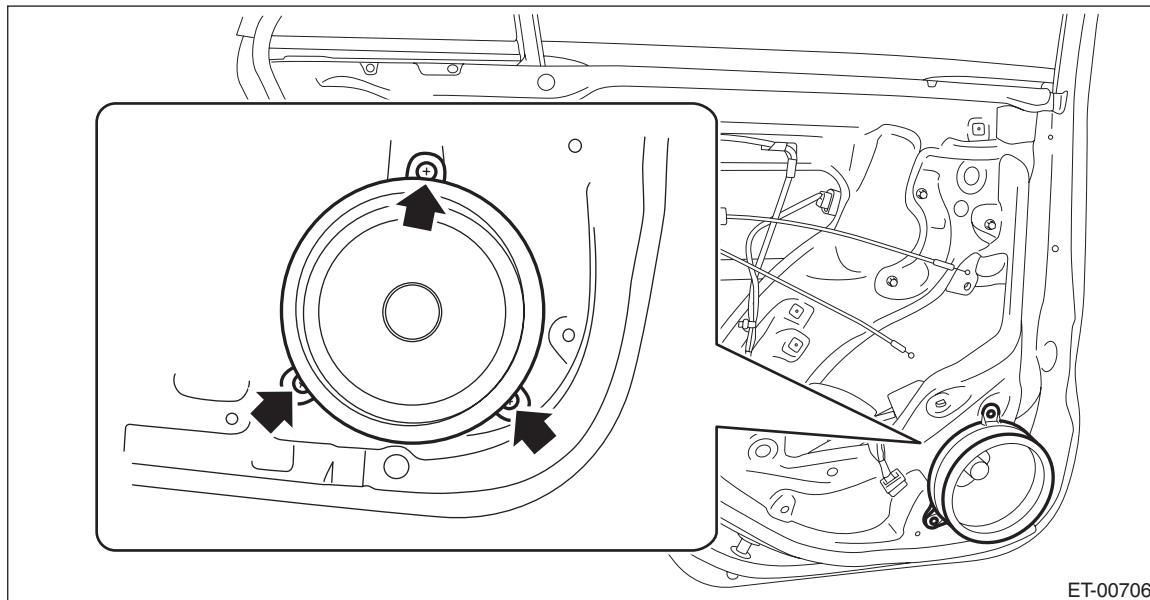

### B: INSTALLATION

- 1) Install the rear door speaker assembly.

- 2) Install the trim panel - rear door.

- 3) Connect the battery ground terminal. <Ref. to NT-5, BATTERY, NOTE, Note.>

NOTE:

For models other than STI model, connect the ground terminal to battery sensor.