

9. Power Amplifier

A: REMOVAL


- 1) Disconnect the ground cable from battery. <Ref. to NT-5, BATTERY, NOTE, Note.>

NOTE:

For models other than STI model, disconnect the ground terminal from battery sensor.

- 2) Remove the rear seat cushion assembly. <Ref. to SE-29, REMOVAL, Rear Seat.>
- 3) Remove the trim panel - rear pillar UPR and the trim panel - rear pillar LWR. <Ref. to EI-89, REMOVAL, Rear Quarter Trim.>
- 4) Remove the trim panel assembly - rear shelf. <Ref. to EI-92, REMOVAL, Rear Shelf Trim.>
- 5) Remove the power amplifier - assembly.

- (1) Release the harness clips, and disconnect each connector.
- (2) Remove the bolts, release the clips, and then remove the power amplifier - assembly.

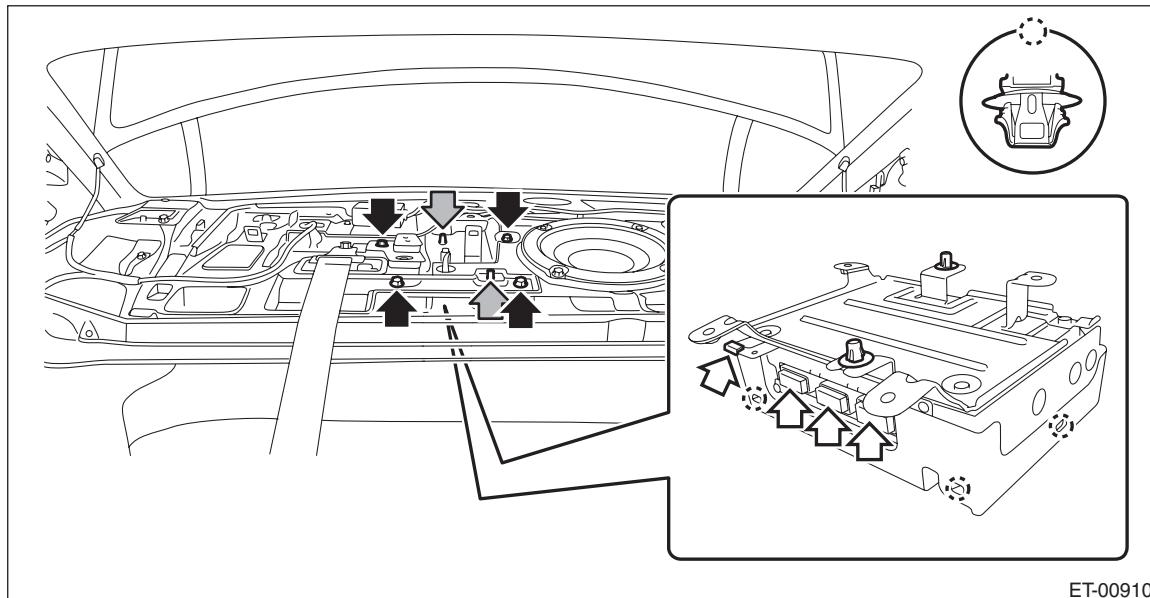

B: INSTALLATION

- 1) Install the power amplifier - assembly.

Tightening torque:

7.5 N·m (0.8 kgf-m, 5.5 ft-lb)

- 2) Install the trim panel assembly - rear shelf.
- 3) Install the trim panel - rear pillar UPR and the trim panel - rear pillar LWR.
- 4) Install the rear seat cushion assembly.
- 5) Connect the battery ground terminal. <Ref. to NT-5, BATTERY, NOTE, Note.>

NOTE:

For models other than STI model, connect the ground terminal to battery sensor.