

## 14. GPS Antenna

### A: REMOVAL

- 1) Disconnect the ground cable from battery. <Ref. to NT-5, BATTERY, NOTE, Note.>

#### NOTE:

For models other than STI model, disconnect the ground terminal from battery sensor.

- 2) Remove the combination meter assembly. <Ref. to IDI-13, REMOVAL, Combination Meter.>

- 3) Remove the panel center assembly. <Ref. to EI-66, REMOVAL, Center Console.>

- 4) Remove the navigation assembly in the same manner as the removal procedure of the audio assembly. <Ref. to ET-8, REMOVAL, Audio.>


- 5) Remove the GPS antenna assembly.

(1) Tie a string to the GPS antenna assembly connector on the navigation unit side.

#### NOTE:

A string makes operation easier during installation.

(2) Remove the screw and harness clamp, and pull out the GPS antenna assembly connector from the combination meter side.

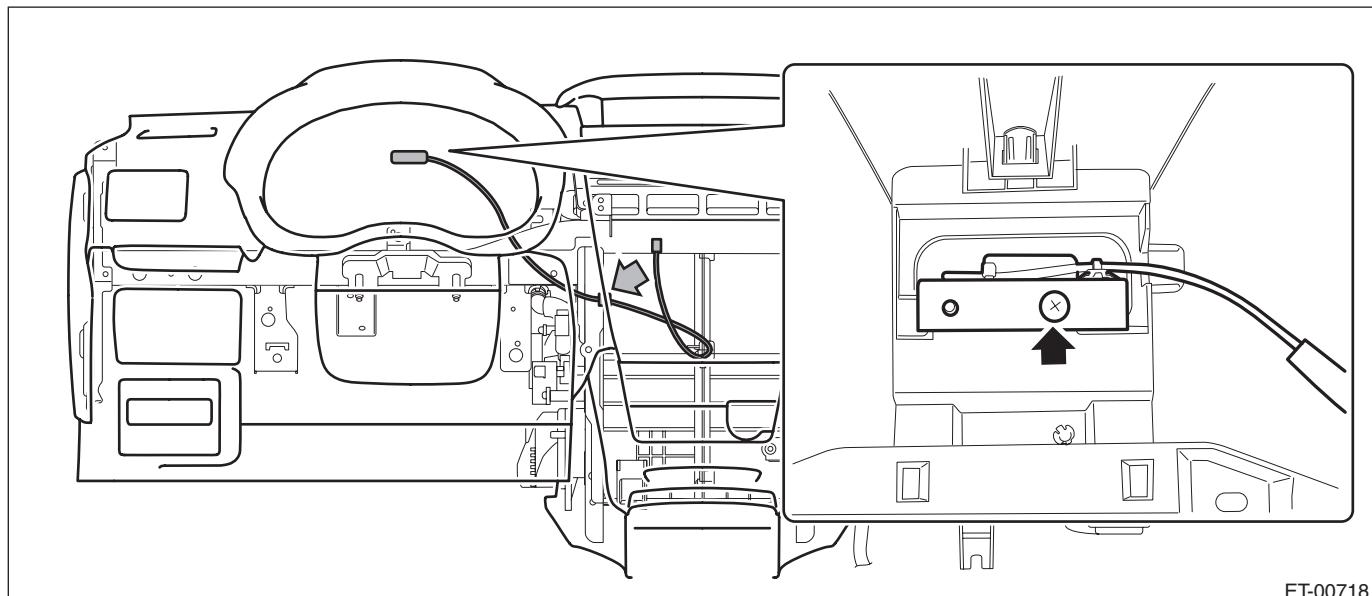

- (3) When the GPS antenna assembly is pulled out, remove the string attached to the connector in step (1).

### B: INSTALLATION

#### CAUTION:

After installing the panel center assembly, check that the air vent grille of the panel center assembly is inserted correctly into the air vent duct.

- 1) Install the GPS antenna assembly.
- 2) Install the navigation assembly.
- 3) Install the panel center assembly.
- 4) Install the combination meter assembly.
- 5) Connect the battery ground terminal. <Ref. to NT-5, BATTERY, NOTE, Note.>

#### NOTE:

For models other than STI model, connect the ground terminal to battery sensor.