


## 2. Relay and Fuse

### A: LOCATION

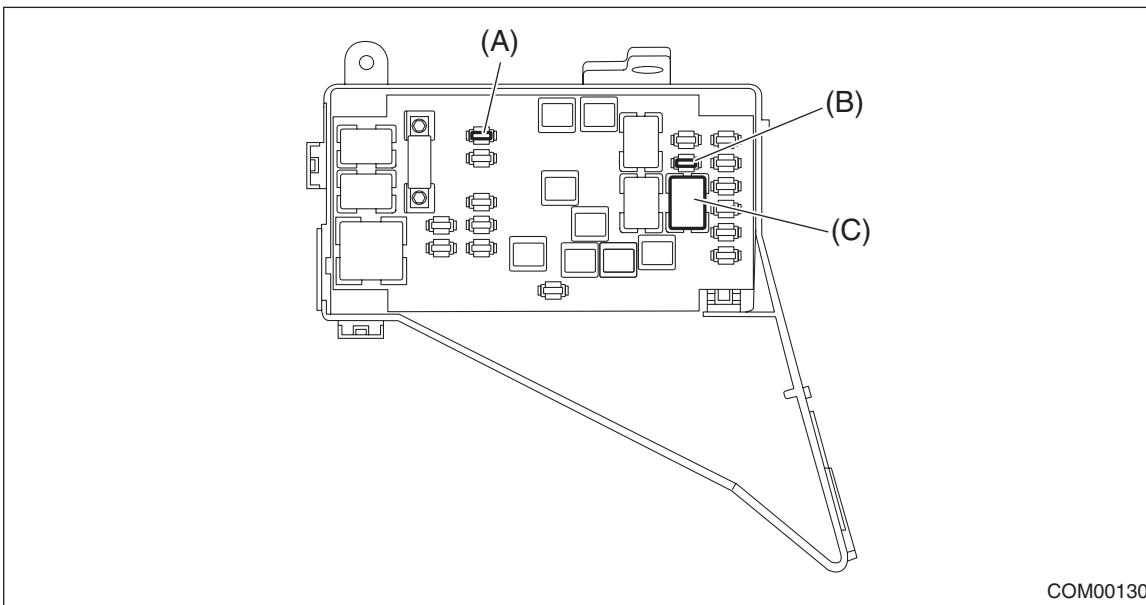

Main fuse box	Fuse 15 A (horn assembly - Hi)	(A)
	Fuse 15 A (horn assembly - Lo)	(B)
	Horn relay	(C)

**NOTE:**

For other related fuses, refer to the wiring diagram. <Ref. to WI-28, Power Supply Circuit.>


### B: INSPECTION

#### 1. CHECK FUSE

- 1) Remove the fuse and check visually.
- 2) If the fuse is blown out, replace the fuse.

#### 2. CHECK RELAY

- 1) Measure the resistance between relay terminals.

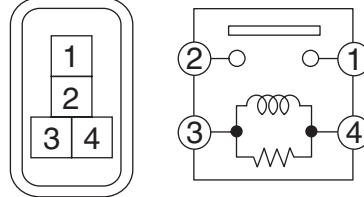Terminal No.	Inspection conditions	Standard	Circuit
1 — 2	Always	1 MΩ or more	
1 — 2	Apply battery voltage between terminals 4 and 3.	Less than 1 Ω	 SR-00180

- 2) Replace the relay if the inspection result is not within the standard value.