

4. Horn

A: REMOVAL

1. HORN ASSY - HI

CAUTION:

When removing the horn, do not remove the bumper face – front. Bracket connection portion of the bumper face may become damaged.

- 1) Disconnect the ground cable from battery. <Ref. to NT-5, BATTERY, NOTE, Note.>


NOTE:

For models other than STI model, disconnect the ground terminal from battery sensor.

- 2) Lift up the vehicle.
- 3) Remove the under cover - front. <Ref. to EI-21, REMOVAL, Front Under Cover.>
- 4) Remove the bracket – front center LWR.
 - (1) Remove the screw and clips, and turn over the mud guard - front.
 - (2) Remove the bolts and clips, and remove the bracket – front center LWR.

NOTE:

While entirely pushing the bracket – front center LWR forward, remove the two hooks (a) on the left and right.

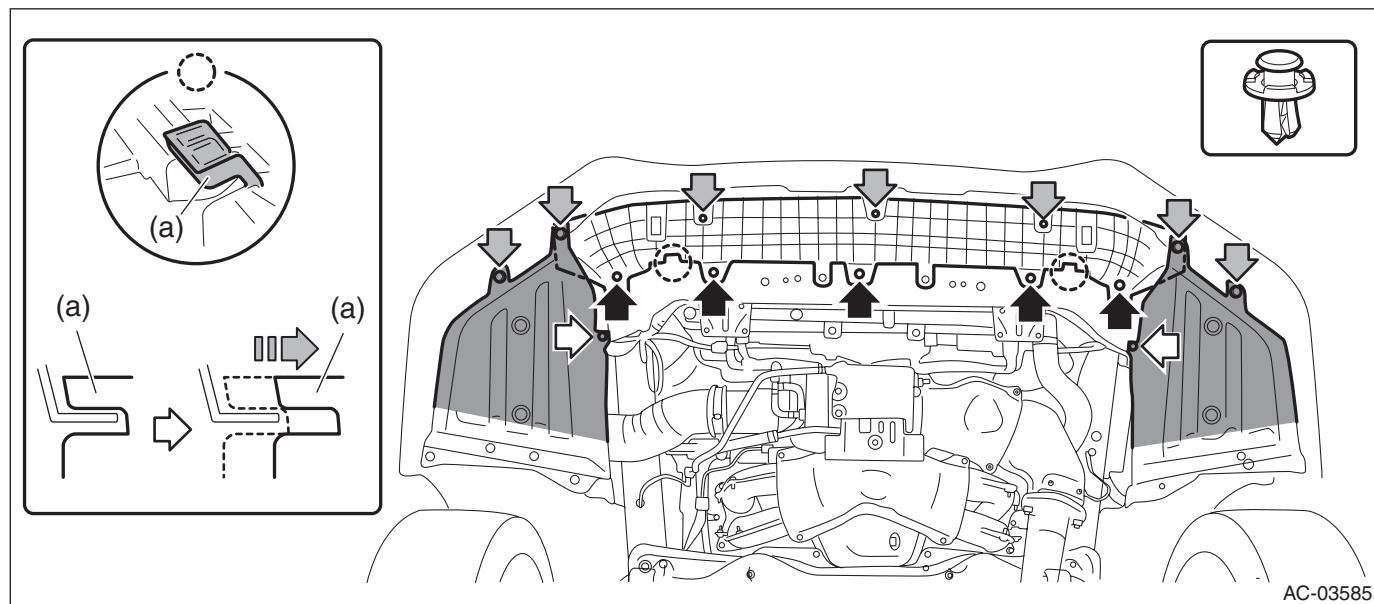


Horn

COMMUNICATION SYSTEM

5) Remove the horn assembly - Hi.

(1) Disconnect the connector.

(2) Remove the nut, and remove the horn assembly – Hi.

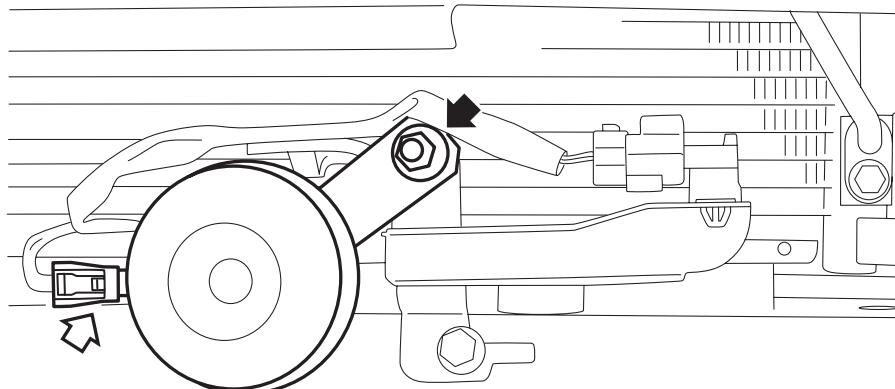

COM00128

2. HORN ASSY - LO

CAUTION:


When removing the horn, do not remove the bumper face – front. Bracket connection portion of the bumper face may become damaged.

1) Disconnect the ground cable from battery. <Ref. to NT-5, BATTERY, NOTE, Note.>

NOTE:

For models other than STI model, disconnect the ground terminal from battery sensor.

2) Remove the screw and clips, and turn over the mud guard - front on the right side.

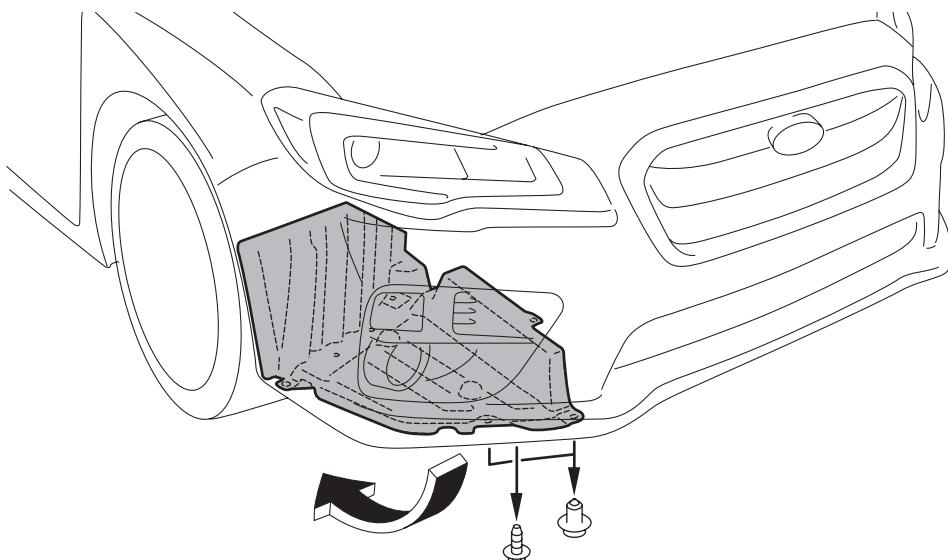


LI-01750

- 3) Remove the horn assembly - Lo.
 - (1) Disconnect the connector.
 - (2) Remove the bolt, and remove the horn assembly - Lo.

CAUTION:

The resistor may become hot. Be careful not to burn yourself.

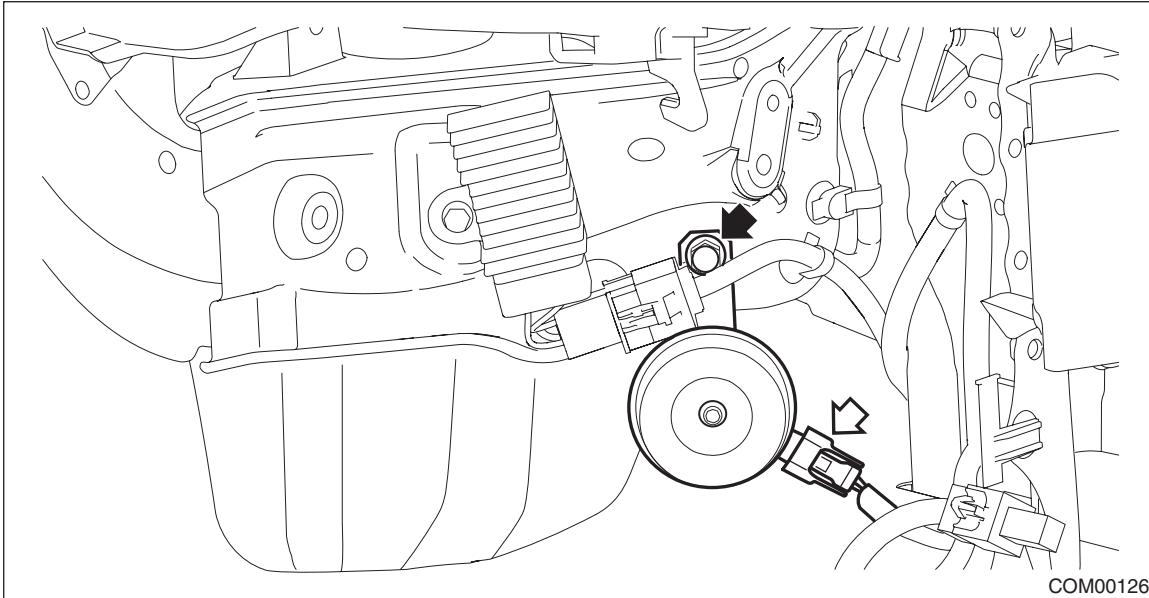


B: INSTALLATION

1. HORN ASSY - HI

CAUTION:

Install so that the front end of the under cover (b) comes inside the bumper face - front (a), and the front end of the mud guard (c) comes outside the bumper face - front (a).

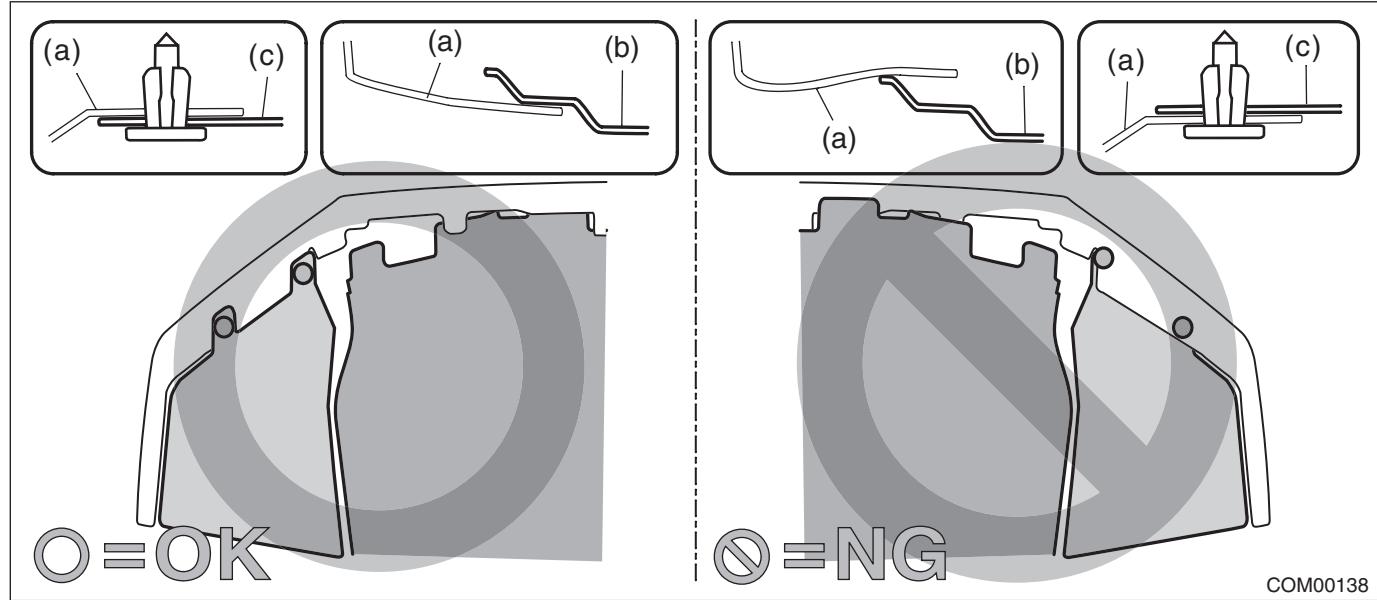

- 1) Install the horn assembly - Hi.

Tightening torque:

18 N·m (1.8 kgf·m, 13.3 ft-lb)

Horn

COMMUNICATION SYSTEM

- 2) Install the bracket - front center LWR.

Tightening torque:

7.5 N·m (0.8 kgf·m, 5.5 ft-lb)

- 3) Install the mud guard - front.
- 4) Install the under cover - front.

Tightening torque:

18 N·m (1.8 kgf·m, 13.3 ft-lb)

- 5) Lower the vehicle.
- 6) Connect the battery ground terminal. <Ref. to NT-5, BATTERY, NOTE, Note.>


NOTE:

For models other than STI model, connect the ground terminal to battery sensor.

2. HORN ASSY - LO

CAUTION:

Install the mud guard - front so that the front end of the mud guard (b) comes outside the bumper face - front (a).

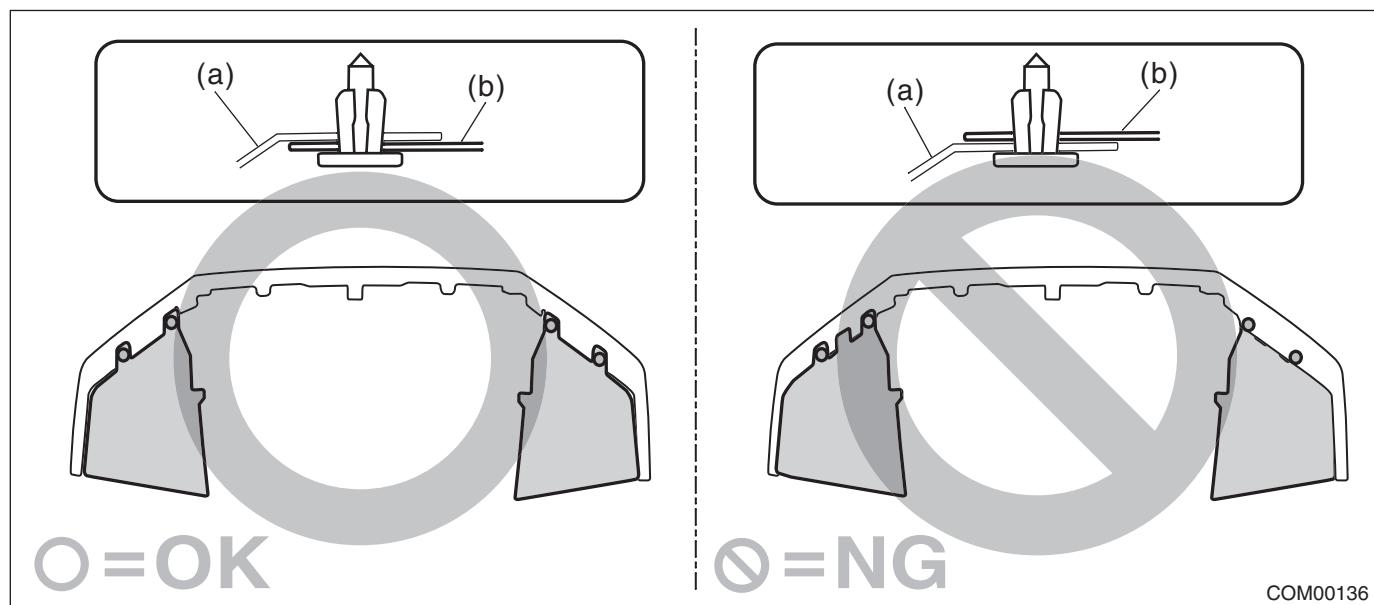

- 1) Install the horn assembly - Lo.

Tightening torque:

18 N·m (1.8 kgf·m, 13.3 ft-lb)


- 2) Install the mud guard - front.
- 3) Connect the battery ground terminal. <Ref. to NT-5, BATTERY, NOTE, Note.>

NOTE:

For models other than STI model, connect the ground terminal to battery sensor.

C: INSPECTION

- 1) Check that the horn assembly sounds when applying the battery voltage to each connector terminal.

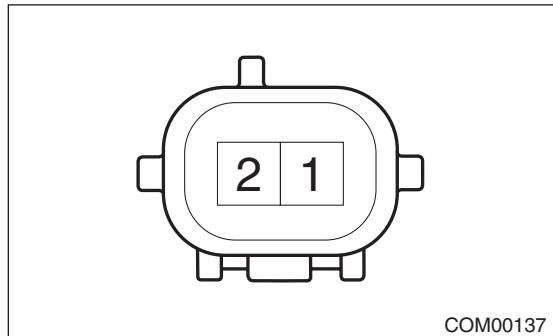

Terminal No.	Inspection conditions	Specification
Terminal 1 (+) — Terminal 2 (-)	Connect battery to the terminals	Sounds

- 2) If it does not operate normally, replace the horn assembly.