


General Description

GLASS/WINDOWS/MIRRORS

1. General Description

A: COMPONENT

1. FIXED GLASS

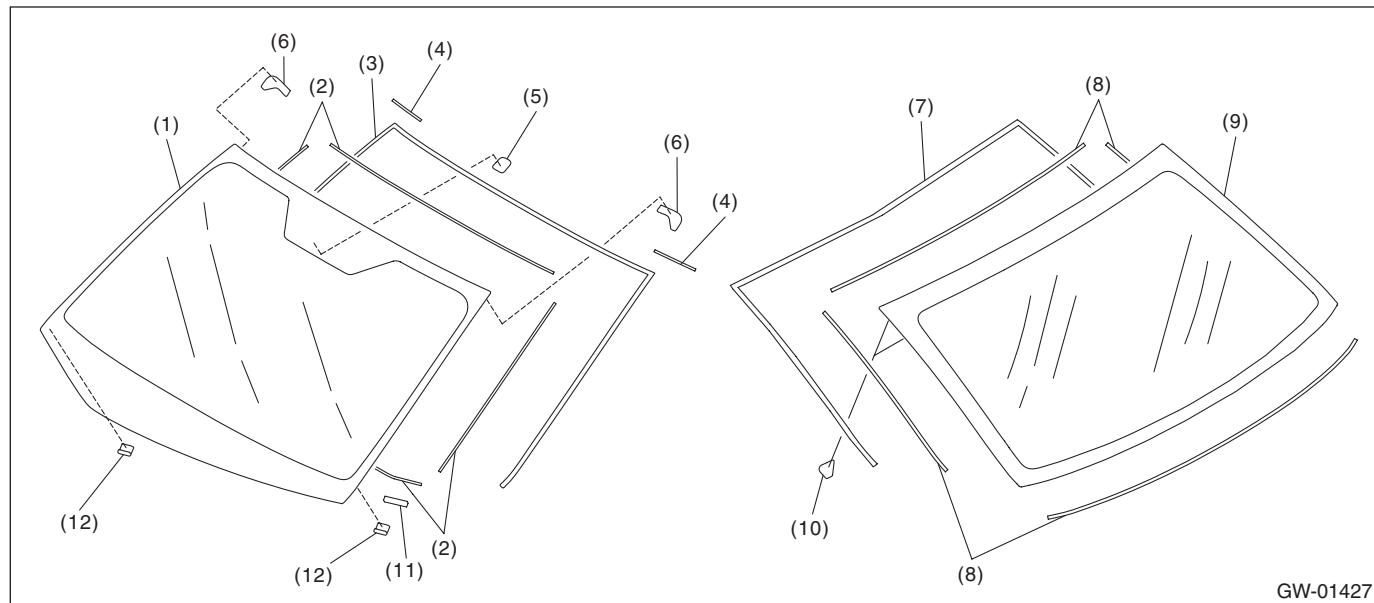


(1) Glass - front window	(5) Base - inner mirror	(9) Glass - rear window
(2) Dam rubber - front	(6) Locating pin - front window	(10) Locating pin - rear window
(3) Molding - front window	(7) Molding - rear window	(11) Seal - lower VIN
(4) Seal - upper	(8) Dam rubber - rear	(12) Seal - lower

General Description

GLASS/WINDOWS/MIRRORS

2. FRONT DOOR GLASS

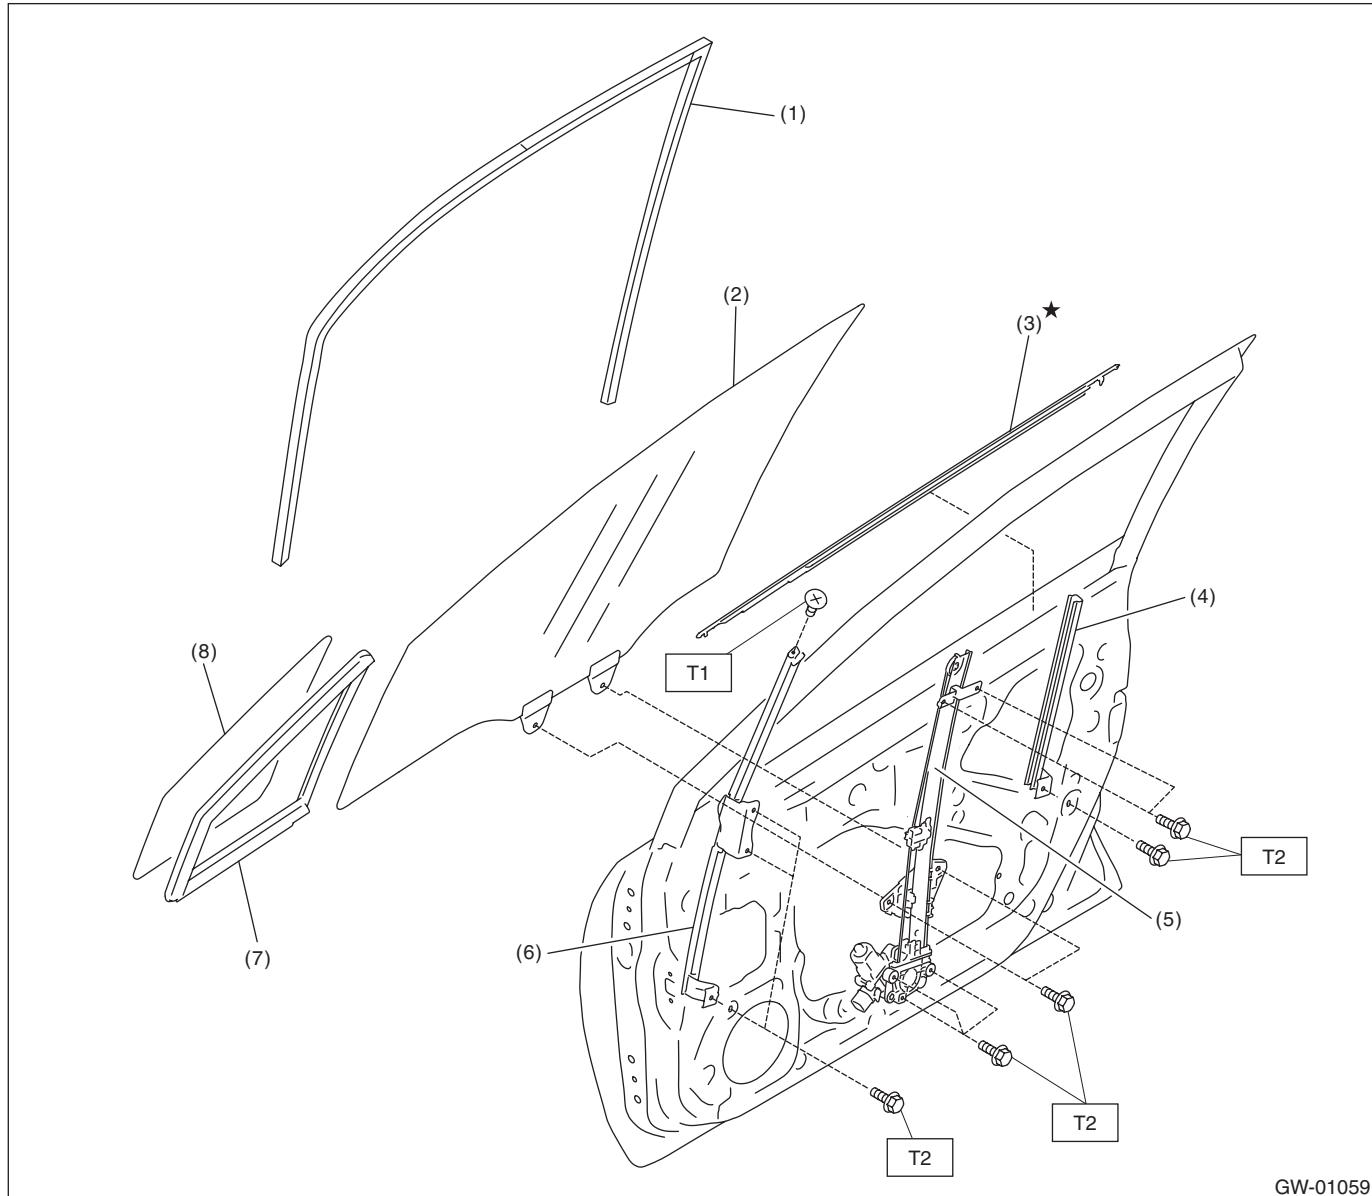

- (1) Running channel - front door
- (2) Glass ASSY - front door
- (3) Weather strip outer - front door
- (4) Sash COMPL - lower

- (5) Regulator & motor ASSY - front
- (6) Sash COMPL - partition
- (7) Weather strip - front door partition
- (8) Glass - front door partition

Tightening torque: N·m (kgf-m, ft-lb)


T1: 2.2 (0.2, 1.6)

T2: 7.5 (0.8, 5.5)

General Description

GLASS/WINDOWS/MIRRORS

3. REAR DOOR GLASS

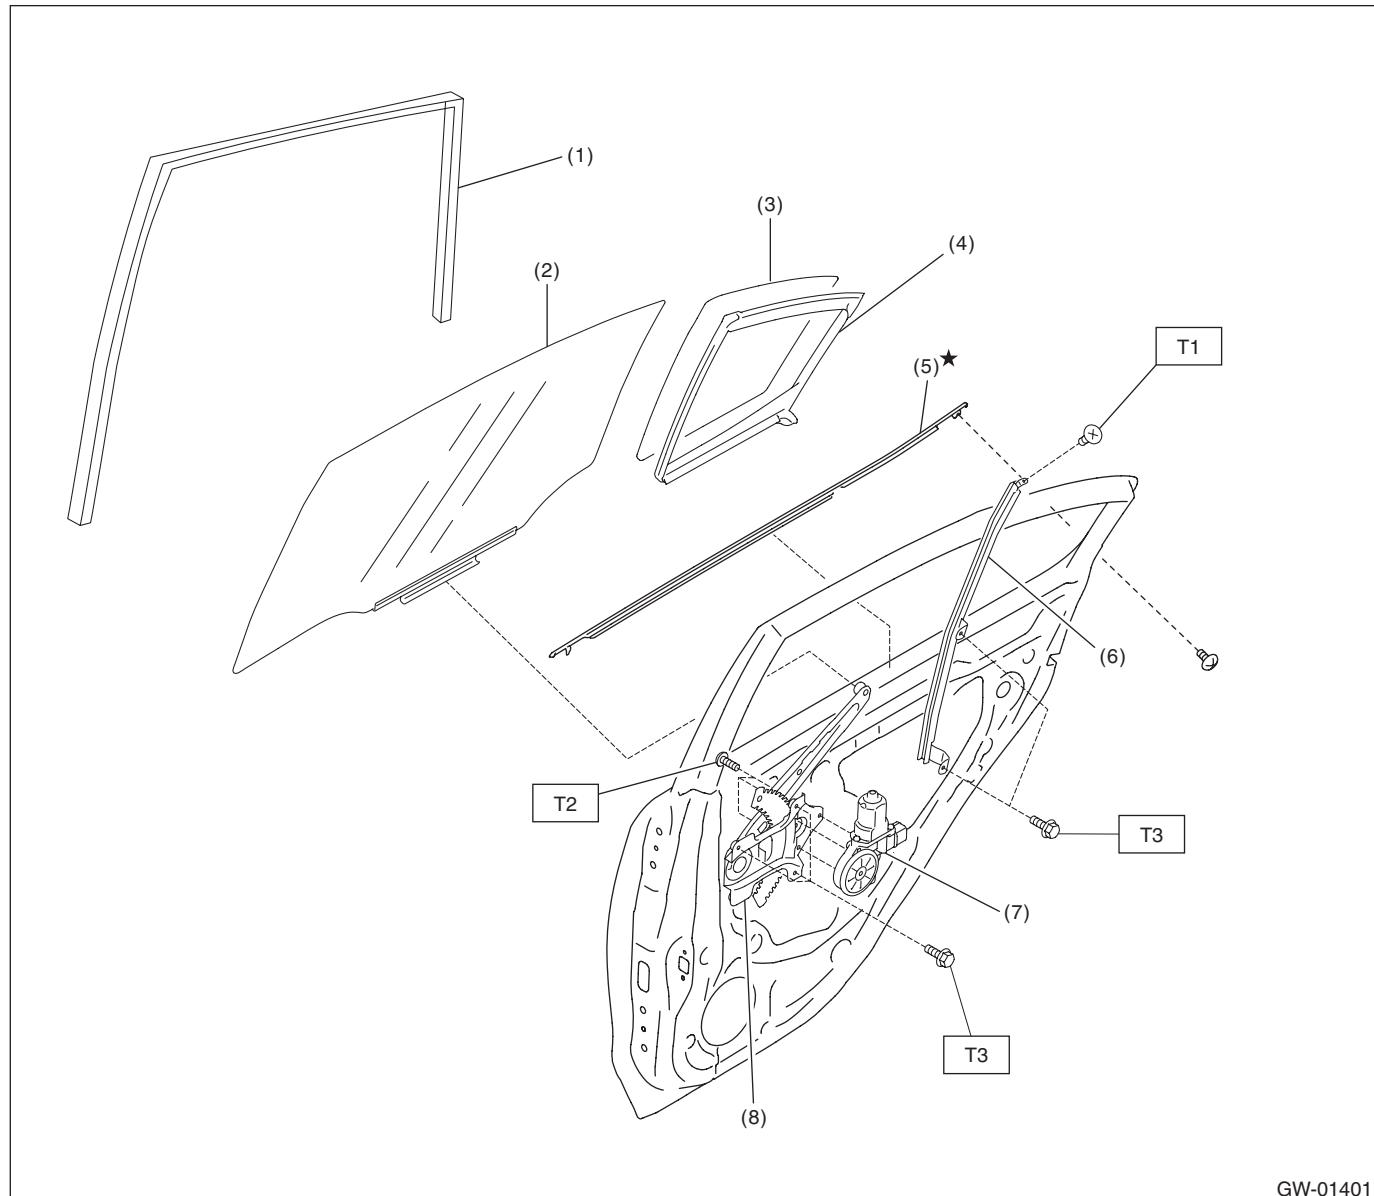

GW-01401

- (1) Running channel - rear door
- (2) Glass ASSY - rear door
- (3) Glass - rear door partition
- (4) Weather strip - rear door partition

- (5) Weather strip outer - rear door
- (6) Sash COMPL - rear partition
- (7) Motor - rear
- (8) Regulator - rear


Tightening torque: N·m (kgf·m, ft·lb)

T1: 2.2 (0.2, 1.6)

T2: 5.9 (0.6, 4.4)

T3: 7.5 (0.8, 5.5)

4. MIRROR

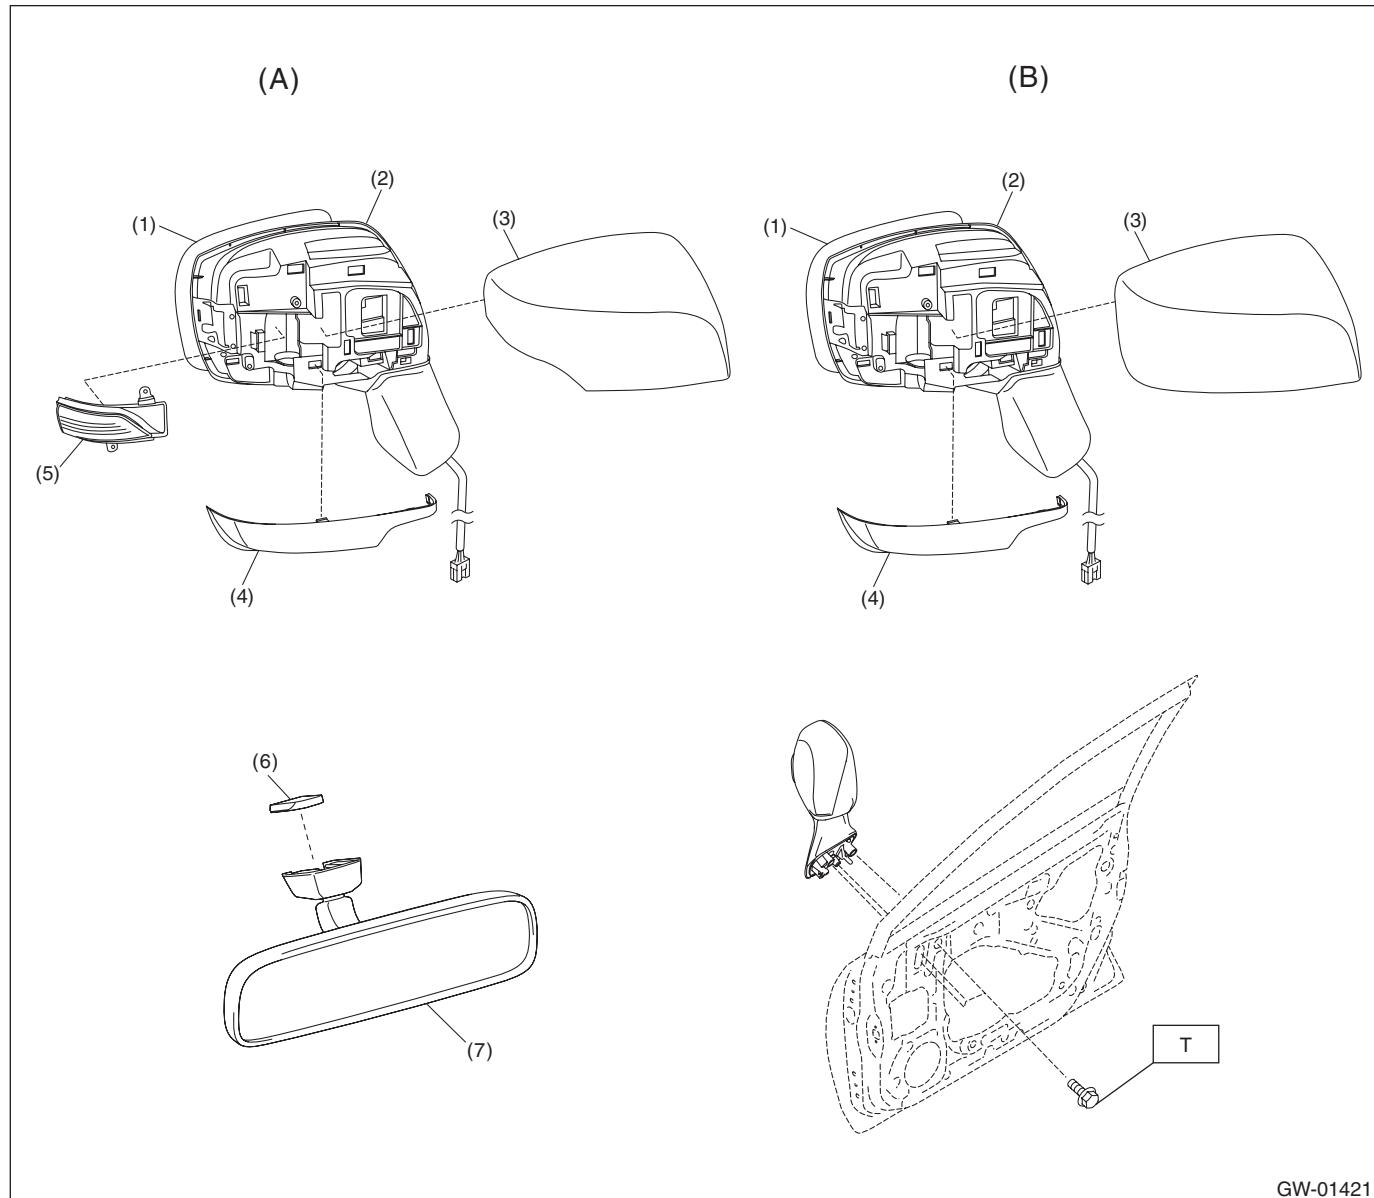

GW-01421

(A) Model with side turn

(B) Model without side turn

(1) Mirror - repair

(5) Light ASSY - side turn mirror

Tightening torque: N·m (kgf·m, ft·lb)

(2) Mirror unit - door

(6) Base - inner mirror

T: 7.5 (0.8, 5.5)

(3) Cover - cap outer mirror

(7) Mirror ASSY - inner rearview

(4) Cover - cap outer mirror lower

B: CAUTION


- Before disconnecting connectors of sensors or units, be sure to disconnect the ground cable from battery. When replacing the audio and MFD parts provided with memory functions, record the memory contents before disconnecting the battery ground cable.
- Avoid impact and damage to the glass.

General Description

GLASS/WINDOWS/MIRRORS

C: PREPARATION TOOL

1. SPECIAL TOOL

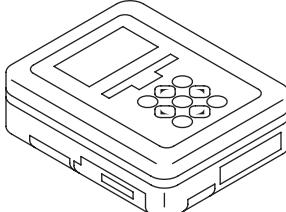ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 ST1B022XU0	1B022XU0	SUBARU SELECT MONITOR III KIT	Used for setting of each function and troubleshooting for electrical system.

2. GENERAL TOOL

TOOL NAME	REMARKS
Circuit tester	Used for measuring resistance and voltage.
Piano wire	Used for removing the window glass.
Cutter knife	Used for removing the window glass.
Windshield glass knife	Used for removing the window glass.