

### 5. Front Door Glass

#### A: REMOVAL

- 1) Disconnect the ground cable from battery and wait for at least 60 seconds before starting work. <Ref. to NT-5, BATTERY, NOTE, Note.>


##### NOTE:

For models other than STI model, disconnect the ground terminal from battery sensor.

- 2) Remove the trim panel - front door. <Ref. to EI-56, FRONT DOOR, REMOVAL, Door Trim.>
- 3) Remove the sealing cover - front door. <Ref. to EB-32, REMOVAL, Front Sealing Cover.>
- 4) Remove the front door inner pad (a).

##### CAUTION:

**If the clip is damaged, replace it with a new part because the panel assembly - front door may be deformed.**

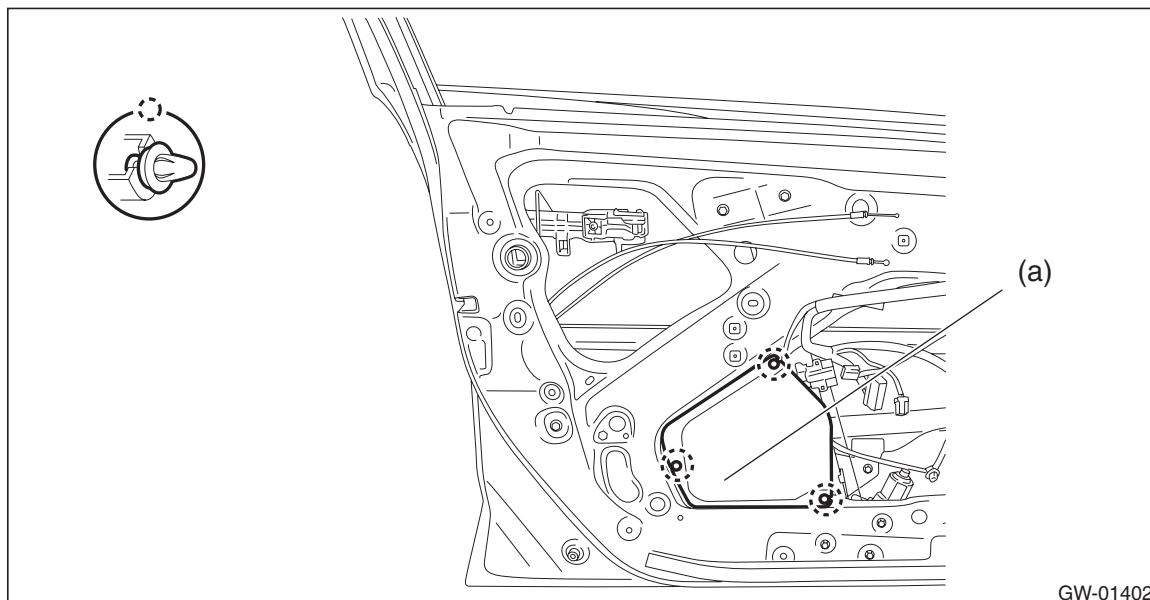

- 5) Connect the battery ground terminal. <Ref. to NT-5, BATTERY, NOTE, Note.>

##### NOTE:

For models other than STI model, connect the ground terminal to battery sensor.

# Front Door Glass


## GLASS/WINDOWS/MIRRORS

### 6) Remove the glass assembly - front door.

(1) Connect the switch - power window and then turn the ignition switch to ON.

(2) Operate the switch - power window to move the glass assembly - front door to the position where the mounting bolts can be seen.


(3) Remove the mounting bolts from the glass assembly - front door.

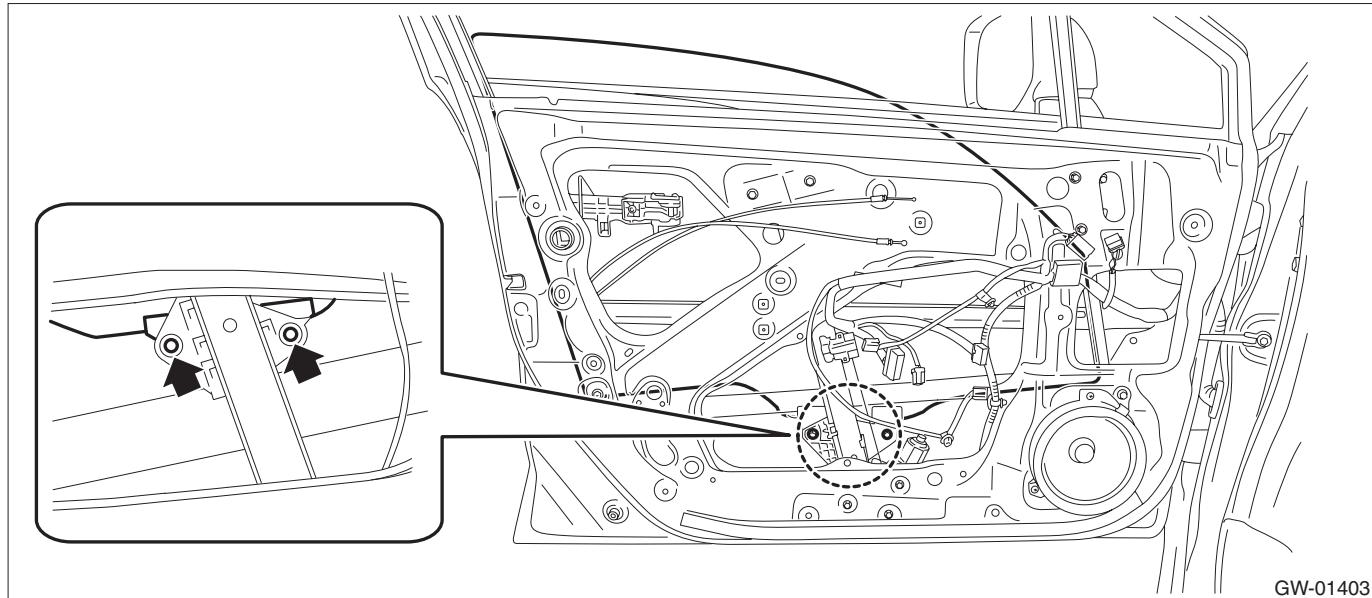

(4) While tilting the glass, remove the glass assembly - front door.

#### CAUTION:

**Avoid impact and damage to the glass assembly - front door.**

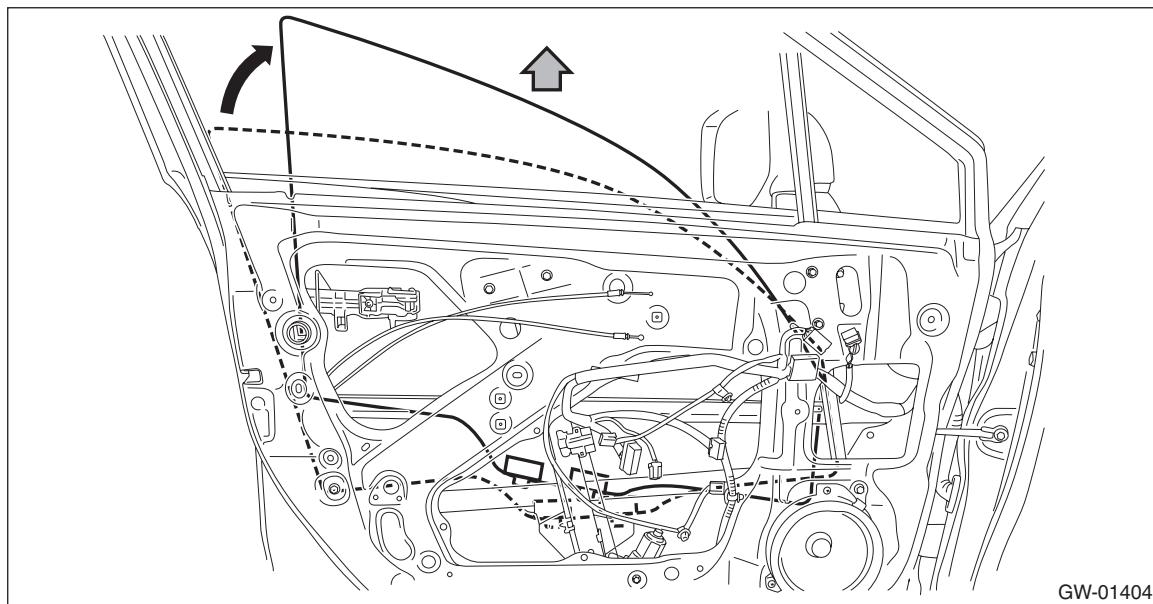


# Front Door Glass


## GLASS/WINDOWS/MIRRORS

7) Remove the glass - front door partition.

(1) Remove the bolts and screws, and then remove the running channel - front door and the sash COMPL - partition.

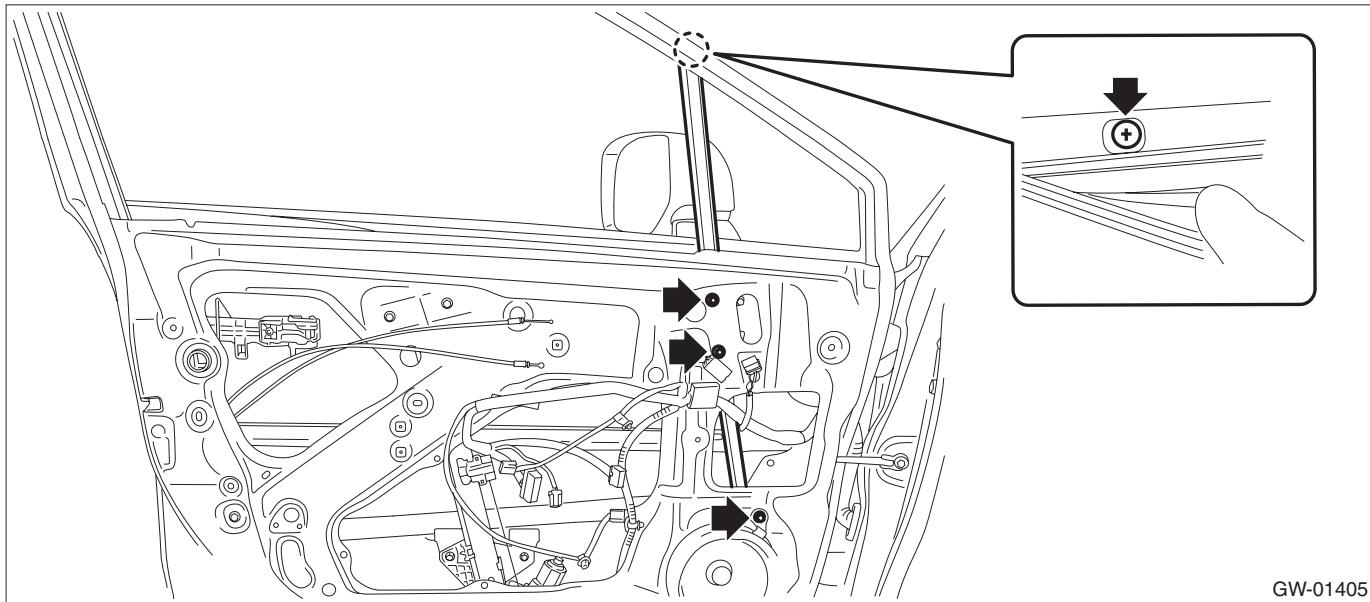

(2) Remove the glass - front door partition.

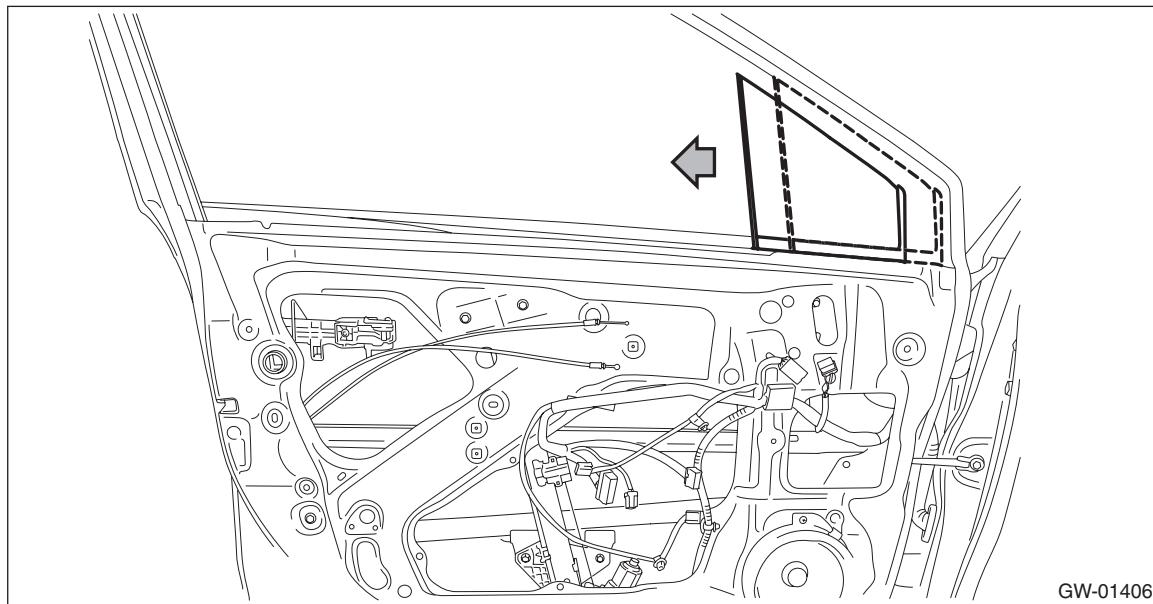

## B: INSTALLATION

- 1) Install the glass - front door partition.

***Tightening torque:***

**7.5 N·m (0.8 kgf-m, 5.5 ft-lb)**

- 2) Install the running channel - front door and the sash COMPL - partition.

**CAUTION:**

**Check that the running channel - front door is securely fixed to the panel assembly - front door and to the sash COMPL - partition.**

- 3) Install the glass assembly - front door.

***Tightening torque:***

**7.5 N·m (0.8 kgf-m, 5.5 ft-lb)**

- 4) Install the front door inner pad.
- 5) Install the sealing cover - front door.
- 6) Install the trim panel - front door.
- 7) Connect the battery ground terminal. <Ref. to NT-5, BATTERY, NOTE, Note.>

**NOTE:**

For models other than STI model, connect the ground terminal to battery sensor.