



2. Air Cleaner Element

A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the air intake duct. <Ref. to IN(STI)-11, REMOVAL, Air Intake Duct.>
- 3) Remove the air flow and intake air temperature sensor harness (A) from the air cleaner case (front).
- 4) Remove the clips (B) from the air cleaner case (front).

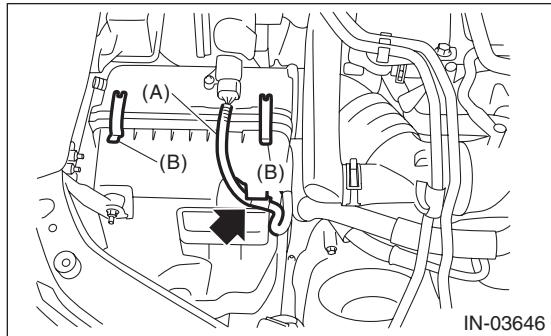

- 5) Open the air cleaner case, and remove the air cleaner element.

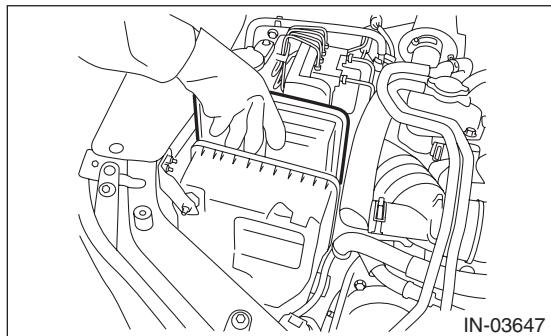

B: INSTALLATION


Install in the reverse order of removal.

CAUTION:

Be sure to use SUBARU genuine air cleaner element depending on the engine type when replacing the air cleaner elements. Using other air cleaner element may affect the engine performance.

NOTE:

- Check that there are no foreign objects in the air cleaner case.
- When setting the air cleaner case (rear), align the protrusion of the air cleaner case (rear) to the air cleaner case (front) to insert.

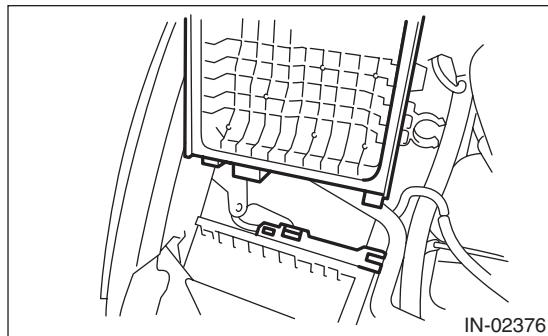

C: INSPECTION

- 1) Check that the air cleaner element has no deformation, cracks or other damages.
- 2) Check the air cleaner element for excessive dirt.