


2. Relay and Fuse

A: LOCATION

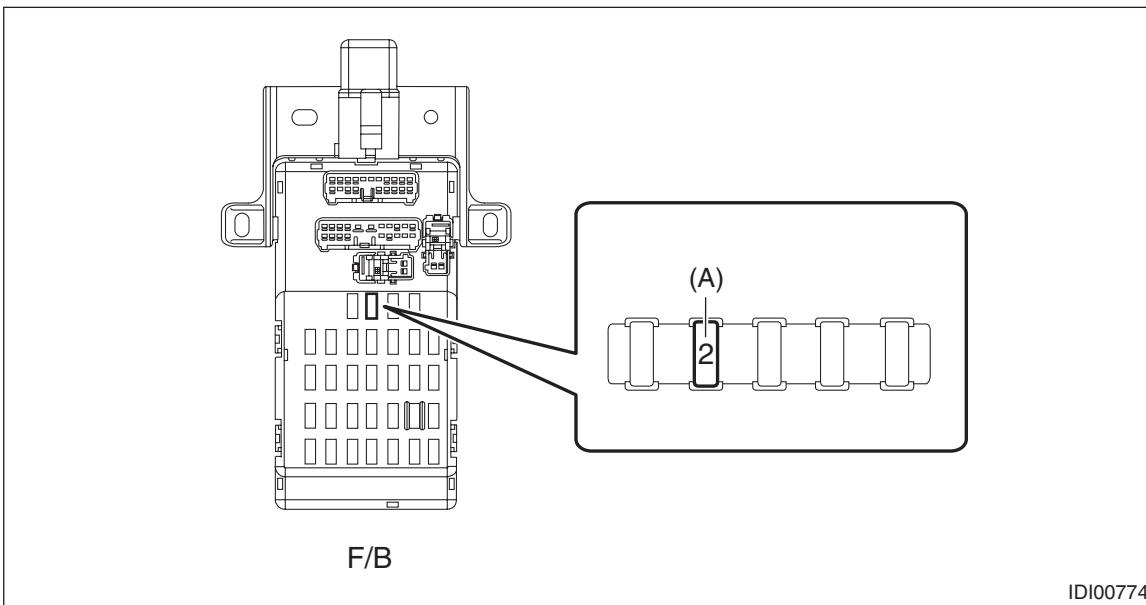

IDI00774

Relay & fuse box	Fuse 7.5 A (combination meter, MFD)	(A)
------------------	-------------------------------------	-----

NOTE:

For other related fuses, refer to the wiring diagram. <Ref. to WI-28, Power Supply Circuit.>

B: INSPECTION

1. CHECK FUSE

- 1) Remove the fuse and inspect visually.
- 2) If the fuse is blown out, replace the fuse.

NOTE:

If the fuse is blown again, check the system wiring harness.