

5. Combination Meter

A: REMOVAL


1) Disconnect the ground cable from battery. <Ref. to NT-5, BATTERY, NOTE, Note.>

NOTE:

For models other than STI model, disconnect the ground terminal from battery sensor.

2) Release the lock, tilt the steering column to the lowest end and fully extend the column by the telescopic system.

3) Release the screws, clips and claws, and remove the visor - combination meter.

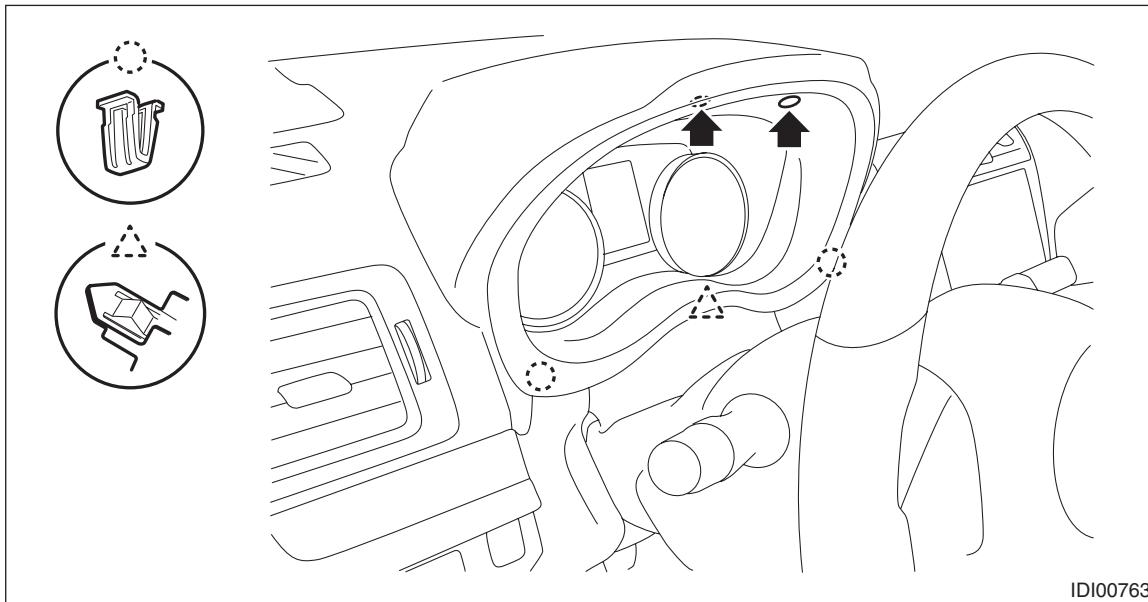


4) Remove the combination meter assembly.

CAUTION:

- Be careful not to damage the meter or instrument panel.
- Pay particular attention to avoid damaging the meter glass.


(1) Remove the screws.

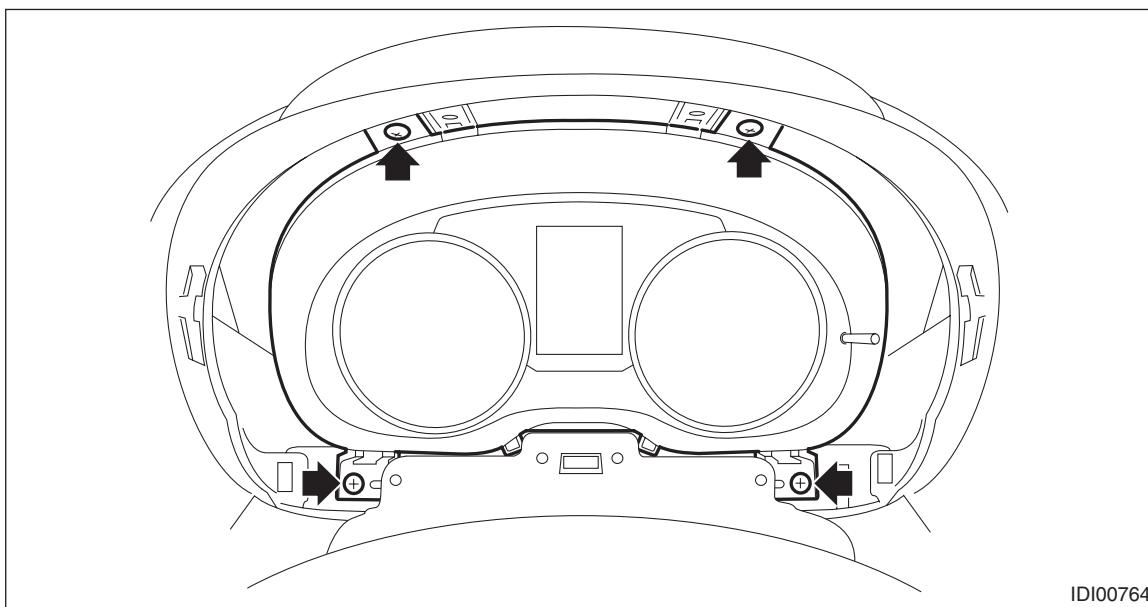

Combination Meter

INSTRUMENTATION/DRIVER INFO

(2) Pull the combination meter assembly toward you and disconnect the connector.

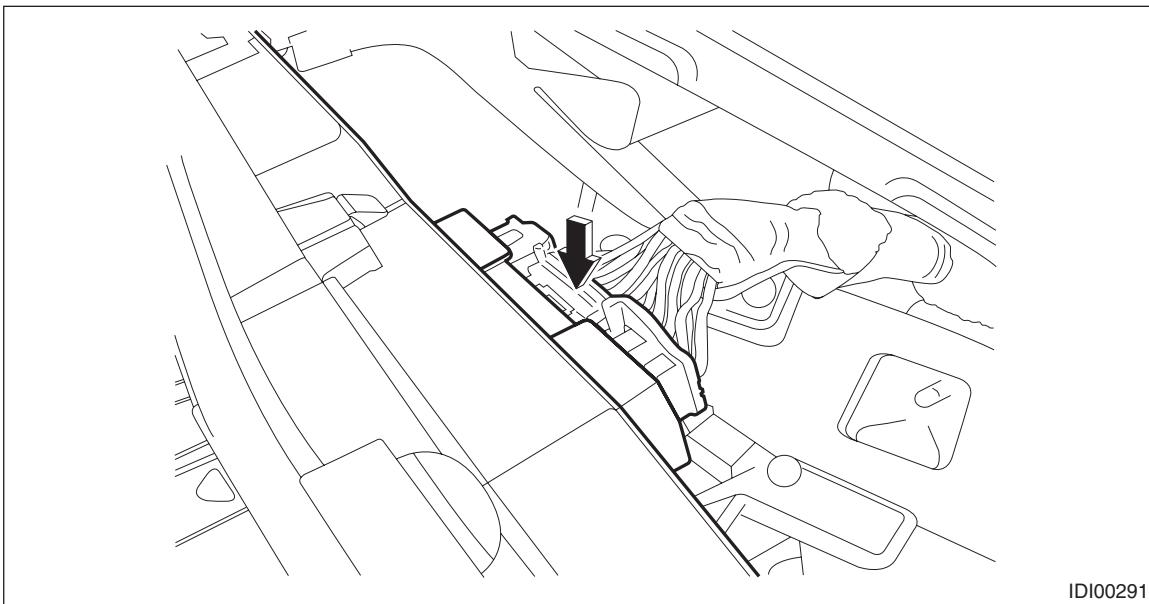

B: INSTALLATION

CAUTION:

- Make sure the electrical connector is connected securely.
- Make sure that each meter operates normally.
- When the combination meter assembly has been replaced, be sure to perform the following operations.
 - For keyless entry model except for C0, be sure to perform the registration of immobilizer. For the relevant procedures, refer to the “REGISTRATION MANUAL FOR IMMOBILIZER”.
 - Be sure to reset the ODO fuel economy value of the multi-function display (MFD). <Ref. to IDI-12, ODO FUEL ECONOMY VALUE RESET, OPERATION, Multi-function Display (MFD) System.>

- 1) Install the combination meter assembly.
- 2) Install the visor - combination meter.
- 3) Connect the battery ground terminal. <Ref. to NT-5, BATTERY, NOTE, Note.>

NOTE:


For models other than STI model, connect the ground terminal to battery sensor.

C: DISASSEMBLY


CAUTION:

- Use gloves to avoid damage and getting fingerprints on the glass surface and meter surfaces.
- Be careful not to apply excessive force to the trip knob.
- Be sure not to touch the meter indicator needle.
- Because LEDs are used for all of warning lights and indicator lights, they are not removable from the meter - main assembly.

1) Release the claws, and then remove the glass - combination meter.

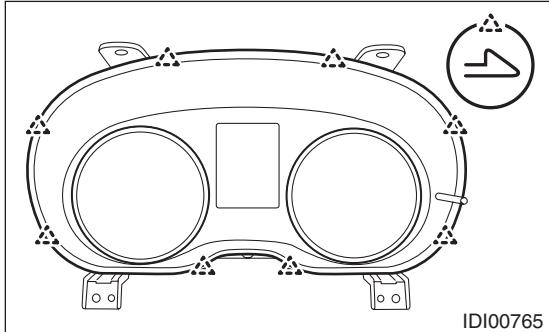

2) Release the claws, and then remove the visor - combination meter.

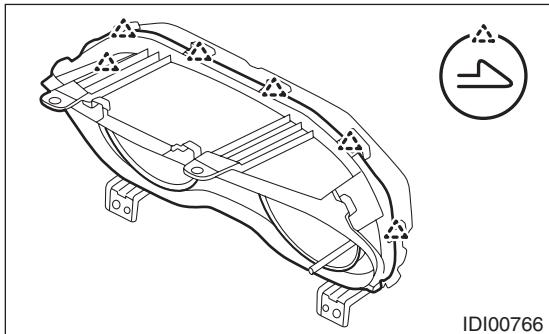

D: ASSEMBLY

- 1) Install the visor - combination meter.
- 2) Install the glass - combination meter.