

8. Front Inner Remote

A: REMOVAL

1) Disconnect the ground cable from battery and wait for at least 60 seconds before starting work. <Ref. to NT-5, BATTERY, NOTE, Note.>

NOTE:


For models other than STI model, disconnect the ground terminal from battery sensor.

2) Remove the trim panel - front door. <Ref. to EI-56, FRONT DOOR, REMOVAL, Door Trim.>

3) Remove the screw, and remove the remote assembly - door.

CAUTION:

The remote assembly - door is tightened with the plate. Be careful not to drop or damage the part.

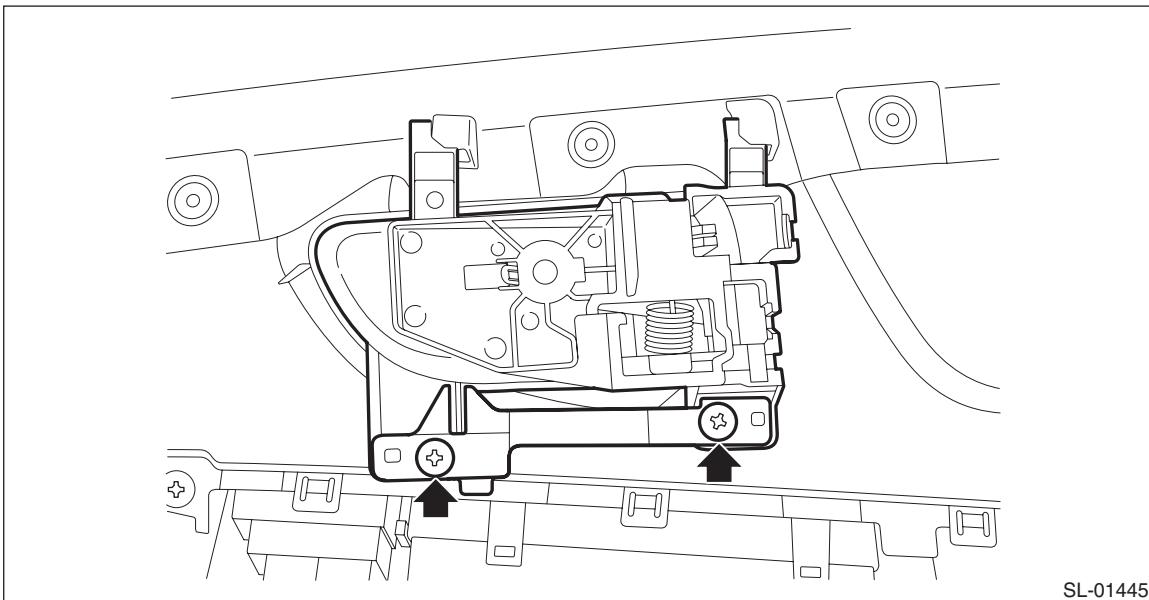

B: INSTALLATION

1) Before installation, check the following items.

- Cable is free from deformation such as fray.
- Grease is applied sufficiently to cable joints.

If grease is insufficient, add it as necessary before assembling the cable.

2) Install the remote assembly - door.

CAUTION:

Securely install the plate.

- 3) Install the trim panel - front door.
- 4) Connect the battery ground terminal. <Ref. to NT-5, BATTERY, NOTE, Note.>

NOTE:

For models other than STI model, connect the ground terminal to battery sensor.

C: INSPECTION

Check if the remote handle operates normally.

- If the lever is faulty, replace the remote handle.
- If the cable is deformed, replace the latch & actuator assembly - front.