

13. Rear Door Latch and Door Lock Actuator Assembly


A: REMOVAL

- 1) Raise the glass assembly - rear door to the top position.
- 2) Disconnect the ground cable from battery. <Ref. to NT-5, BATTERY, NOTE, Note.>

NOTE:

For models other than STI model, disconnect the ground terminal from battery sensor.

- 3) Remove the trim panel - rear door. <Ref. to EI-57, REAR DOOR, REMOVAL, Door Trim.>
- 4) Remove the sealing cover - rear door. <Ref. to EB-41, REMOVAL, Rear Sealing Cover.>
- 5) Remove the glass assembly - rear door. <Ref. to GW-34, REMOVAL, Rear Door Glass.>
- 6) Remove the screws to remove the latch & actuator assembly - rear.

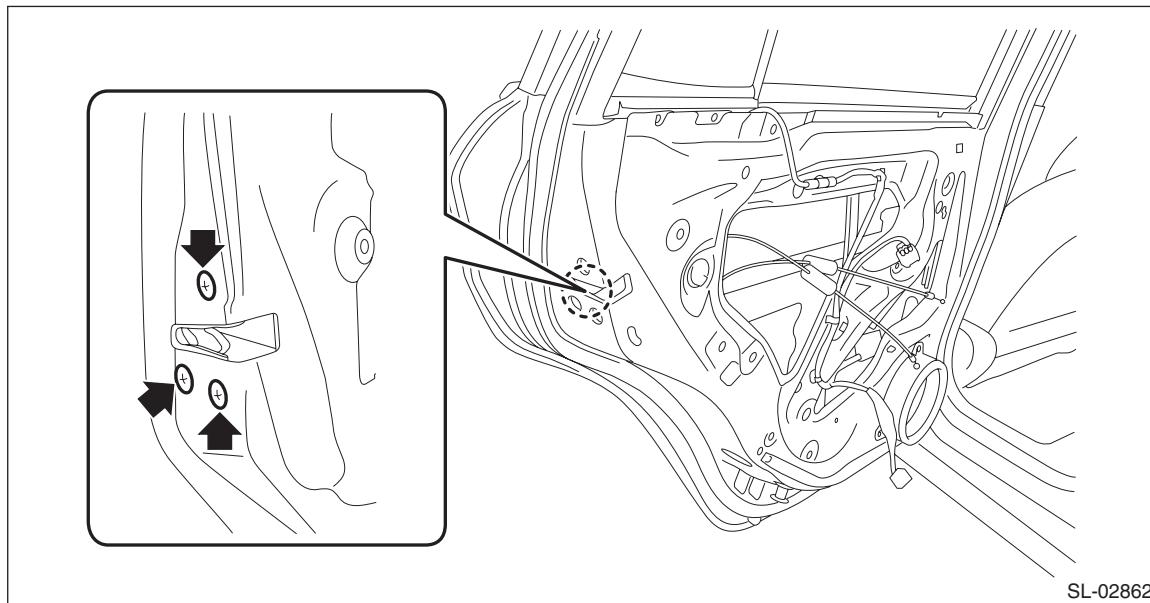

B: INSTALLATION

NOTE:

Make sure the child safety lock works correctly after installation.

- 1) Before installation, check the following items.
 - Cable is free from deformation.
 - Grease is applied sufficiently to lever joints.If grease is insufficient, add it as necessary before assembling.
- 2) Install the latch and actuator assembly - rear.

Tightening torque:

6.5 N·m (0.7 kgf-m, 5.2 ft-lb)

- 3) Install the glass assembly - rear door. <Ref. to GW-36, INSTALLATION, Rear Door Glass.>
- 4) Install the sealing cover - rear door.
- 5) Install the trim panel - rear door.
- 6) Connect the battery ground terminal. <Ref. to NT-5, BATTERY, NOTE, Note.>

NOTE:

For models other than STI model, connect the ground terminal to battery sensor.

Rear Door Latch and Door Lock Actuator Assembly

SECURITY AND LOCKS

C: INSPECTION

1. LATCH


Check if the latch operates normally.

If the cable is faulty, replace the latch & actuator assembly - rear.

2. ACTUATOR

1) Check door lock operation

Check the door lock operation when battery voltage is applied between the connectors.

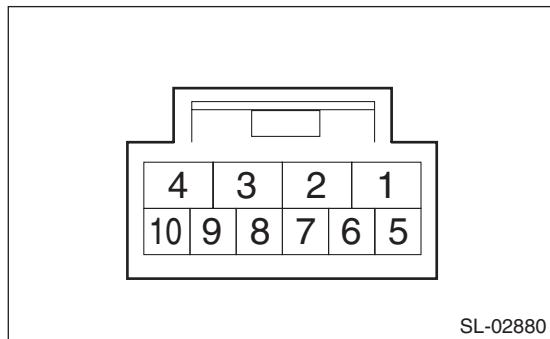

Terminal No.	Inspection conditions	Standard
4 (+) — 1 (-)	Apply battery voltage.	LOCK
1 (+) — 4 (-)		UNLOCK

2) If it does not operate properly as a result of inspection, replace the latch & actuator assembly - rear.