

## 14. Trunk Opener Switch

### A: REMOVAL

1) Disconnect the ground cable from battery and wait for at least 60 seconds before starting work. <Ref. to NT-5, BATTERY, NOTE, Note.>


#### NOTE:

For models other than STI model, disconnect the ground terminal from battery sensor.


2) Remove the cover assembly - instrument panel LWR driver OUT. <Ref. to EI-61, REMOVAL, Instrument Panel Lower Cover.>

3) Remove the trunk opener switch.

(1) Remove the screw, release the claws, and then remove the panel - switch.

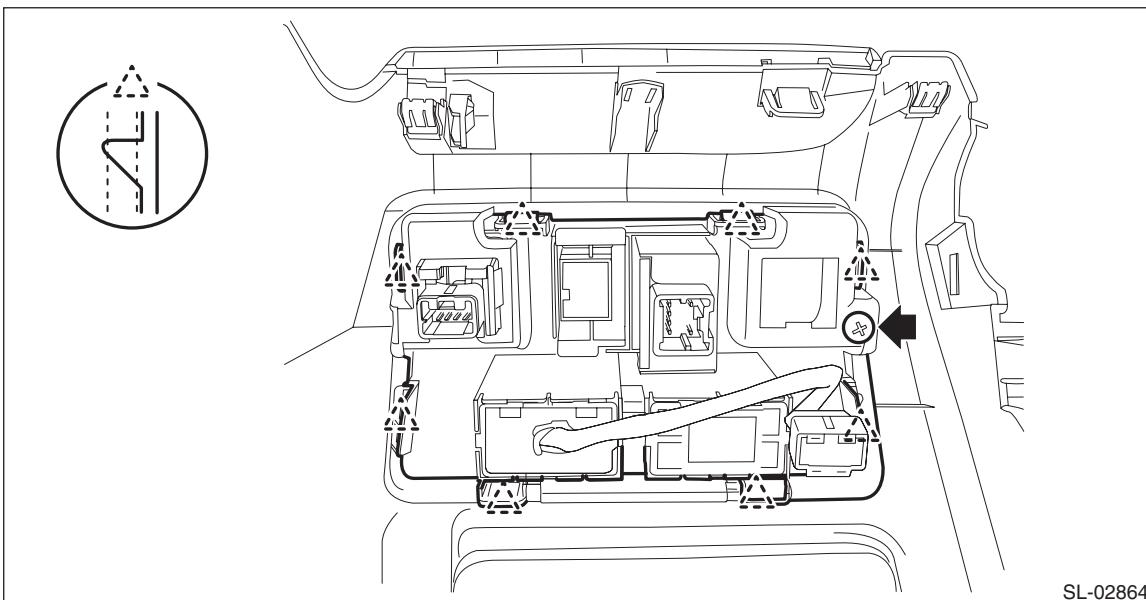

(2) Release the claws and remove the trunk opener button.

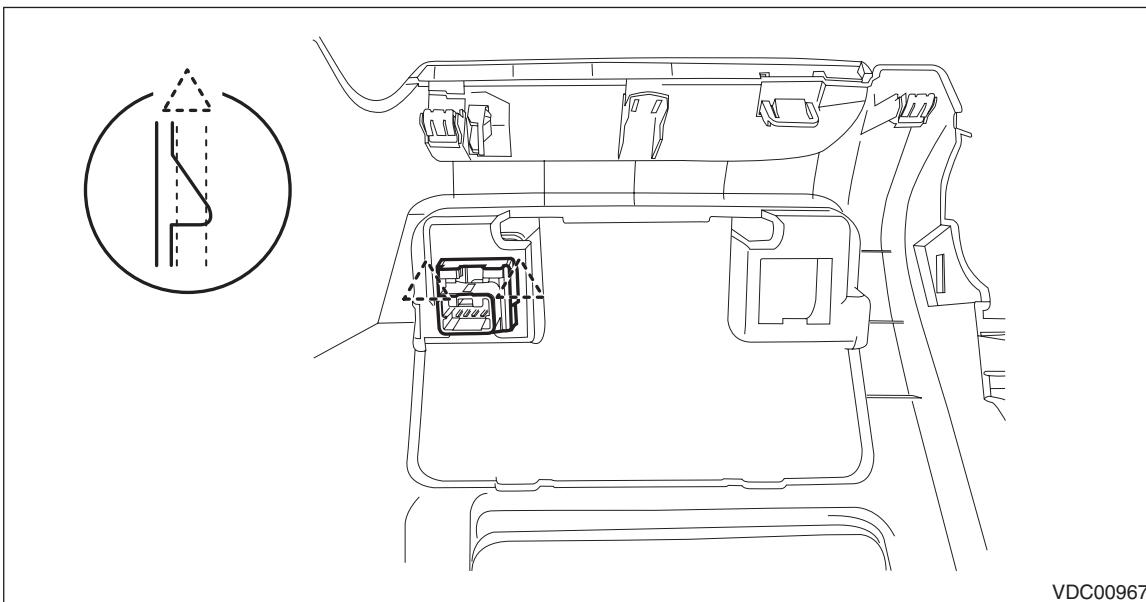

## B: INSTALLATION

- 1) Install the switch - trunk opener.
- 2) Install the panel - switch.
- 3) Install the cover assembly - instrument panel LWR driver OUT. <Ref. to EI-62, INSTALLATION, Instrument Panel Lower Cover.>
- 4) Connect the battery ground terminal. <Ref. to NT-5, BATTERY, NOTE, Note.>

NOTE:


For models other than STI model, connect the ground terminal to battery sensor.

## C: INSPECTION

- 1) Measure the resistance between connector terminals.

***Preparation tool:***

***Circuit tester***

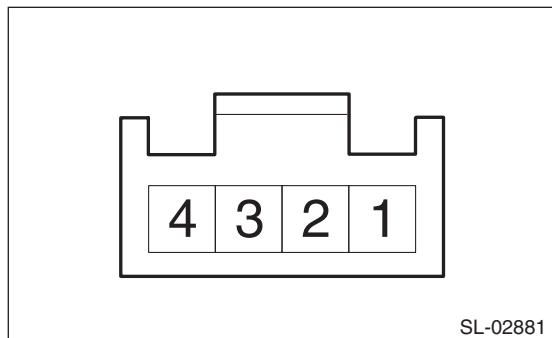

Terminal No.	Inspection conditions	Standard
2 — 3	Switch OFF	1 MΩ or more
	Switch ON	Less than 1 Ω

- 2) If the inspection result is not within the standard, replace the switch - trunk opener.