

## 22. Keyless Entry Control Module

### A: REMOVAL

- 1) Disconnect the ground cable from battery. <Ref. to NT-5, BATTERY, NOTE, Note.>

NOTE:

For models other than STI model, disconnect the ground terminal from battery sensor.

- 2) Remove the trim panel assembly - rear shelf. <Ref. to EI-92, REMOVAL, Rear Shelf Trim.>


- 3) Remove the keyless entry control module.

(1) Disconnect the connector.

(2) Remove the bolt and then remove the keyless entry control module.

NOTE:

For models with power amplifier, installation position of the keyless entry control module is different.

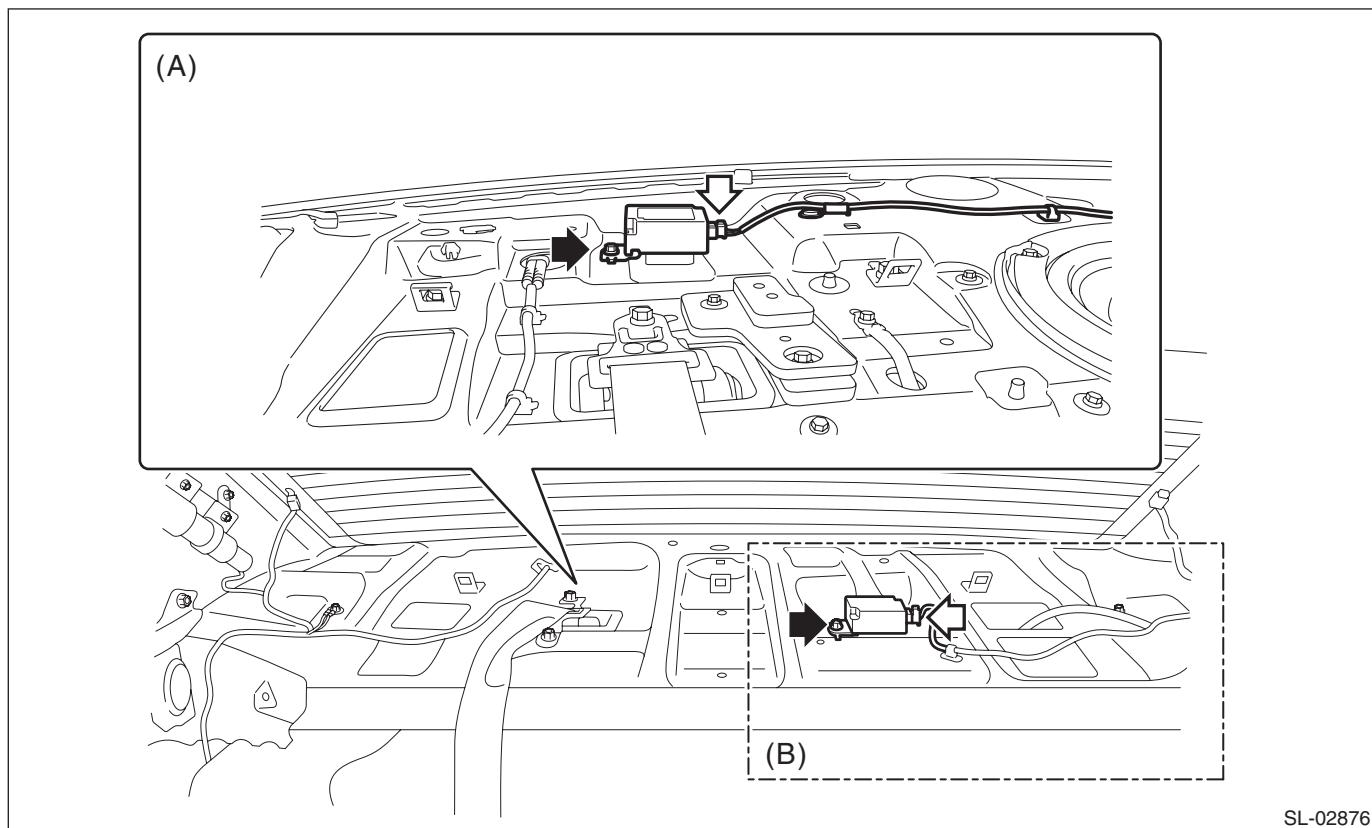

(A) Model with power amplifier

(B) Model without power amplifier

SL-02876

### B: INSTALLATION

- 1) Install the keyless entry control module.

**Tightening torque:**

**13 N·m (1.3 kgf·m, 9.6 ft-lb)**

- 2) Install the trim panel assembly - rear shelf.

- 3) Connect the battery ground terminal. <Ref. to NT-5, BATTERY, NOTE, Note.>

NOTE:

For models other than STI model, connect the ground terminal to battery sensor.