

28. Immobilizer Antenna

A: REMOVAL

1. MODEL WITHOUT KEYLESS ACCESS


1) Disconnect the ground cable from battery and wait for at least 60 seconds before starting work. <Ref. to NT-5, BATTERY, NOTE, Note.>

NOTE:

For models other than STI model, disconnect the ground terminal from battery sensor.


2) Remove the cover assembly - column.

(1) Remove the clips, and remove the cover - column.

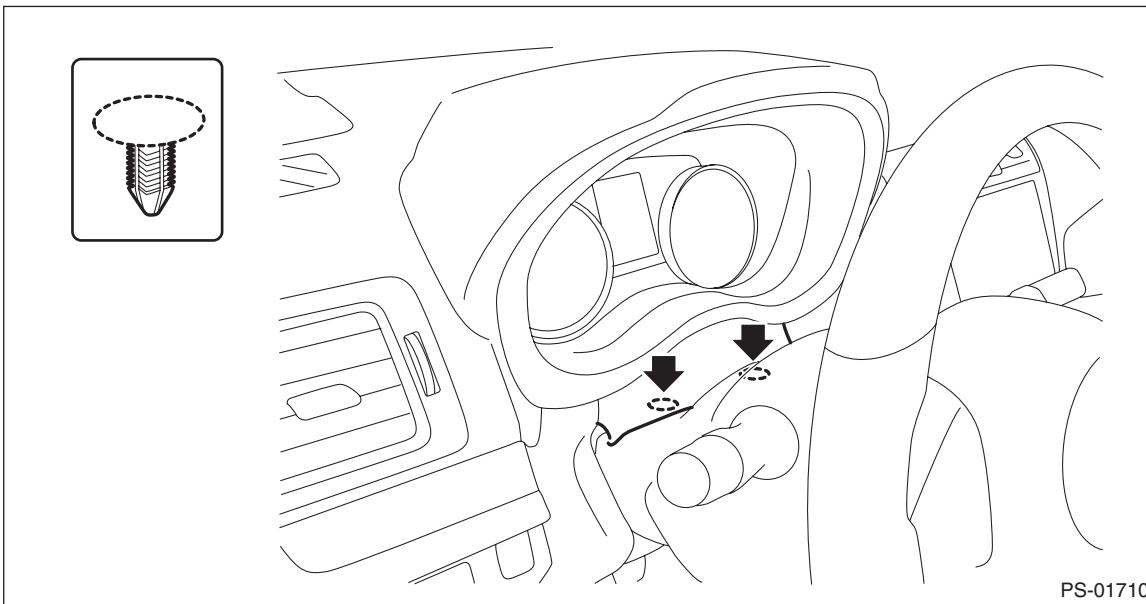

(2) Remove the screws by turning the steering wheel to right and left.

(3) Release the claw, and remove the cover assembly - column UPR and the cover assembly - column LWR.

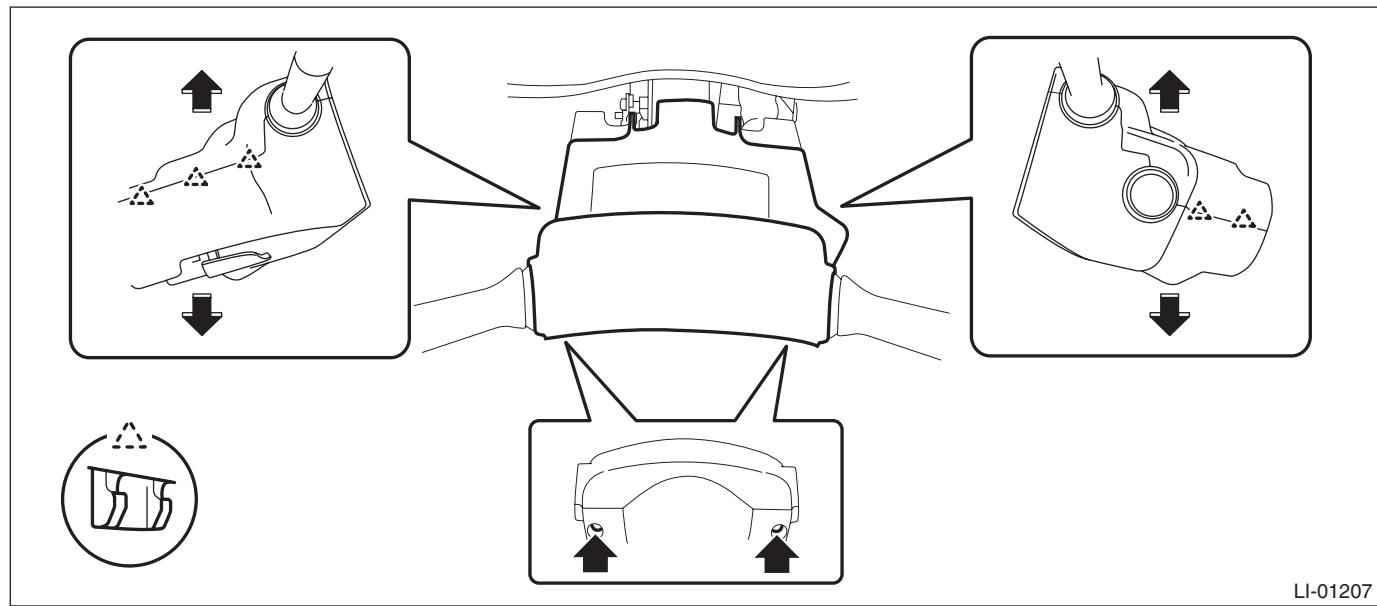


3) Remove the immobilizer antenna assembly.

(1) Disconnect the connector.

(2) Release two claws using a flat tip screwdriver or similar tool wrapped with a protection tape, and remove the immobilizer antenna assembly.

CAUTION:

Do not apply excessive force to disengage the lock of immobilizer antenna assembly. Otherwise they may be broken because those parts are the products made of a plastic.

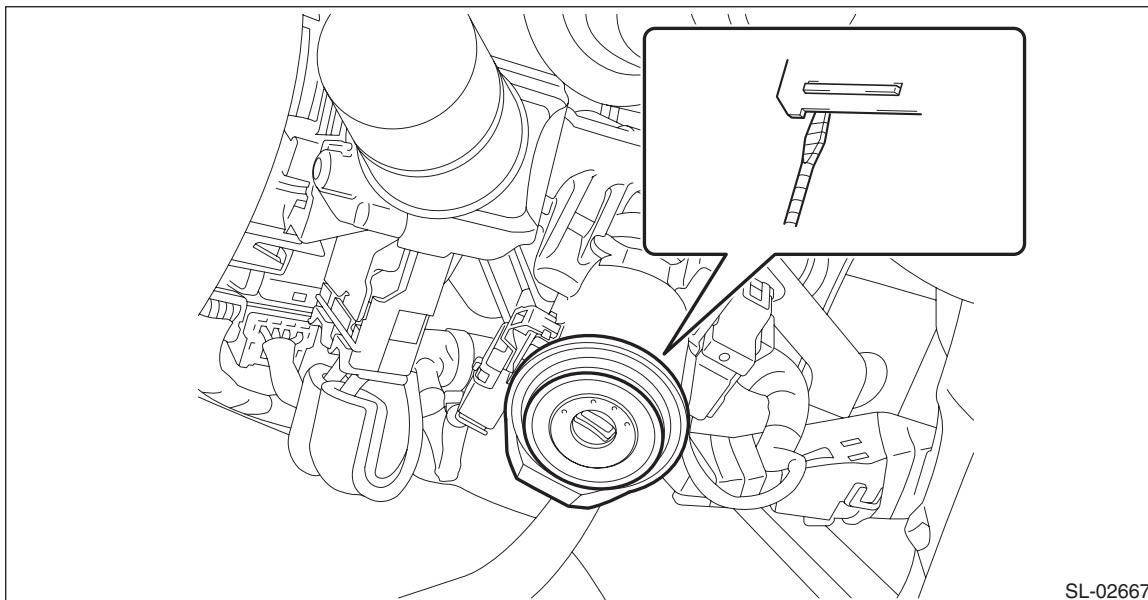

Immobilizer Antenna

SECURITY AND LOCKS

2. MODEL WITH KEYLESS ACCESS

NOTE:

Immobilizer antenna is integrated with the push button ignition switch.

- 1) Disconnect the ground cable from battery and wait for at least 60 seconds before starting work. <Ref. to NT-5, BATTERY, NOTE, Note.>


NOTE:

For models other than STI model, disconnect the ground terminal from battery sensor.

- 2) Remove the cover assembly - instrument panel LWR driver. <Ref. to EI-61, REMOVAL, Instrument Panel Lower Cover.>


- 3) Remove the push button ignition switch.

- (1) Disconnect the connector, and remove the aspirator hose.

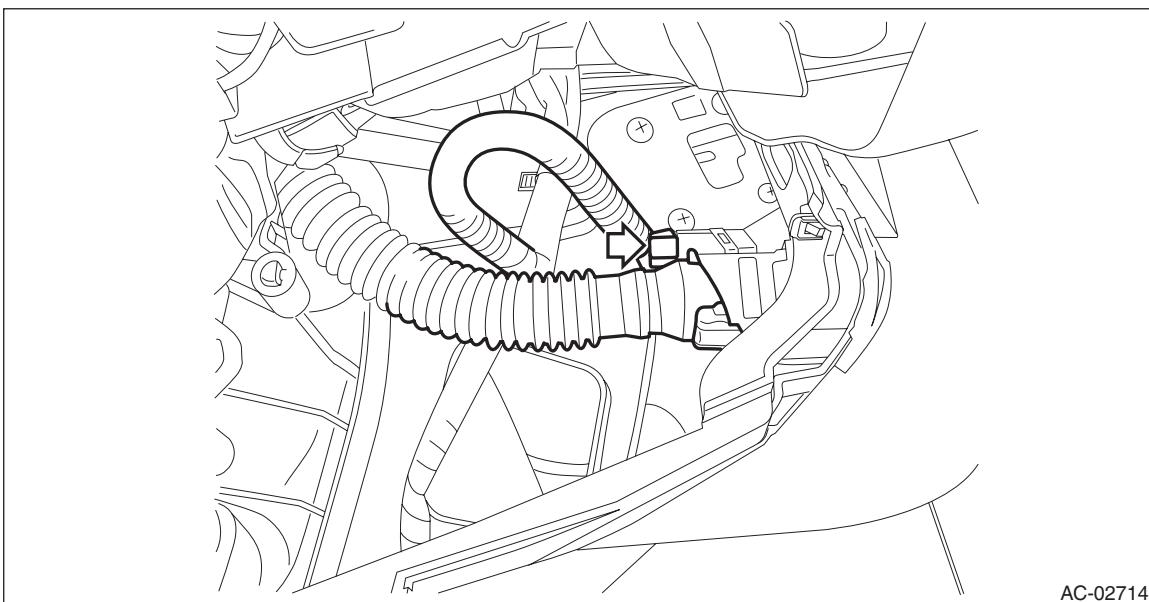

- (2) Release the claws, and then remove the panel - switch.

- (3) Release the claws, and then remove the push button ignition switch from the panel - switch.

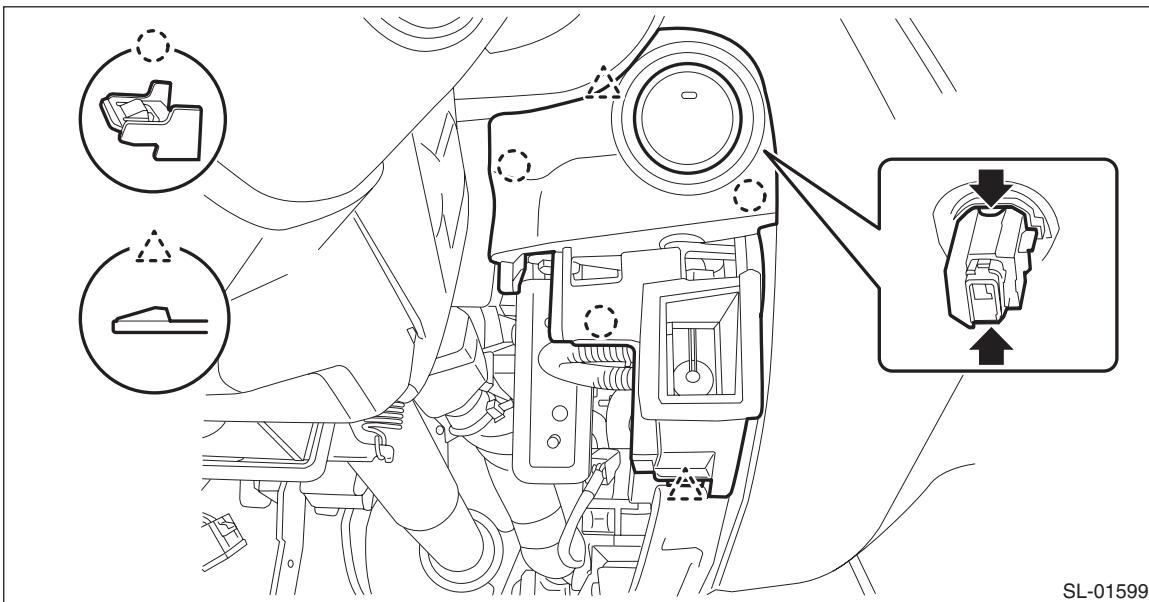

B: INSTALLATION

1. MODEL WITHOUT KEYLESS ACCESS

- 1) Install the immobilizer antenna assembly.
- 2) Install the cover assembly - column.
- 3) Connect the battery ground terminal. <Ref. to NT-5, BATTERY, NOTE, Note.>

NOTE:

For models other than STI model, connect the ground terminal to battery sensor.

2. MODEL WITH KEYLESS ACCESS

- 1) Install the push button ignition switch to the cover assembly - instrument panel LWR driver INN.
- 2) Install the cover assembly - instrument panel LWR driver.
- 3) Connect the battery ground terminal. <Ref. to NT-5, BATTERY, NOTE, Note.>

NOTE:

For models other than STI model, connect the ground terminal to battery sensor.