

31. Trunk Opener Button

A: REMOVAL


- 1) Disconnect the ground cable from battery. <Ref. to NT-5, BATTERY, NOTE, Note.>

NOTE:

For models other than STI model, disconnect the ground terminal from battery sensor.

- 2) Remove the garnish - trunk. <Ref. to EI-51, REMOVAL, Trunk Lid Garnish.>

- 3) Release the locks at both ends of the trunk opener button by pushing them with a flat tip screwdriver.

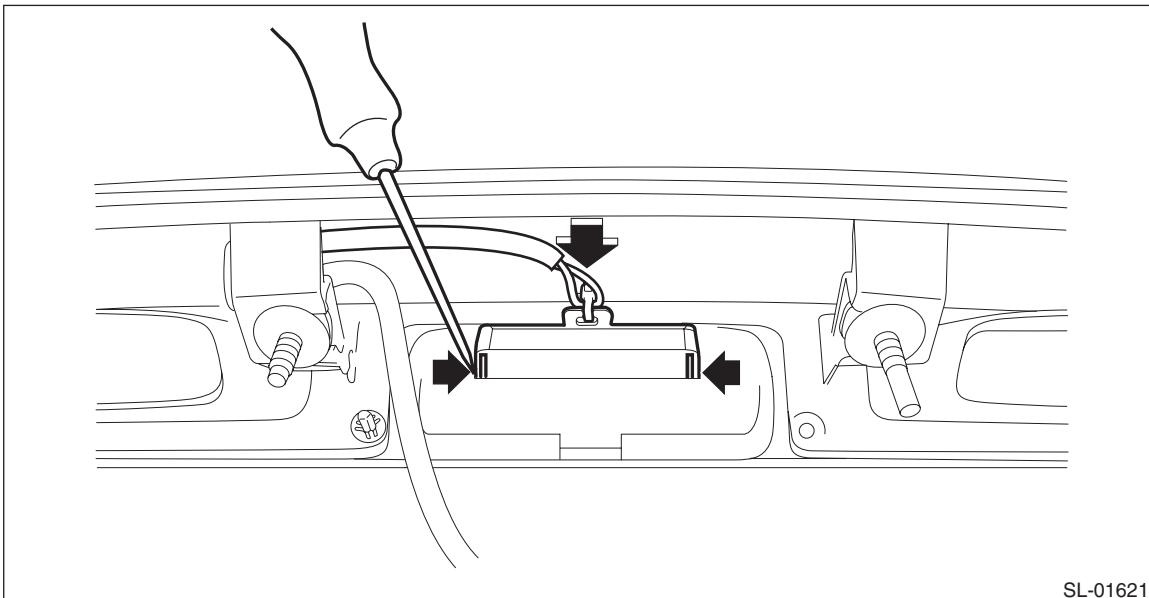

B: INSTALLATION

- 1) Install the trunk opener button to the garnish - trunk.
- 2) Install the garnish - trunk.
- 3) Connect the battery ground terminal. <Ref. to NT-5, BATTERY, NOTE, Note.>

NOTE:

For models other than STI model, connect the ground terminal to battery sensor.

C: INSPECTION

- 1) Display the current data using the Subaru Select Monitor.
- 2) Check that the display changes when the trunk opener button is operated.
- 3) If the display is not correct as the result of inspection, refer to "General Diagnostic Table" of the "KEYLESS ACCESS WITH PUSH BUTTON START SYSTEM (DIAGNOSTICS)" section. <Ref. to KPS(diag)-111, KEYLESS ACCESS SYSTEM, INSPECTION, General Diagnostic Table.>