

32. Receiver

A: REMOVAL

NOTE:

Except for model with keyless entry

- 1) Disconnect the ground cable from battery. <Ref. to NT-5, BATTERY, NOTE, Note.>

NOTE:

For models other than STI model, disconnect the ground terminal from battery sensor.

- 2) Remove the trim panel assembly - rear shelf. <Ref. to EI-92, REMOVAL, Rear Shelf Trim.>


- 3) Remove the receiver assembly.

(1) Disconnect the connector.

(2) Remove the bolt and remove the receiver assembly.

NOTE:

For models with power amplifier, installation position of the receiver assembly is different.

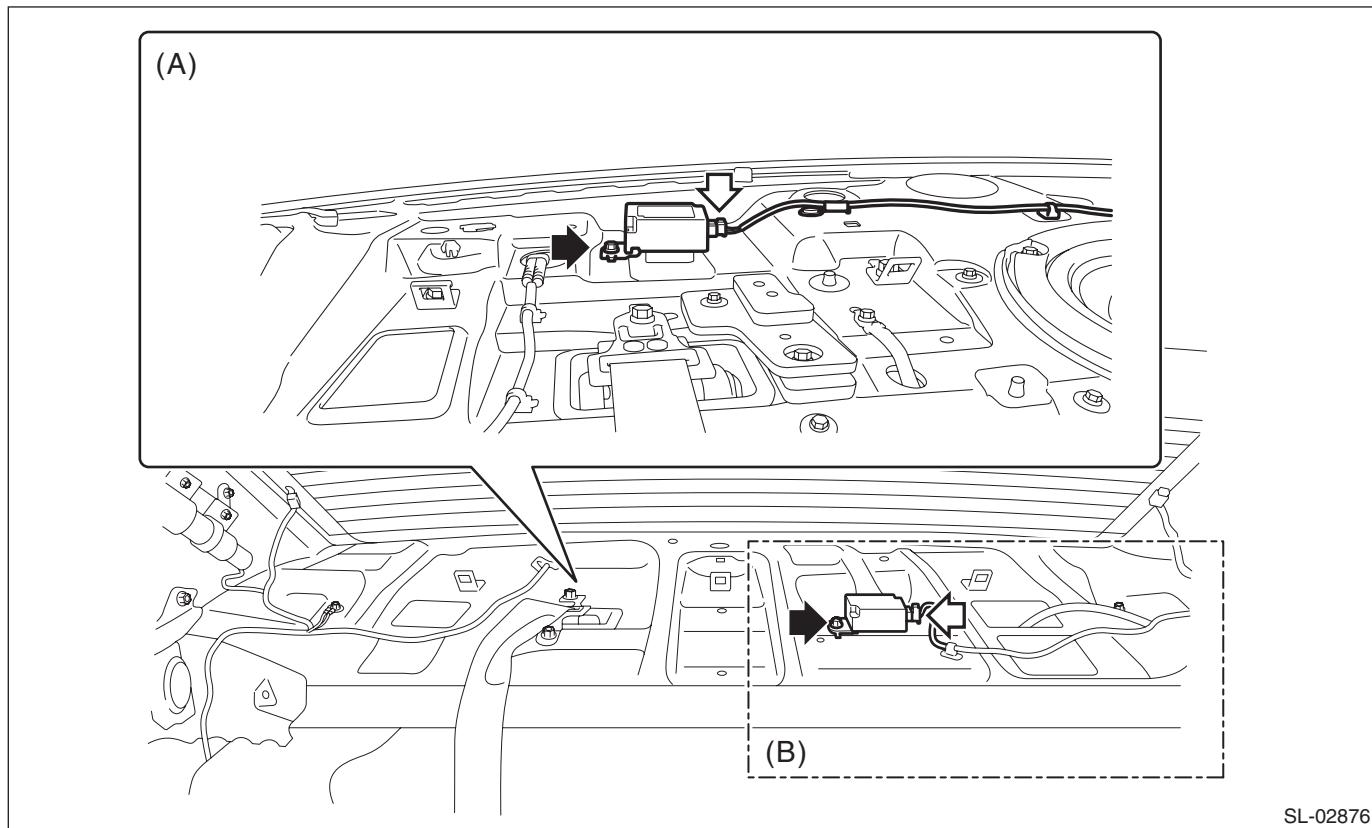

SL-02876

(A) Model with power amplifier

(B) Model without power amplifier

B: INSTALLATION

- 1) Install the receiver assembly.

Tightening torque:

13 N·m (1.3 kgf-m, 9.6 ft-lb)

- 2) Install the trim panel assembly - rear shelf.

- 3) Connect the battery ground terminal. <Ref. to NT-5, BATTERY, NOTE, Note.>

NOTE:

For models other than STI model, connect the ground terminal to battery sensor.

C: INSPECTION

- 1) Check if the door lock operates when the touch sensor of the door outer handle and trunk opener button is operated.
- 2) If the system does not operate normally as the result of inspection, refer to “General Diagnostic Table” of the “KEYLESS ACCESS WITH PUSH BUTTON START SYSTEM (DIAGNOSTICS)” section. <Ref. to KPS(diag)-111, KEYLESS ACCESS SYSTEM, INSPECTION, General Diagnostic Table.>