

### 34.ID Code Box

#### A: NOTE

NOTE:

- Equipped on C0 model with keyless access.
- The ID code box is located at the place of security control module.

Refer to “Security Control Module” for operation procedures on ID code box. <Ref. to SL-72, Security Control Module.>