

### 40. Accessory Relay (Push Button Start)

#### A: REMOVAL

**CAUTION:**

Before handling the airbag module, refer to "CAUTION" of "General Description" in "AIRBAG SYSTEM". <Ref. to AB-9, CAUTION, General Description.>

1) Disconnect the ground cable from battery and wait for at least 60 seconds before starting work. <Ref. to NT-5, BATTERY, NOTE, Note.>


**NOTE:**

For models other than STI model, disconnect the ground terminal from battery sensor.


2) Remove the cover assembly - instrument panel LWR driver. <Ref. to EI-61, REMOVAL, Instrument Panel Lower Cover.>

3) Remove the knee airbag module. <Ref. to AB-35, REMOVAL, Knee Airbag Module.>

4) Release the lock and remove the fuse holder.

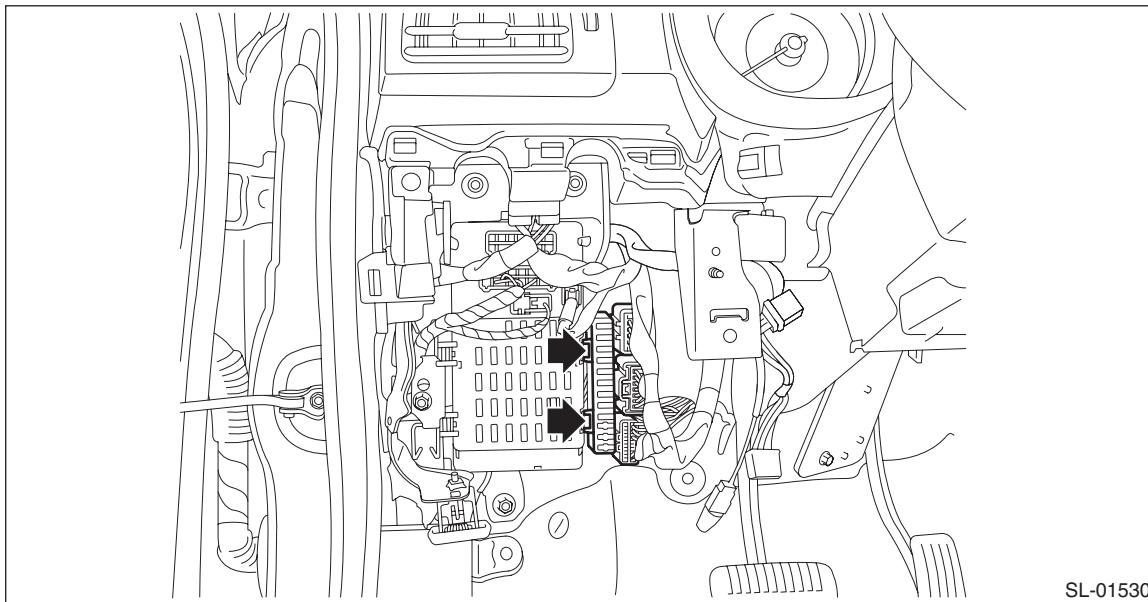

5) Remove the accessory relay (push button start) (A) from the relay and fuse box.

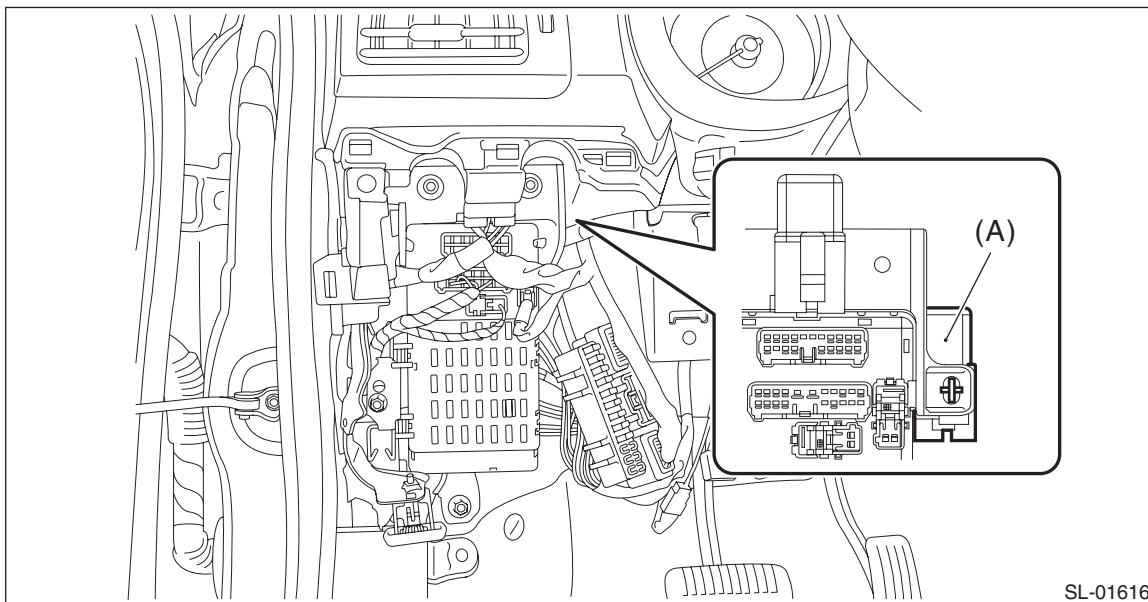

## B: INSTALLATION

### CAUTION:

Before handling the airbag module, refer to “CAUTION” of “General Description” in “AIRBAG SYSTEM”. <Ref. to AB-9, CAUTION, General Description.>

### NOTE:

Make sure that there are no differences from the contents of the current settings after installation. <Ref. to BC(diag)-15, LIST, Read Current Data.>

- 1) Install the accessory relay.
- 2) Install the fuse holder.
- 3) Install the knee airbag module.

### ***Tightening torque:***

***7.5 N·m (0.8 kgf·m, 5.5 ft-lb)***

- 4) Install the cover assembly - instrument panel LWR driver.
- 5) Connect the battery ground terminal. <Ref. to NT-5, BATTERY, NOTE, Note.>

### NOTE:

For models other than STI model, connect the ground terminal to battery sensor.

## C: INSPECTION

Refer to “CHECK RELAY” in “Relay and Fuse”. <Ref. to SL-9, CHECK RELAY, INSPECTION, Relay and Fuse.>