

## 9. Resonator Chamber

### A: REMOVAL

The resonator chamber and air cleaner case are integrated into one unit; therefore, refer to "Air Cleaner Case" for removal procedure. <Ref. to IN(STI)-9, REMOVAL, Air Cleaner Case.>

### B: INSTALLATION

The resonator chamber and air cleaner case are integrated into one unit; therefore, refer to "Air Cleaner Case" for installation procedure. <Ref. to IN(STI)-9, INSTALLATION, Air Cleaner Case.>

### C: INSPECTION

Check that the resonator chamber has no deformation, cracks or other damages.