

### 43. Function Setting (Customize)

#### A: OPERATION

##### Disabling/Activating the keyless access system

The following functions are disabled when the keyless access system functions are disabled:

- LOCK function performed by the operation of touch sensor on the door outer handle
- UNLOCK function by the door touch sensor
- Trunk lid open function by trunk opener button operation in the trunk lid lock condition
- Lockout prevention feature
- Warning function
- Engine starting control using keyless access collation

#### B: PROCEDURE

- 1) Check that the vehicle status is as follows:
  - Ignition switch OFF
  - One window is completely open
  - Keyless access system is activated (or disabled if re-activating)
- 2) Sit in the driver's seat with the door closed and press the door lock switch to UNLOCK once.
- 3) Open the driver's door within five seconds.
- 4) Within 5 seconds, with the driver's door opened, slowly press the door lock switch to UNLOCK twice.
- 5) Within 30 seconds, perform the closing → opening operation of the driver's door twice.
- 6) Within 30 seconds, with the driver's door opened, slowly press the door lock switch to UNLOCK twice.
- 7) Within 30 seconds, perform the closing → opening operation of the driver's door once.
- 8) Within five seconds, close the driver's door.

##### NOTE:

- Perform the same procedures to re-activate the keyless access system from the disabled condition.
- If the driver's door is opened or closed in step 4) and step 6), the cancel operation is disabled.