


Relay and Fuse

SUNROOF/T-TOP/CONVERTIBLE TOP (SUNROOF)

2. Relay and Fuse

A: LOCATION

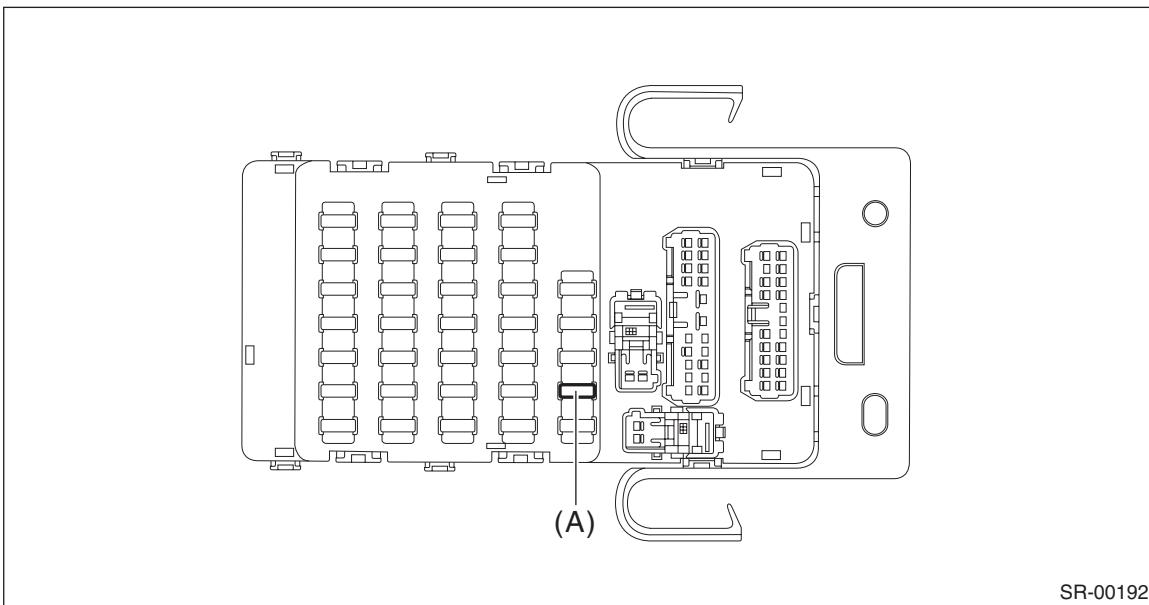

SR-00192

Relay & fuse box	Fuse 10A (IG 2)	(A)
------------------	-----------------	-----

NOTE:

For other related fuses, refer to the wiring diagram. <Ref. to WI-28, Power Supply Circuit.>

B: INSPECTION

1. CHECK FUSE

- 1) Remove the fuse and check visually.
- 2) If the fuse is blown out, replace the fuse.