

7. Sunroof Switch

A: REMOVAL


- 1) Disconnect the ground cable from battery. <Ref. to NT-5, BATTERY, NOTE, Note.>

NOTE:

For models other than STI model, disconnect the ground terminal from battery sensor.

- 2) Remove the light assembly - map. <Ref. to LI-60, REMOVAL, Spot Map Light.>

- 3) Release the claws and remove the sunroof switch from the light assembly - map.

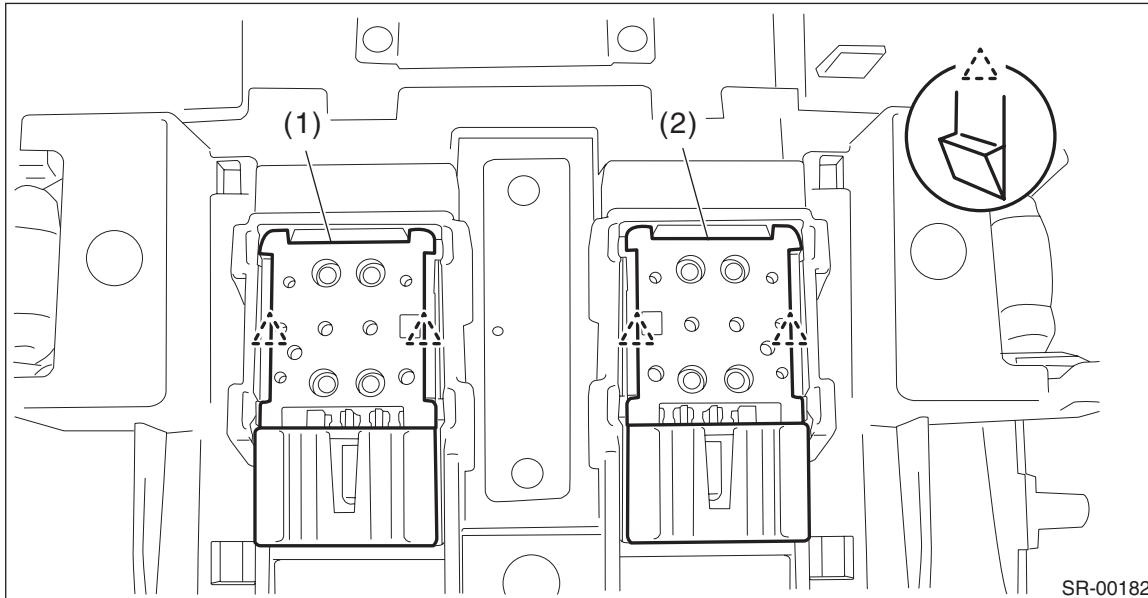

(1) Sunroof switch (tilt)

(2) Sunroof switch (slide)

B: INSTALLATION

- 1) Install the sunroof switch.
- 2) Install the light assembly - map.
- 3) Connect the battery ground terminal. <Ref. to NT-5, BATTERY, NOTE, Note.>

NOTE:

For models other than STI model, connect the ground terminal to battery sensor.


Sunroof Switch

SUNROOF/T-TOP/CONVERTIBLE TOP (SUNROOF)

C: INSPECTION

- 1) Measure the resistance between connector terminals.

Preparation tool:
Circuit tester

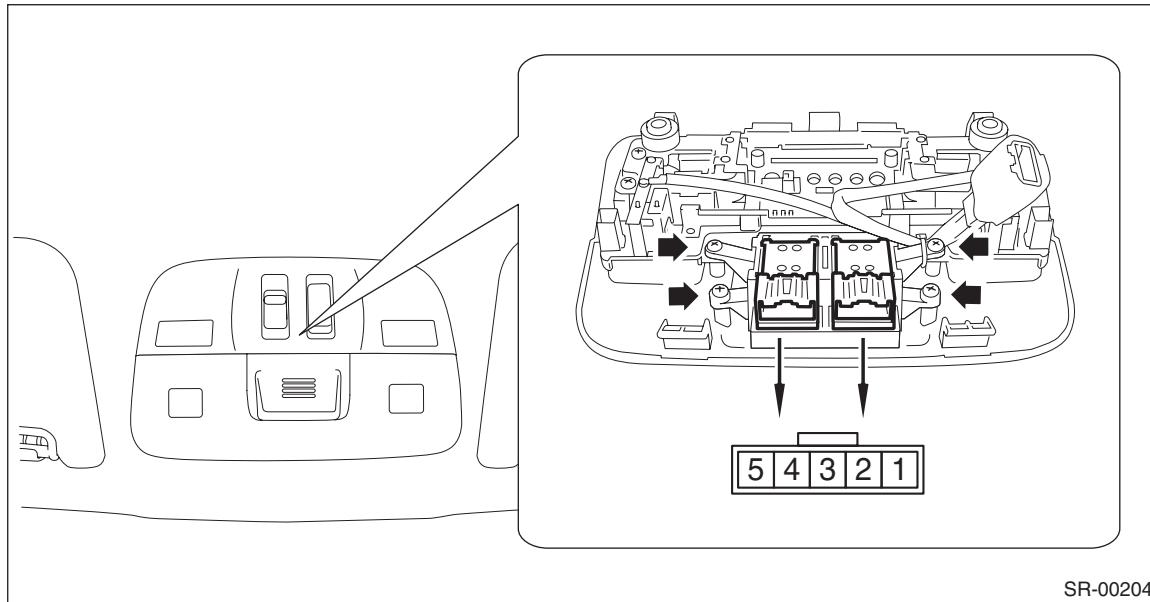

Terminal No.	Inspection conditions	Standard	Connector No.
1 — 3	Open	Less than 1 Ω	R128
4 — 3	Close	Less than 1 Ω	
1 — 3	Tilt up	Less than 1 Ω	R187
4 — 3	Tilt down	Less than 1 Ω	

- 2) Replace the sunroof switch if the inspection result is not within the standard value.