

6. Front Hood Duct

A: DISASSEMBLY

For the disassembly procedures for front hood duct, refer to “EXTERIOR BODY PANELS” section. <Ref. to EB-11, DISASSEMBLY, Front Hood.>

B: ASSEMBLY

For the assembly procedures for front hood duct, refer to “EXTERIOR BODY PANELS” section. <Ref. to EB-15, ASSEMBLY, Front Hood.>