

13. Trunk Lid Garnish

A: REMOVAL

- 1) Disconnect the ground cable from battery. <Ref. to NT-5, BATTERY, NOTE, Note.>

NOTE:


For models other than STI model, disconnect the ground terminal from battery sensor.

- 2) Remove the trim panel - trunk lid. <Ref. to EI-95, REMOVAL, Trunk Room Trim.>

- 3) Remove the garnish - trunk.

(1) Remove the nut.

(2) Disconnect the clips and connectors, and remove the garnish - trunk.

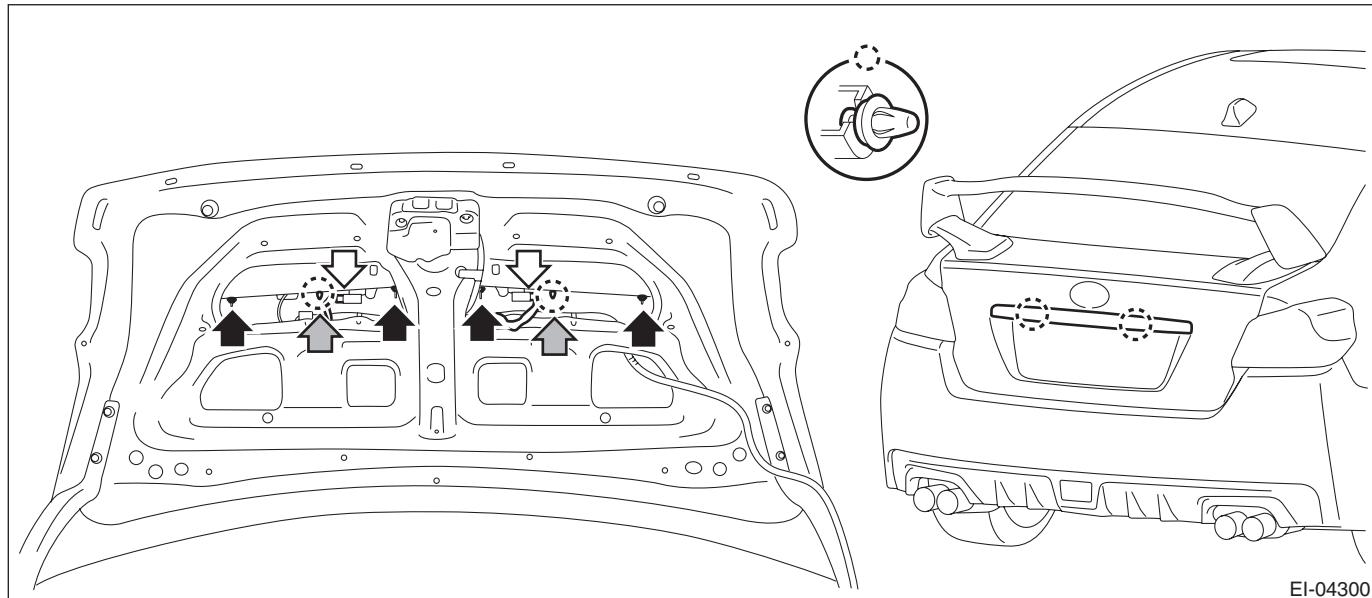

B: INSTALLATION

CAUTION:

Make sure that there is a gasket attached on the clip of the garnish assembly. If a gasket is not attached, water leakage may occur.

- 1) Install the garnish - trunk.

Tightening torque:

4.5 N·m (0.5 kgf·m, 3.3 ft-lb)

- 2) Install the trim panel - trunk lid.

- 3) Connect the battery ground terminal. <Ref. to NT-5, BATTERY, NOTE, Note.>

NOTE:

For models other than STI model, connect the ground terminal to battery sensor.