

14. Rear Spoiler

A: REMOVAL


- 1) Remove the trim panel - trunk lid. <Ref. to EI-95, REMOVAL, Trunk Room Trim.>
- 2) Detach the rear spoiler assembly.

CAUTION:


- When removing the nut, be careful not to drop the nut inside the trunk lid panel.
- Be careful not to damage the vehicle body during removal and installation.
- For model with the large rear spoiler, the reactive force of trunk lid increases when the rear spoiler is removed.

- (1) Remove the plugs (a). (Model with large rear spoiler)
- (2) Remove the nuts.
- (3) Disengage the clips and remove the rear spoiler assembly.

- Model with small rear spoiler

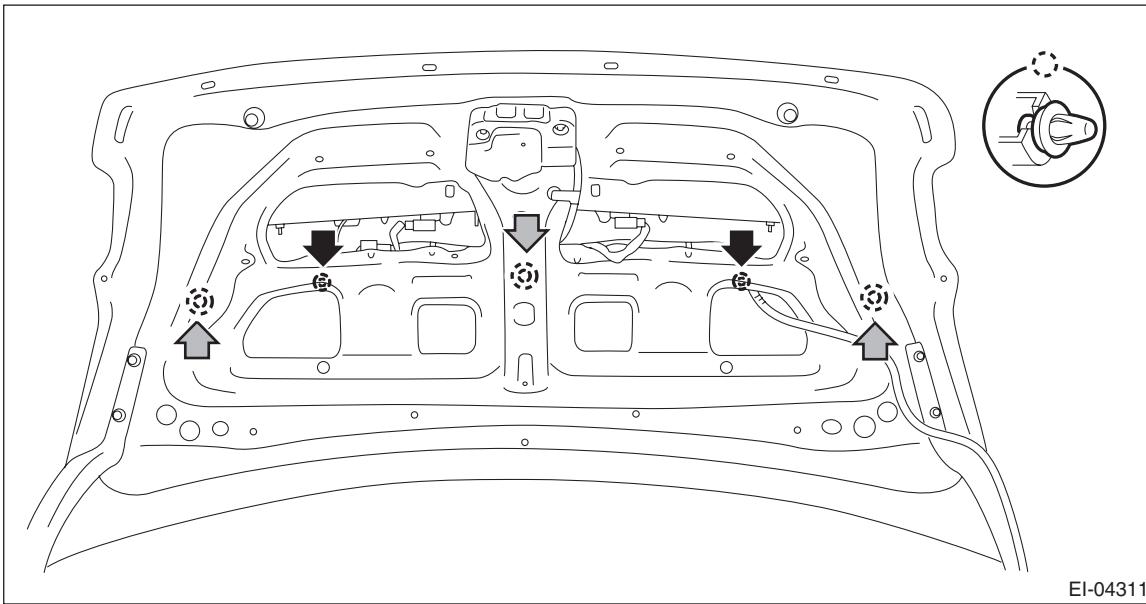

- Model with large rear spoiler

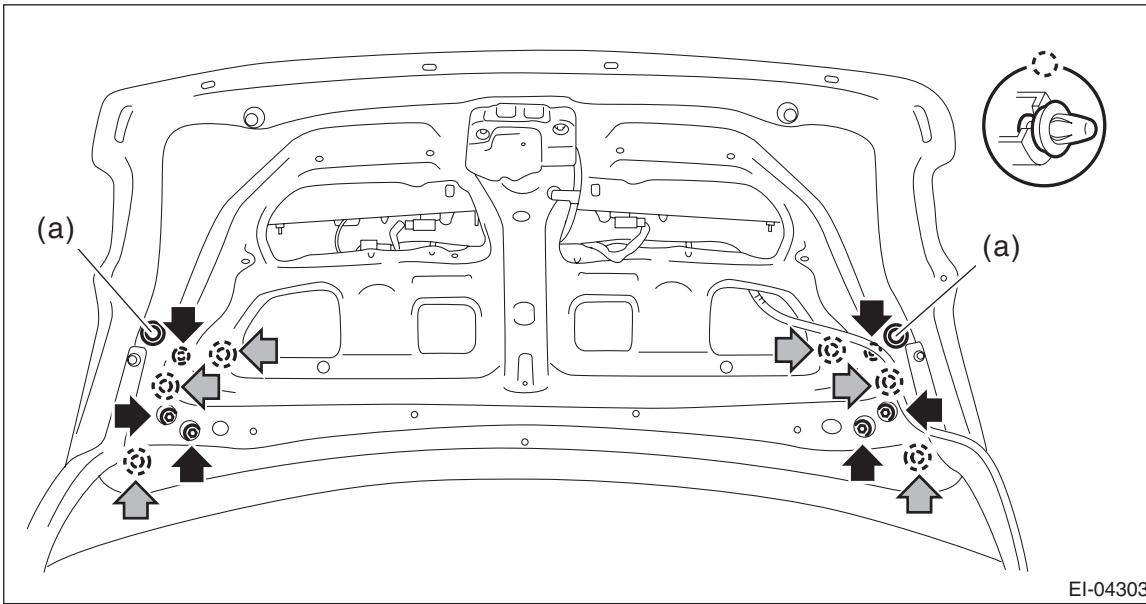

B: INSTALLATION

- 1) Clean the trunk lid and spoiler attachment surface before installation.

CAUTION:

Make sure that there is a gasket attached on the clip of the rear spoiler assembly. If a gasket is not attached, water leakage may occur.

- 2) Install the rear spoiler assembly.

Tightening torque:

7.5 N·m (0.8 kgf-m, 5.5 ft-lb)