

## 18. Instrument Panel Lower Cover


### A: REMOVAL

1) Disconnect the ground cable from battery and wait for at least 60 seconds before starting work. <Ref. to NT-5, BATTERY, NOTE, Note.>

#### NOTE:

For models other than STI model, disconnect the ground terminal from battery sensor.

2) Remove the clips, and remove the cover - instrument panel side LH.

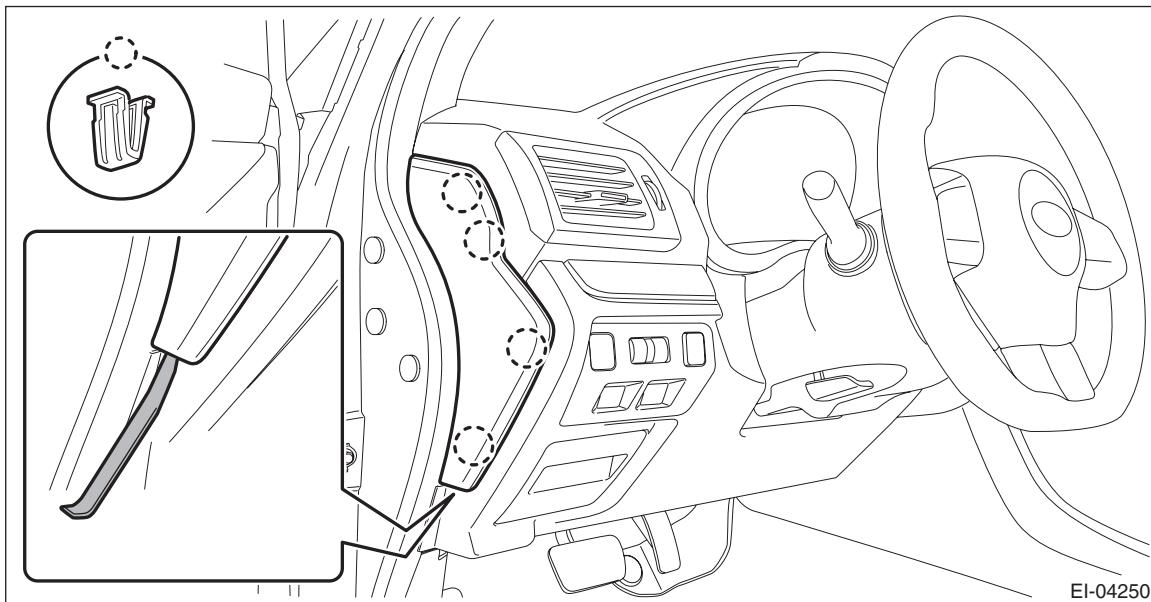


#### NOTE:

Using a plastic remover, open the cover - instrument panel side LH.

3) Remove the cover assembly - instrument panel LWR driver INN and OUT.

#### CAUTION:

**When removing the cover assembly - instrument panel LWR driver, be sure to pull it toward you. If attempting to remove by turning it upward, the claws may be damaged.**

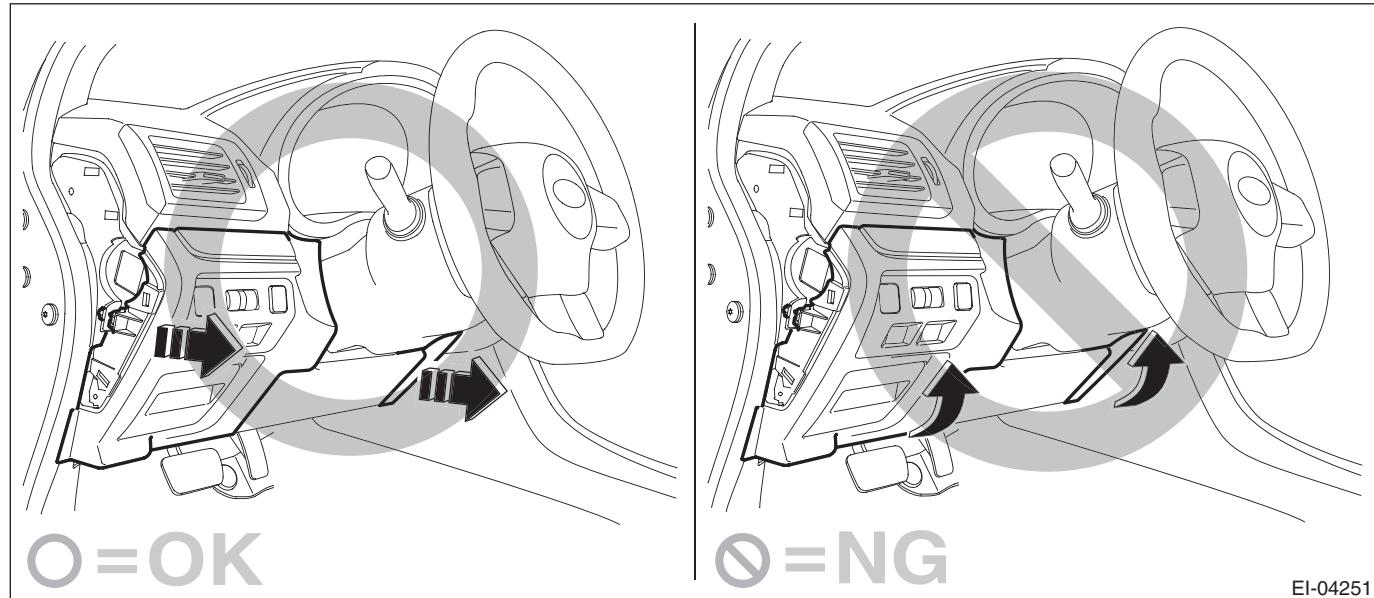


(1) Remove the screws and release the clips and claws.

# Instrument Panel Lower Cover

## EXTERIOR/INTERIOR TRIM

(2) Disconnect the harness connectors, and remove the cover assembly - instrument panel LWR driver INN and OUT.

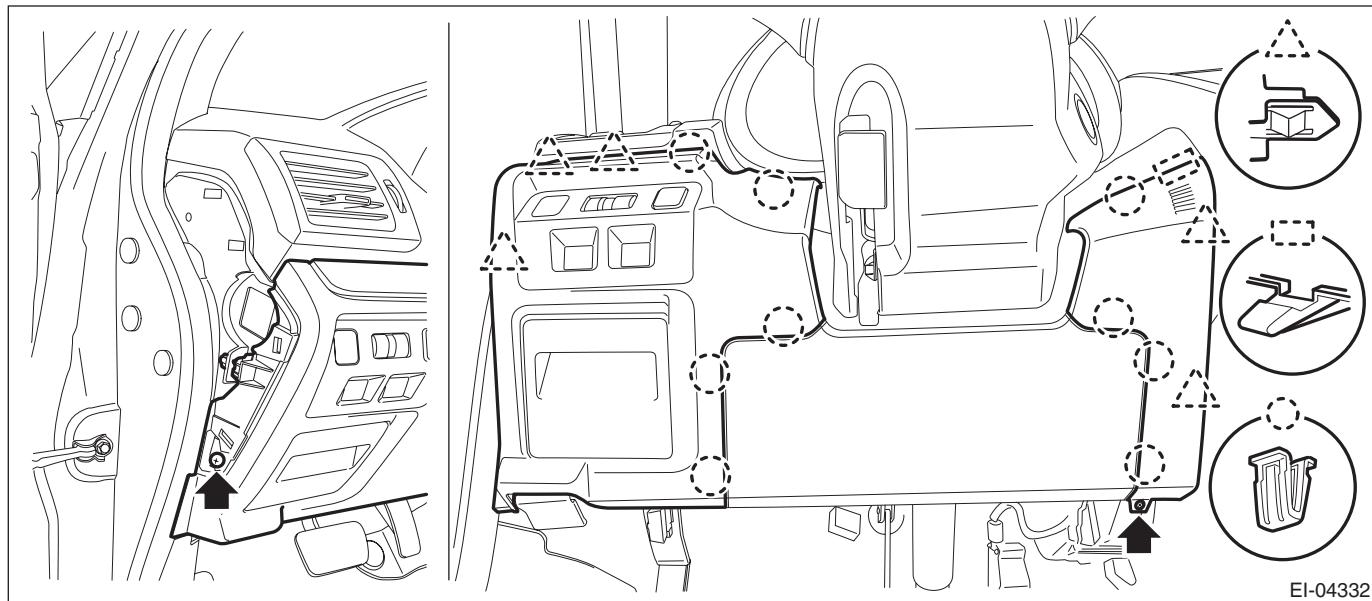

## B: INSTALLATION

- 1) Install the cover assembly - instrument panel LWR driver INN and OUT.
- 2) Install the cover - instrument panel side LH.
- 3) Connect the battery ground terminal. <Ref. to NT-5, BATTERY, NOTE, Note.>

### NOTE:

For models other than STI model, connect the ground terminal to battery sensor.