


## 29. Assist Grip

### A: REMOVAL

- 1) Pull both sides of the cap (a) using a flat tip screwdriver or similar tool wrapped with a protection tape.
- 2) Pull the assist grip toward yourself (toward the vehicle center) to remove.

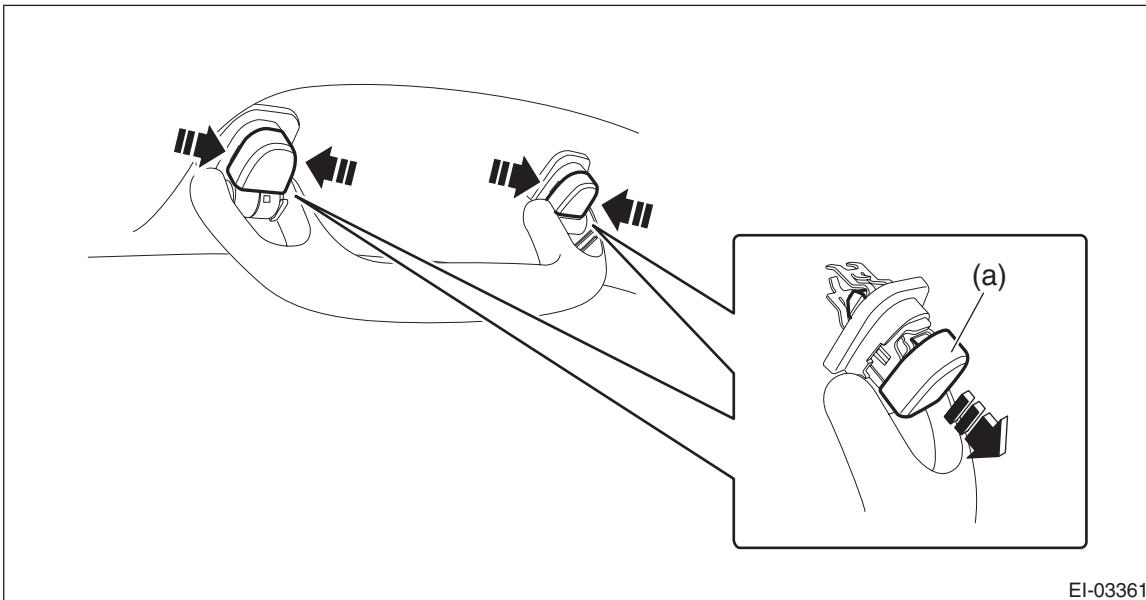

### B: INSTALLATION

- 1) Attach the assist grip.
- 2) Press in the cap.