

3. Cruise Control System

A: WIRING DIAGRAM

Refer to "Cruise Control System" in the wiring diagram.

- ENGINE TYPE FA: <Ref. to WI-137, ENGINE TYPE FA, WIRING DIAGRAM, Cruise Control System.>
- ENGINE TYPE EJ: <Ref. to WI-142, ENGINE TYPE EJ, WIRING DIAGRAM, Cruise Control System.>

B: INSPECTION

Refer to "Basic Diagnostic Procedure" of "CRUISE CONTROL SYSTEM (DIAGNOSTICS)". <Ref. to CC(diag)-2, Basic Diagnostic Procedure.>

C: NOTE

For operation procedures of each component of the cruise control system, refer to the respective section.

- Cruise control unit: <Ref. to CC-5, Cruise Control Module.>
- Cruise control command switch: <Ref. to CC-6, Cruise Control Command Switch.>
- Combination meter: <Ref. to CC-8, Combination Meter.>
- Stop light & brake switch: <Ref. to CC-9, Stop Light & Brake Switch.>
- Clutch switch: <Ref. to CC-10, Clutch Switch.>
- Inhibitor switch: <Ref. to CC-11, Inhibitor Switch.>
- Transmission control module (TCM): <Ref. to CC-12, Transmission Control Module (TCM).>
- Neutral position switch: <Ref. to CC-13, Neutral Position Switch.>