

## 4. Cruise Control Module

### A: NOTE

The control of cruise control system is carried out in engine control module (ECM). For operation procedures, refer to “FUEL INJECTION (FUEL SYSTEMS)” section.

- Except for STI model: <Ref. to FU(w/o STI)-132, Engine Control Module (ECM).>
- STI model: <Ref. to FU(STI)-56, Engine Control Module (ECM).>