


## 4. Electrical Component Location

### A: LOCATION


- XV model

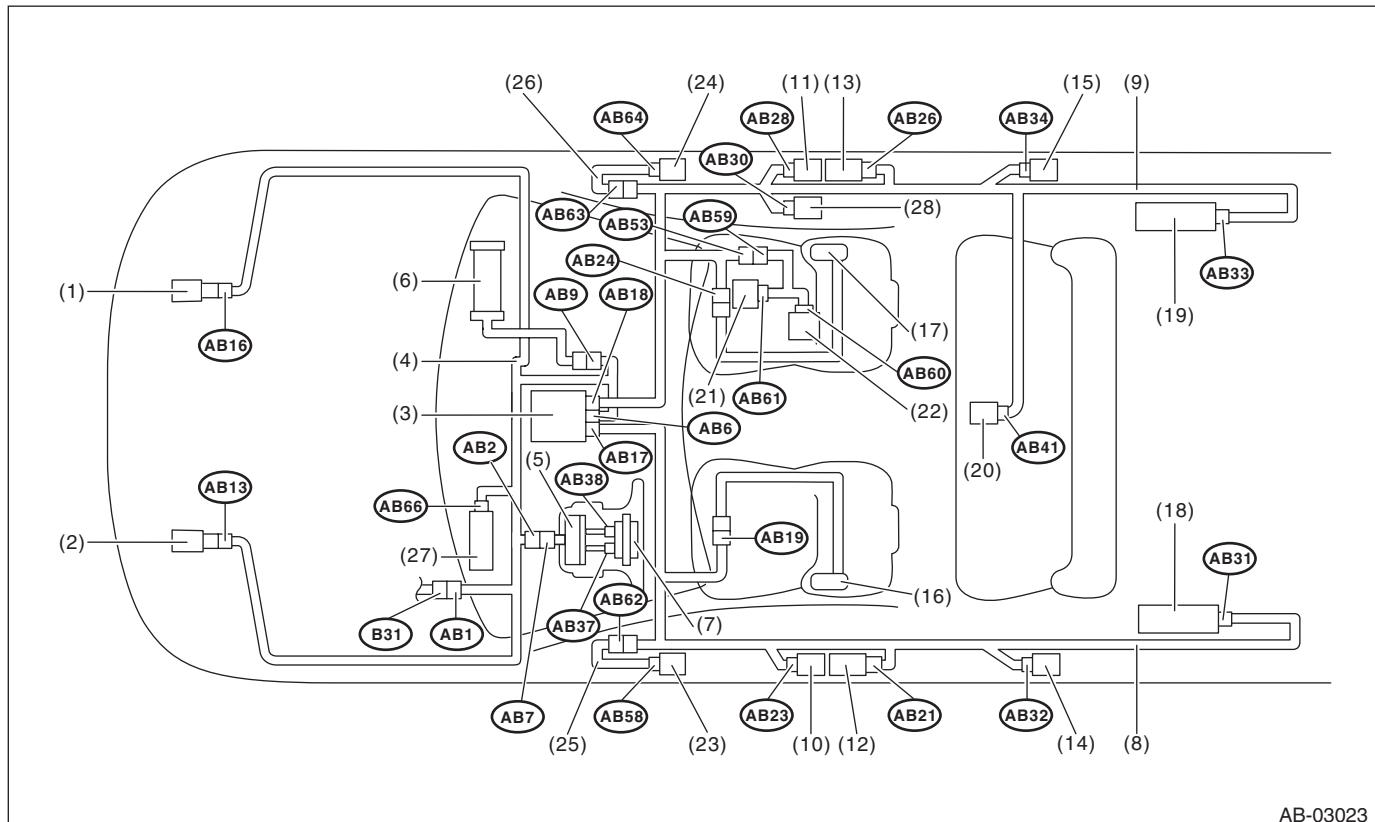

# Electrical Component Location

## AIRBAG SYSTEM (DIAGNOSTICS)

- Except for XV model

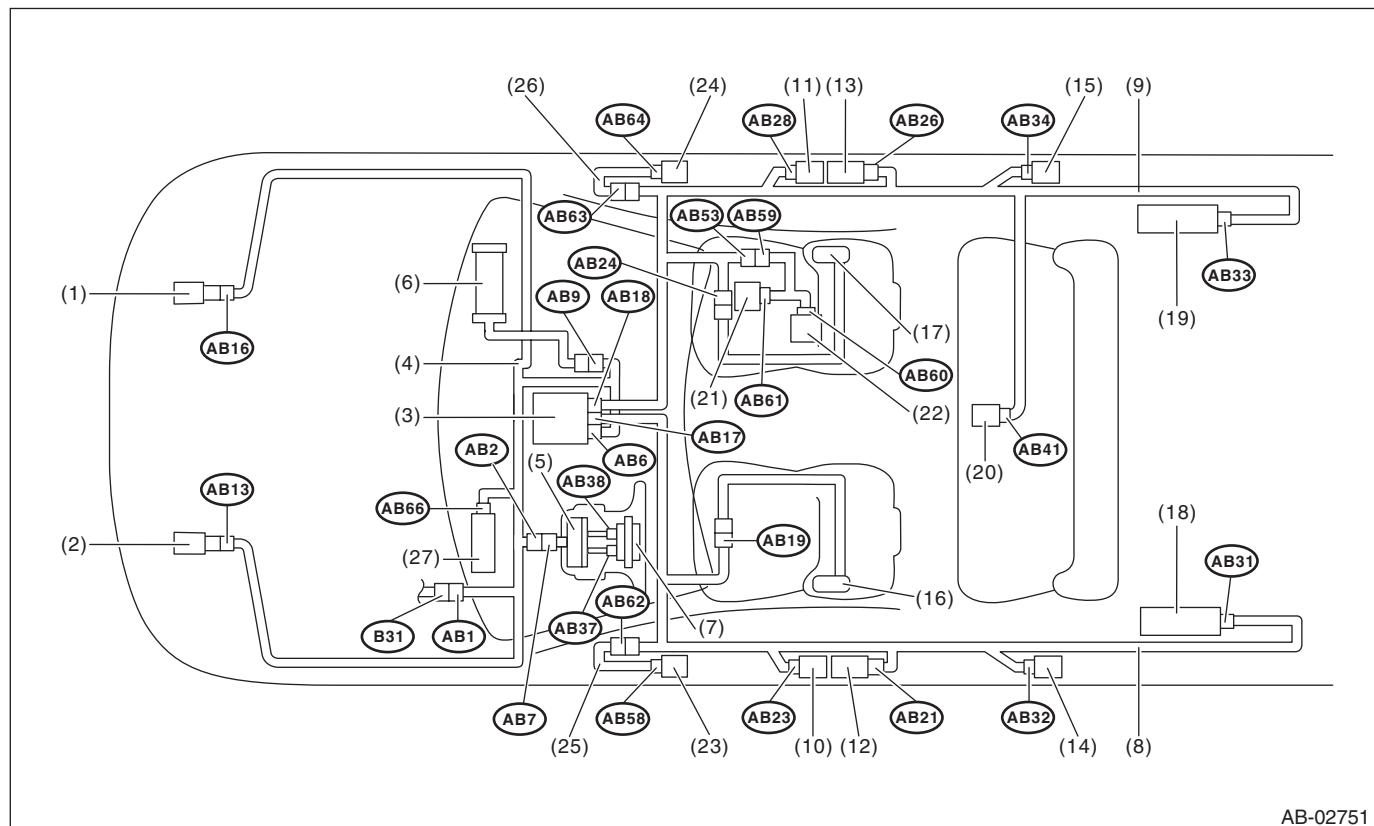

(1) Front sub sensor (RH)	(11) Side airbag sensor (RH)	(20) Satellite safing sensor
(2) Front sub sensor (LH)	(12) Seat belt pretensioner (LH)	(21) Occupant detection control module
(3) Airbag control module	(13) Seat belt pretensioner (RH)	(22) Buckle switch (RH)
(4) Airbag main harness	(14) Curtain airbag sensor (LH)	(23) Front door impact sensor (LH)
(5) Roll connector	(15) Curtain airbag sensor (RH)	(24) Front door impact sensor (RH)
(6) Passenger's airbag inflator	(16) Side airbag inflator (LH)	(25) Door harness (LH)
(7) Driver's airbag inflator	(17) Side airbag inflator (RH)	(26) Door harness (RH)
(8) Airbag rear harness (LH)	(18) Curtain airbag inflator (LH)	(27) Knee airbag inflator
(9) Airbag rear harness (RH)	(19) Curtain airbag inflator (RH)	(28) Lap seat belt pretensioner (RH)
(10) Side airbag sensor (LH)		

Connector No.	(AB1)	(AB2)	(AB6)	(AB7)	(AB9)	(AB13)	(AB16)	(AB17)	(AB18)	(AB19)	(AB21)	(AB23)
Pin	10	4	30	4	4	2	2	15 or 24	15 or 24	4	2	4
Color	Gray	Yellow	Yellow	Yellow	Black	Yellow						
Male/Female	Female	Female	Female	Male	Female	Female	Female	Female	Female	Female	Female	Female

Connector No.	(AB24)	(AB26)	(AB28)	(AB30)	(AB31)	(AB32)	(AB33)	(AB34)	(AB37)	(AB38)	(AB41)	(AB53)
Pin	4	2	4	2	2	4	2	4	2	2	2	3
Color	Yellow	Black	Yellow	Yellow	Black	Yellow	Black	Yellow	Orange	Black	Yellow	Brown
Male/Female	Female											

Connector No.	(AB58)	(AB59)	(AB60)	(AB61)	(AB62)	(AB63)	(AB64)	(AB66)				
Pin	2	3	2	10	2	2	2	2				
Color	Yellow	Brown	Yellow	Black	Yellow	Yellow	Yellow	Black				
Male/Female	Female	Male	Male	Female	Female	Female	Female	Female				