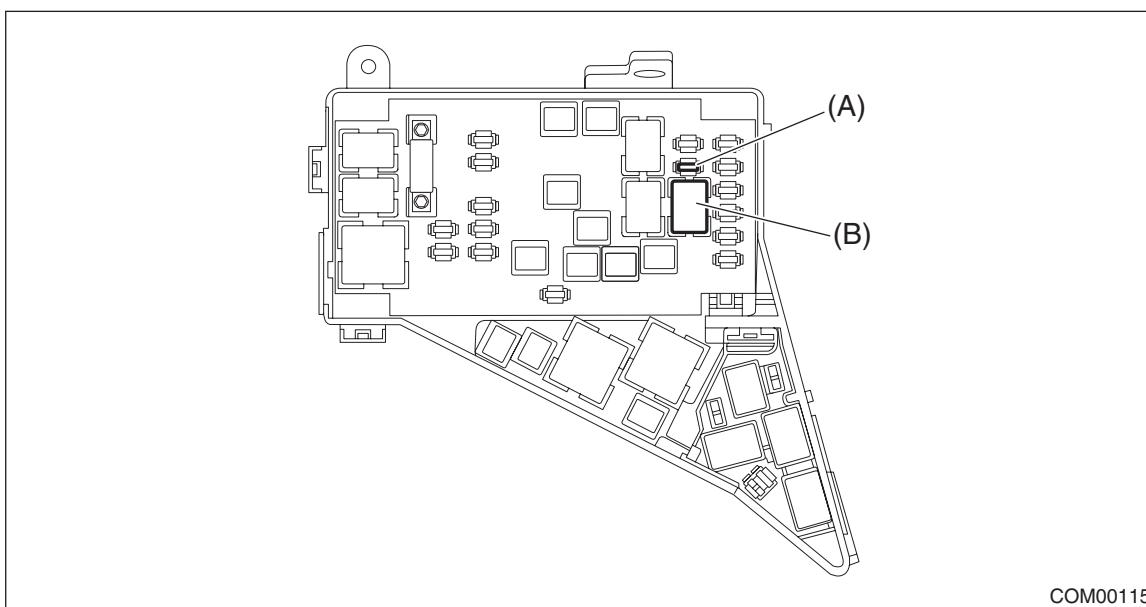


2. Relay and Fuse

A: LOCATION



COM00115

Main fuse box	Fuse 15 A (horn ASSY - Hi, Lo)	(A)
	Horn relay	(B)

NOTE:

For other related fuses, refer to the wiring diagram.

- Gasoline engine model <Ref. to WI(w/o HEV)-16, Power Supply Circuit.>
- HEV model <Ref. to WI(HEV)-21, Power Supply Circuit.>

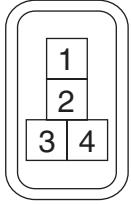
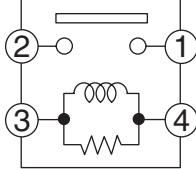
B: INSPECTION

1. CHECK FUSE

- 1) Remove the fuse and check visually.
- 2) If the fuse is blown out, replace the fuse.

2. CHECK RELAY

- 1) Check the resistance between relay terminals.

Terminal No.	Inspection conditions	Specification	Circuit
1 — 2	Always	1 MΩ or more	
1 — 2	Apply battery voltage between 4 — 3 terminals.	Less than 1 Ω	

SR-00180

- 2) Replace the relay if the inspection result is not within the standard value.