

3. Horn System

A: WIRING DIAGRAM

Refer to "Horn System" in the wiring diagram.

- Gasoline engine model <Ref. to WI(w/o HEV)-142, WIRING DIAGRAM, Horn System.>
- HEV model <Ref. to WI(HEV)-150, WIRING DIAGRAM, Horn System.>

B: INSPECTION

Symptoms	Inspection steps
Horn does not sound	<ol style="list-style-type: none">1. Check the fuse.2. Check the horn relay.3. Check the role connector.4. Check the horn switch.5. Check the horn assembly.6. Check the harness.

C: NOTE

For operation procedures of each component of the horn system, refer to the respective section.

- Horn ASSY: <Ref. to COM-5, Horn.>
- Horn switch: <Ref. to COM-8, Horn Switch.>