


4. Horn

A: REMOVAL


CAUTION:

Do not remove the bumper face - front when removing the horn, in order to prevent damaging the claws of the bracket - front bumper corner and the bracket - front bumper side.

- 1) Disconnect the ground cable from battery.
- 2) Remove the clip, and remove the bracket - grille.

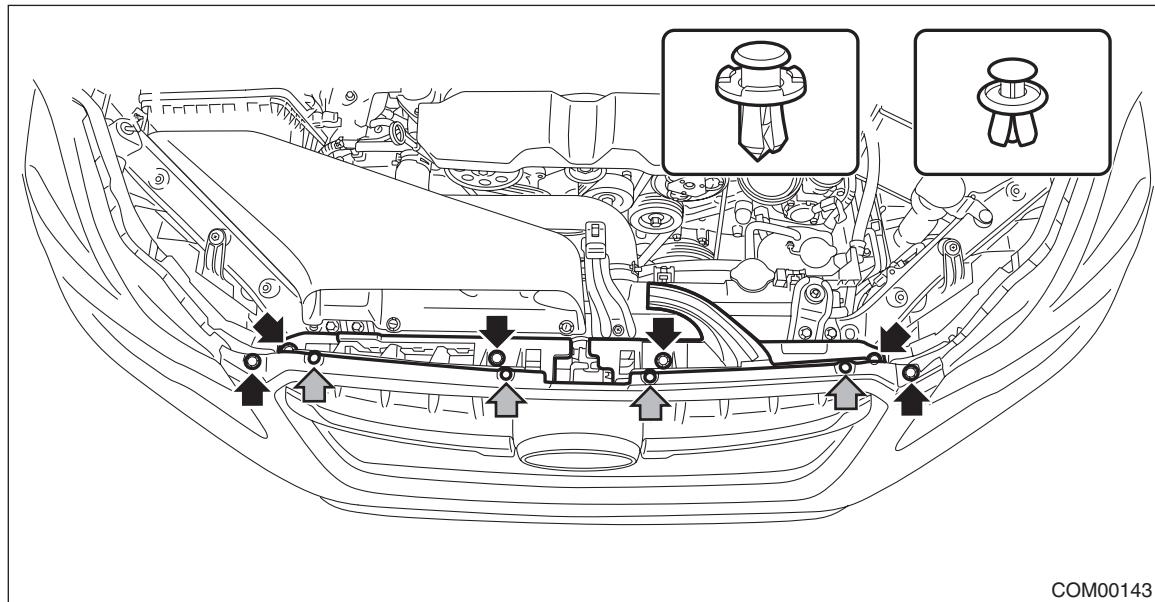

- 3) Remove the horn assembly - Lo.
 - (1) Disconnect the connector.
 - (2) Remove the horn bracket mounting bolt, and remove the horn assembly - Lo.

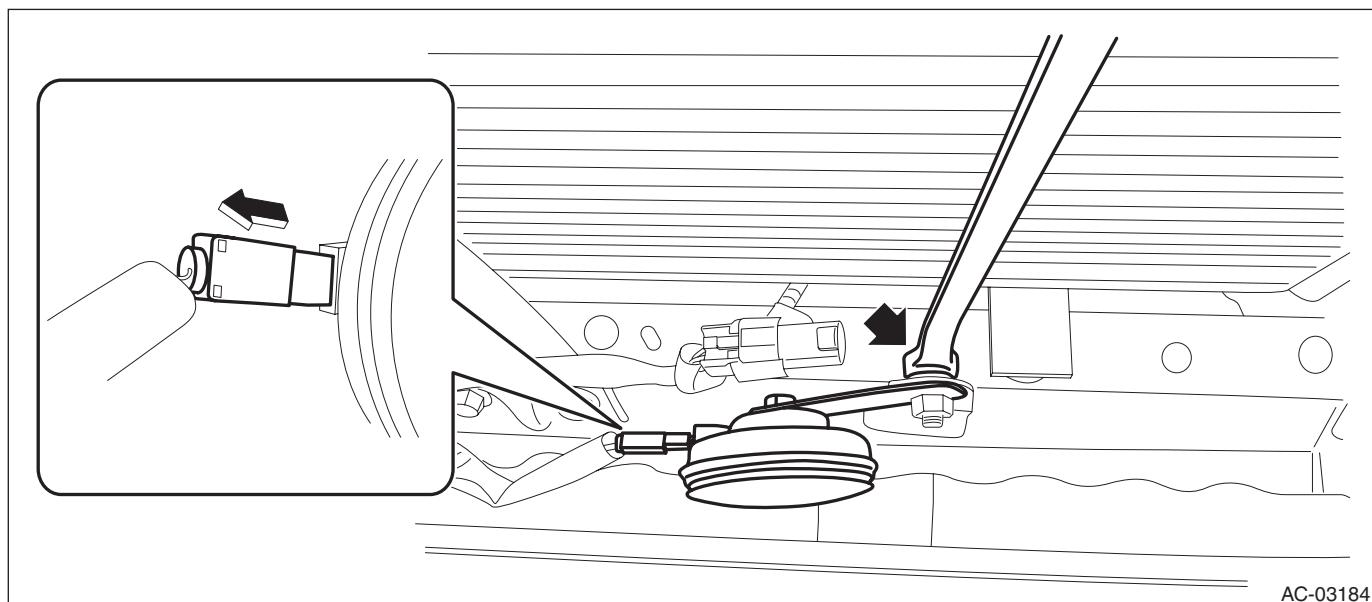


Horn

COMMUNICATION SYSTEM

4) Remove the horn assembly - Hi.

(1) Remove the clips, and turn over the front side of the mud guard - front.

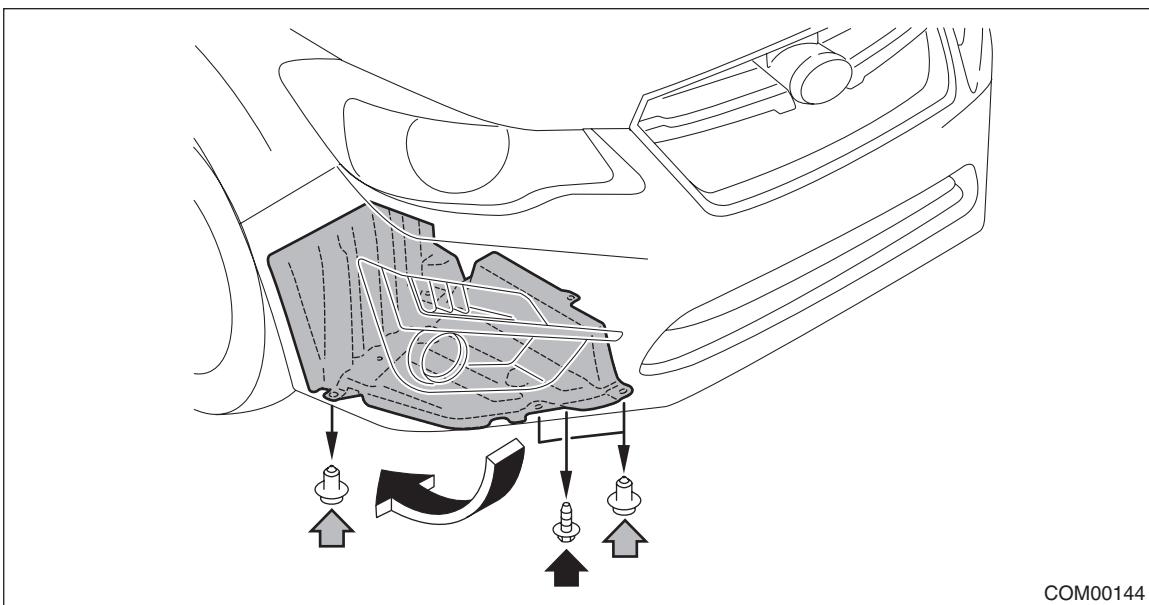


(2) Disconnect the horn connector.

(3) Remove the horn bracket mounting bolt, and remove the horn assembly - Hi.

CAUTION:


The resistor may become hot. Be careful not to burn yourself.

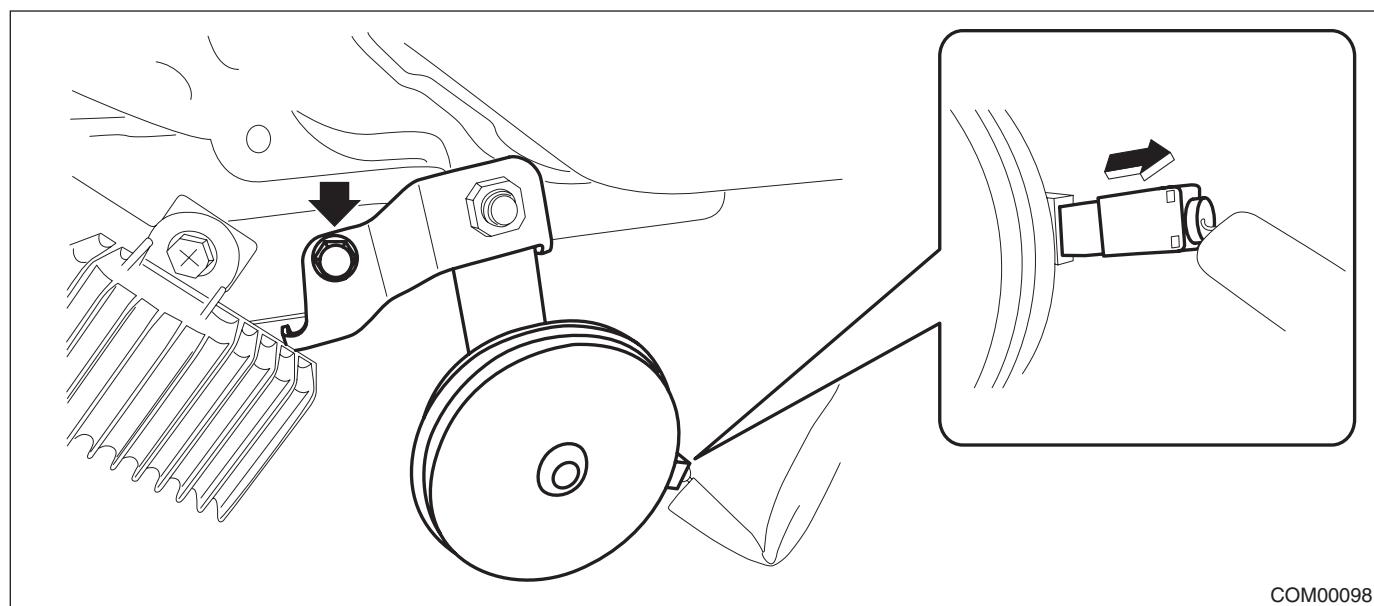

B: INSTALLATION

CAUTION:

Install so that the front end of the under cover (b) comes inside the bumper face - front (a), and the front end of the mud guard (c) comes outside the bumper face - front (a).

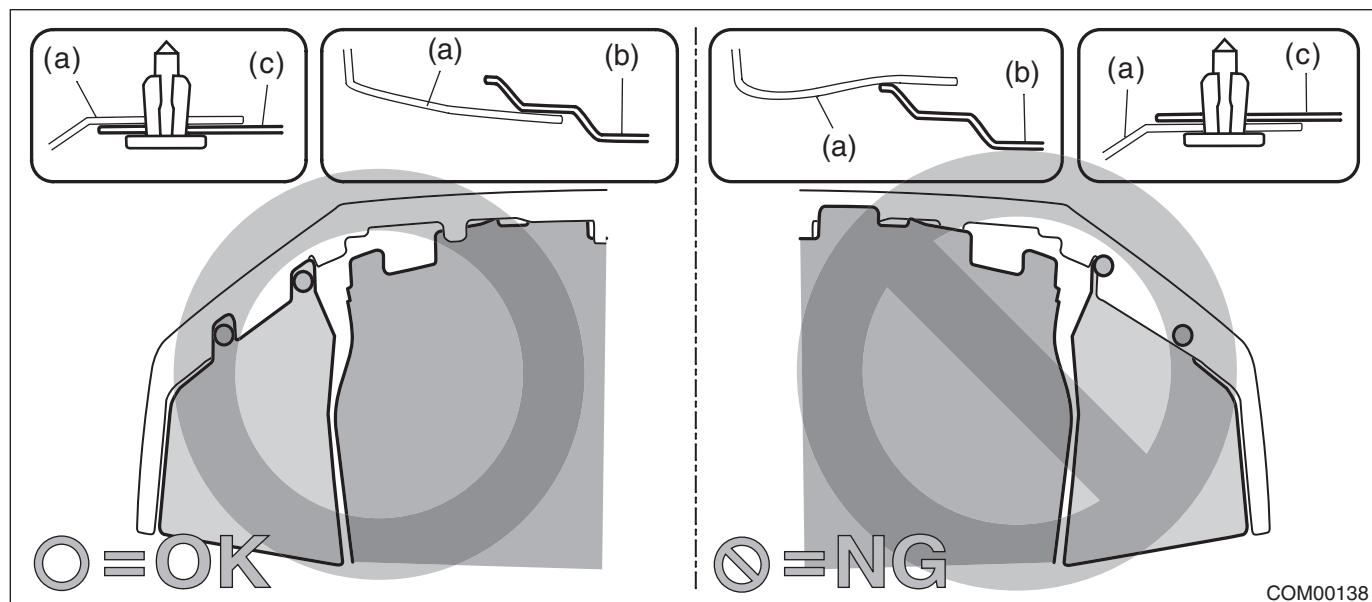

COM00138

Install each part in the reverse order of removal.

Tightening torque:


Horn assembly - Hi: 13 N·m (1.33 kgf-m, 9.6 ft-lb)

Horn assembly - Lo: 18 N·m (1.84 kgf-m, 13.3 ft-lb)

C: INSPECTION

1. CHECK HORN ASSEMBLY

- 1) Remove the horn assembly (Hi & Lo). <Ref. to COM-5, REMOVAL, Horn. >
- 2) Check the horn sounds when applying the battery voltage to the horn assembly.

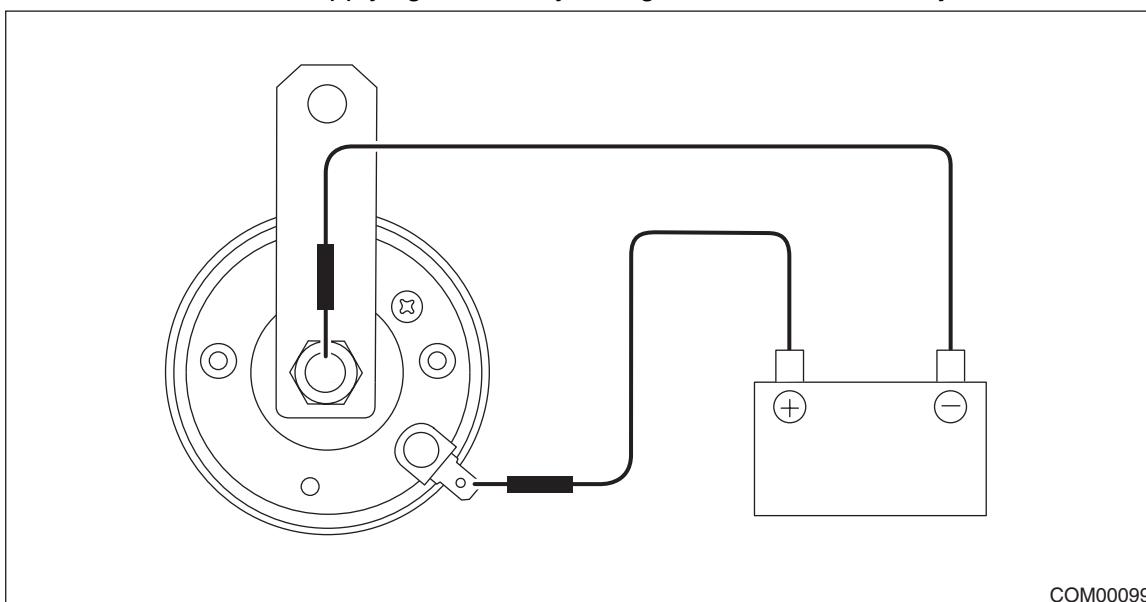

COM00099

Terminal No.	Inspection conditions	Specification
Horn terminal (+) — Horn case (-)	Connect battery to the terminals	Sounds

- 3) If it does not operate normally, replace the horn assembly.