

12. GPS Antenna

A: REMOVAL

- 1) Disconnect the ground cable from battery. <Ref. to NT-5, BATTERY, NOTE, Note.>

NOTE:

For the 12 volt engine restart battery of HEV model, disconnect the ground terminal from 12V engine restart battery sensor.


- 2) Remove the combination meter assembly. <Ref. to IDI-20, REMOVAL, Combination Meter.>
- 3) Remove the center grille assembly. <Ref. to AC-104, CENTER GRILLE ASSEMBLY, REMOVAL, Air Vent Grille.>
- 4) Remove the navigation assembly. <Ref. to ET-12, REMOVAL, Audio.>
- 5) Remove the GPS antenna assembly.

(1) Tie a string to the GPS antenna assembly harness connector on the navigation unit side.

NOTE:

A string makes operation easier during installation.

(2) Remove the screw and harness clamp, and pull out the GPS antenna assembly harness from the combination meter side.

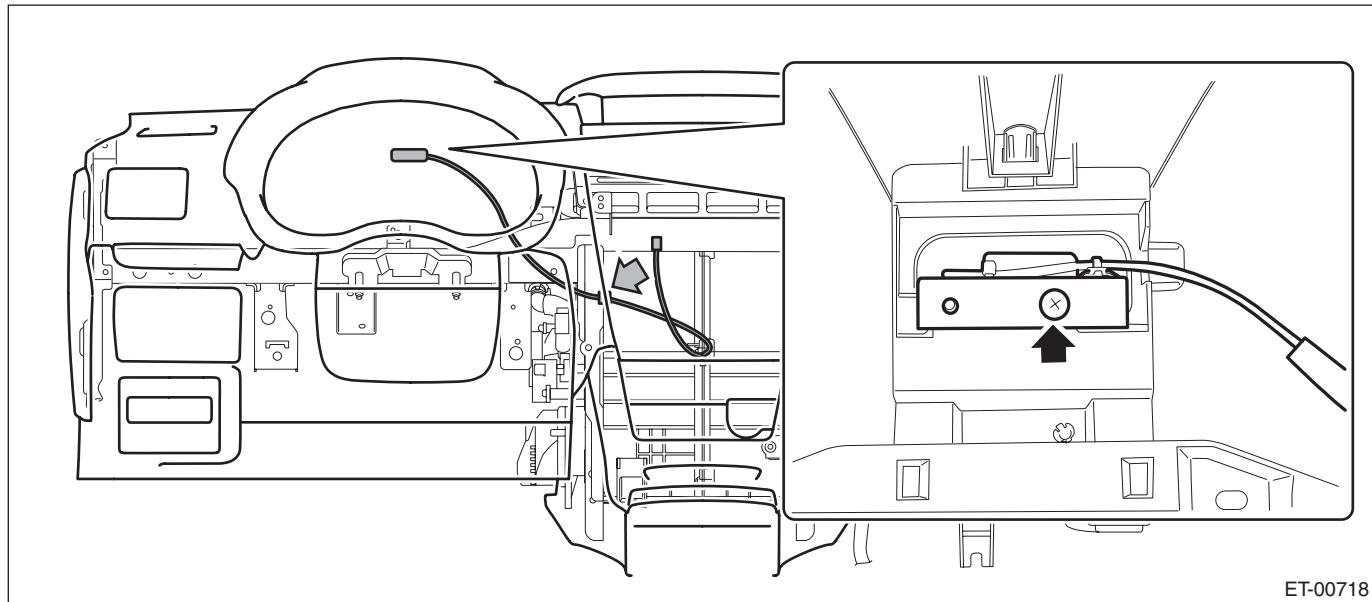

- (3) When the GPS antenna assembly is pulled out, remove the string attached to the connector in step (1).

B: INSTALLATION

CAUTION:

After installing the center grille assembly, check that the air vent grille of the center grille assembly is inserted correctly into the air vent duct.

Install each part in the reverse order of removal.