

15. Rear Accessory Power Supply Socket

A: WIRING DIAGRAM

Refer to "Rear Accessory Power Supply Socket System" in the wiring diagram.

- Gasoline engine model: <Ref. to WI(w/o HEV)-184, WIRING DIAGRAM, Rear Accessory Power Supply Socket System.>
- HEV model: <Ref. to WI(HEV)-186, WIRING DIAGRAM, Rear Accessory Power Supply Socket System.>

B: REMOVAL

- 1) Disconnect the ground cable from battery. <Ref. to NT-5, BATTERY, NOTE, Note.>


NOTE:

For the 12 volt engine restart battery of HEV model, disconnect the ground terminal from 12V engine restart battery sensor.

- 2) Remove the console box assembly. <Ref. to EI-81, REMOVAL, Console Box.>

- 3) While releasing the claw inside, press it in from the rear to remove the socket assembly.

(1) While releasing the claw inside, press it in from the rear to remove the socket assembly.

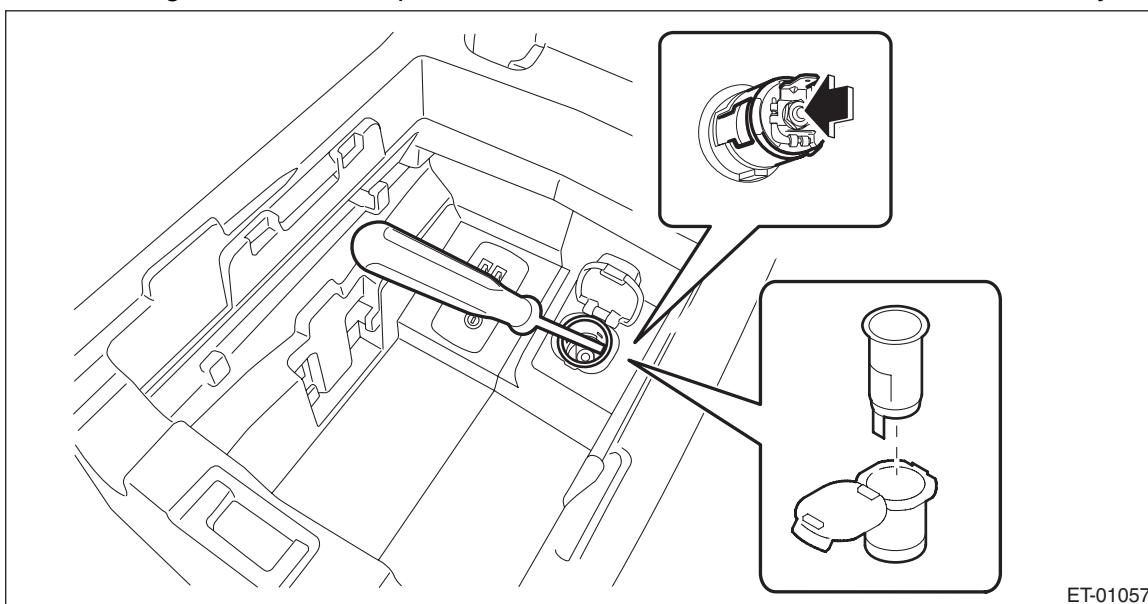


(2) Remove the cap - socket.

C: INSTALLATION

Install each part in the reverse order of removal.

NOTE:

Align the grooves of the holder with the claws of accessory power supply socket.

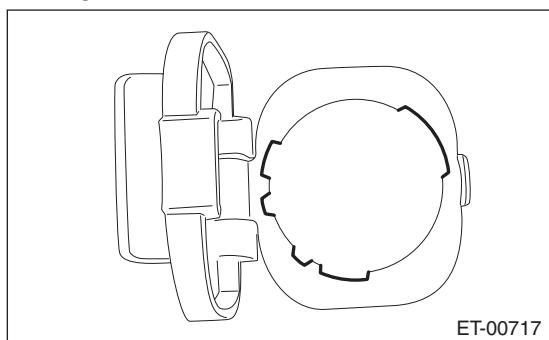

Tightening torque:

Console box assembly: 6.5 N·m (0.66 kgf-m, 4.8 ft-lb)